



www.skyjacker.com

# 2018 Jeep Wrangler JL 3.5"- 4" Suspension Lift Installation Instructions



### Required Tools List:

- Safety Glasses
- Metric & Standard Sockets / Wrenches
- Pliers
- Hex Key Sockets / Wrenches
- Grinder
- Floor Jack
- Jack Stands
- Measuring Tape
- Torque Wrench



Before beginning the installation, read these instructions & the enclosed driver's WARNING NOTICE thoroughly & completely. Also affix the WARNING decal in the passenger compartment in clear view of all occupants. Please refer to the Parts List to insure that all parts & hardware are received prior to disassembly of the vehicle. If any parts are found to be missing, contact SKYJACKER® Customer Service at 318-388-0816 to obtain the needed items. If you have any questions or reservations about installing this product, contact SKYJACKER® Technical Assistance at 318-388-0816.

Make sure you park the vehicle on a level concrete or asphalt surface. Many times a vehicle is not level (side-to-side) from the factory, but is usually not noticed until a lift kit has been installed which makes the difference more visible. Using a measuring tape, measure the front & rear (both sides) from the ground up to the center of the fender opening above the axle. Record this information below for future reference.

Driver Side Front: \_\_\_\_\_

Passenger Side Front: \_\_\_\_\_

Driver Side Rear: \_\_\_\_\_

Passenger Side Rear: \_\_\_\_\_

### Important Notes:

- The drag link must be adjusted to center the steering wheel before the vehicle is driven. Failure to do so will cause computer errors, odd handling characteristics, & poor performance.
- If larger tires (10% more than the OEM diameter) are installed, speedometer recalibration will be necessary. Contact your local Jeep dealer or an authorized dealer for details.
- After installation, a qualified alignment facility is required to align the vehicle to the OEM specifications.

## Component Box Breakdown:

### Part #: JL35BPBLT / JL35BPMLT / JL35RBPBLT / JL35RBPMLT (2 Door Models) JL40BPBLT / JL40BPMLT / JL40RBPBLT / JL40RBPMLT (4 Door Models)

| Item #      | Description   | Qty | Item #        | Description   | Qty |
|-------------|---|-----|---------------|---|-----|
| JL12FS-DR   | JL FRONT COIL SPRING<br>(Included With JL35BP Kits)                 | 2   | JL34RS-DR-R   | JL REAR PASS COIL SPRING<br>(Included With JL40RBP Kits)  | 1   |
| JL12RS-DR-L | JL REAR DRIVER COIL SPRING<br>(Included With JL35BP Kits)           | 1   | JLFTBA18-B    | JL ADJUST FRONT TRACK BAR                                 | 1   |
| JL12RS-DR-R | JL REAR PASS COIL SPRING<br>(Included With JL35BP Kits)             | 1   | HD34X34DTB    | 3/4 ROD END   | 1   |
| JL23FS-DR   | JL FRONT COIL SPRING<br>(Included With JL35RBP & JL40BP Kits)       | 2   | 34RFTJN       | 3/4 RIGHT HAND JAM NUT                                    | 1   |
| JL23RS-DR-L | JL REAR DRIVER COIL SPRING<br>(Included With JL35RBP & JL40BP Kits) | 1   | H-BOX JL40BP  | JL HARDWARE BOX<br>(Included With JL35BP & JL40BP Kits)   | 1   |
| JL23RS-DR-R | JL REAR PASS COIL SPRING<br>(Included With JL35RBP & JL40BP Kits)   | 1   | H-BOX JL40RBP | JL HARDWARE BOX<br>(Included With JL35RBP & JL40RBP Kits) | 1   |
| JL34FS-DR   | JL FRONT COIL SPRING<br>(Included With JL40RBP Kits)                | 2   | B8387 (Front) | BLACK MAX SHCK W/BLK BOOT                                 | 2   |
| JL34RS-DR-L | JL REAR DRIVER COIL SPRING<br>(Included With JL40RBP Kits)          | 1   | B8389 (Rear)  | BLACK MAX SHCK W/BLK BOOT                                 | 2   |
|             |   |     | M9387 (Front) | M95 MONOTUBE SHOCK  | 2   |
|             |   |     | M9389 (Rear)  | M95 MONOTUBE SHOCK  | 2   |

## Hardware Box Breakdown:

### Part # H-BOX JL40BP (Included With JL35BP & JL40BP Kits)

| Item #    | Description                | Qty | Item #     | Description                 | Qty |
|-----------|----------------------------|-----|------------|-----------------------------|-----|
| ABSS2535  | JL FRONT BUMP STOP SPACER  | 2   | HB-JL40BSS | HDWR BAG: JL BUMP STOP SPC  | 1   |
| JL40RBS-S | JL REAR BUMP STOP SPACER   | 2   | HB-JLBLE4  | HDWR BAG: JL BRAKE LINE EXT | 1   |
| JLRTBU-B  | JL UPR REAR TRACK BAR BRKT | 1   | HB-JLFTBB  | HDWR BAG: JL TRACK BAR      | 1   |
| CAM700    | JL UPPER REAR CAM BOLTS    | 1   | HB-JLRTBU  | HDWR BAG: JL UPR REAR TRK   | 1   |
| CAM800    | JL FRONT LOWER CAM BOLTS   | 1   | HB-JLSBE   | HDWR BAG: JL FRONT END LINK | 1   |
| SBE4048-L | JL FRONT SWAY BAR END LINK | 2   | HB-JLSBER  | HDWR BAG: JL REAR END LINK  | 1   |
| SBE4058-L | JL REAR SWAY BAR END LINK  | 2   | I-JL3540BP | INST SHEET: JL40BP          | 1   |

### Part # H-BOX JL40RBP (Included With JL35RBP & JL40RBP Kits)

| Item #    | Description                | Qty | Item #     | Description                 | Qty |
|-----------|----------------------------|-----|------------|-----------------------------|-----|
| ABSS2535  | JL FRONT BUMP STOP SPACER  | 2   | HB-JL40BSS | HDWR BAG: JL BUMP STOP SPC  | 1   |
| JL40RBS-S | JL REAR BUMP STOP SPACER   | 2   | HB-JLBLE4  | HDWR BAG: JL BRAKE LINE EXT | 1   |
| JLRTBU-B  | JL UPR REAR TRACK BAR BRKT | 1   | HB-JLFTBB  | HDWR BAG: JL TRACK BAR      | 1   |
| CAM700    | JL UPPER REAR CAM BOLTS    | 1   | HB-JLRTBU  | HDWR BAG: JL UPR REAR TRK   | 1   |
| CAM800    | JL FRONT LOWER CAM BOLTS   | 1   | HB-JLSBE   | HDWR BAG: JL FRONT END LINK | 1   |
| SBE4048-L | JL FRONT SWAY BAR END LINK | 2   | HB-JLSBER  | HDWR BAG: JL REAR END LINK  | 1   |
| SBE4068-L | JL REAR SWAY BAR END LINK  | 2   | I-JL3540BP | INST SHEET: JL40BP          | 1   |

## Hardware Bag Breakdown:

### Part # HB-JL40BSS

| Item #   | Description               | Qty |
|----------|---------------------------|-----|
| 516X1FTB | 5/16 X 1 FINE THREAD BOLT | 4   |
| 516SAEW  | 5/16 SAE WASHER           | 8   |
| 516FTN   | 5/16 FINE THREAD LOCK NUT | 4   |

| Item #    | Description                  | Qty |
|-----------|------------------------------|-----|
| 38X412BHB | 3/8 X 4 1/2 BUTTON HEAD BOLT | 2   |
| 38SAEW    | 3/8 SAE WASHER               | 2   |
| 38CTN     | 3/8 COARSE THREAD LOCK NUT   | 2   |

### Part # HB-JLBLE4

| Item #  | Description              | Qty |
|---------|--------------------------|-----|
| JL4BE-S | JL BRAKE LINE BRACKET    | 4   |
| 14X1FTB | 1/4 X 1 FINE THREAD BOLT | 4   |

| Item # | Description              | Qty |
|--------|--------------------------|-----|
| 14SAEW | 1/4 SAE WASHER           | 8   |
| 14FTN  | 1/4 FINE THREAD LOCK NUT | 4   |

### Part # HB-JLFTBB

| Item # | Description                | Qty |
|--------|----------------------------|-----|
| JLFTBB | JL TRK BAR ROD END BUSHING | 2   |

### Part # HB-JLRTBU

| Item #  | Description              | Qty |
|---------|--------------------------|-----|
| 12X5FTB | 1/2 X 5 FINE THREAD BOLT | 1   |
| 12SAEW  | 1/2 SAE WASHER           | 2   |
| 12FTN   | 1/2 FINE THREAD LOCK NUT | 1   |

| Item #     | Description                   | Qty |
|------------|-------------------------------|-----|
| 916X114FTB | 9/16 X 1 1/4 FINE THREAD BOLT | 2   |
| 916SAEW    | 9/16 SAE WASHER               | 4   |
| 916FTN     | 9/16 FINE THREAD LOCK NUT     | 2   |

### Part # HB-JLSBE

| Item #   | Description                 | Qty |
|----------|-----------------------------|-----|
| HG5815-K | HOURGLASS 5/8 BUSHING / BLK | 4   |
| 141509   | ES25 SLEEVE                 | 4   |
| 12X70MMB | 12MM X 70MM METRIC BOLT     | 2   |

| Item #  | Description           | Qty |
|---------|-----------------------|-----|
| 716USSW | 7/16 USS FLAT WASHER  | 4   |
| 12MMN   | 12 MM METRIC LOCK NUT | 2   |


### Part # HB-JLSBER

| Item #   | Description                 | Qty |
|----------|-----------------------------|-----|
| HG5815-K | HOURGLASS 5/8 BUSHING / BLK | 4   |
| 141509   | ES25 SLEEVE                 | 4   |
| 12X65BHB | 12MM X 65MM BUTTON HD BLT   | 2   |

| Item #  | Description           | Qty |
|---------|-----------------------|-----|
| 716USSW | 7/16 USS FLAT WASHER  | 4   |
| 12MMN   | 12 MM METRIC LOCK NUT | 2   |

## Front Installation:

1. With the vehicle on flat level ground, set the emergency brake, & block the rear tires / wheels.
2. Raise the front of the vehicle, support the frame rails, & front differential using jack stands.
3. Remove the front tires / wheels using a 22mm socket. (See Photo # 1)

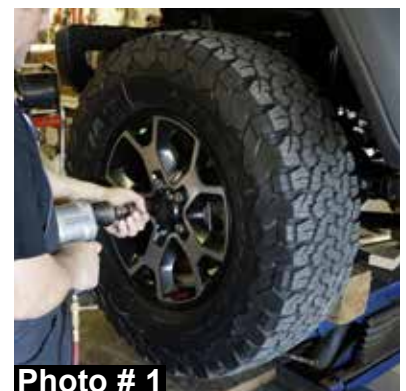

**Photo # 1**

4. Remove the OEM front skid plate using a 13mm socket / wrench. (See Photo # 2)
5. Remove the OEM front sway bar end links using a 6mm hex key socket / wrench & 18mm socket / wrench. (See Photo # 3)
6. Remove the OEM front track bar using a 21mm socket / wrench. (See Photo # 4)
7. Disconnect the OEM drag link from the OEM pitman arm using a 21mm socket / wrench. (See Photo # 5)
8. Remove the OEM front shocks using a 18mm socket / wrench. (See Photo # 6)
9. Disconnect the OEM front brake line brackets from the OEM front lower control arms using a 15mm socket / wrench. (See Photo # 7)
10. Mark the location of the OEM front driveshaft / flange at the front differential & disconnect using a 15mm socket / wrench. (See Photo # 8)
11. Disconnect the wiring harness from the passenger side OEM front upper control arm using pliers.



**Photo # 2**




**Photo # 3**



**Photo # 4**



**Photo # 5**

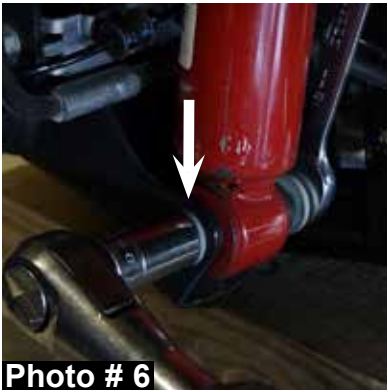

**Photo # 6**



**Photo # 7**



**Photo # 8**



12. Disconnect the wiring harness from the OEM 4wd acuator. (See Photo # 9)
13. Disconnect the OEM vent hose from the front differential using pliers.
14. While checking for appropriate slack in ABS lines, brake lines, differential vent hose, & etc. Lower the front differential & remove the OEM front coil springs.
15. Install the new Skyjacker front coil springs & new Skyjacker front bump stop spacers to the OEM front bump stop pads using the supplied 3/8" x 4 1/2" button head bolts, 3/8" washers, 3/8" nuts, a 7/32" hex key socket / wrench, & 9/16" socket / wrench. (See Photo # 10) **Note:** Be sure when installing the new front coil springs that the tabs of each OEM front upper coil spring isolator are aligned with the holes of the OEM front upper coil spring mounts.
16. Raise the front differential in order to load the new Skyjacker front coil springs & connect the OEM front driveshaft using the OEM hardware & a 15mm socket / wrench. (See Photo # 8)
17. Connect the OEM drag link to the OEM pitman arm using the OEM hardware & a 21mm socket / wrench. (See Photo # 5)
18. Connect the OEM vent hose to the front differential using pliers.
19. Connect the wiring harness to the OEM 4wd acuator. (See Photo # 9)
20. Connect the wiring harness to the passenger side OEM front upper control arm.
21. Install the new Skyjacker front brake line brackets to the OEM front lower control arms using the OEM hardware & a 15mm socket / wrench. (See Photo # 11)
22. Connect the OEM front brake line brackets to the new Skyjacker front brake line brackets using the supplied 1/4" x 1" bolts, 1/4" washers, 1/4" nuts, & a 7/16" socket / wrench. (See Photo # 11)
23. Install the new Skyjacker front shocks using the supplied polyurethane bushings, steel sleeves, OEM hardware & a 18mm socket / wrench. **Note:** The new front shocks use the larger inside diameter polyurethane bushings / longer steel sleeves for the front upper shock mounts & the smaller inside diameter polyurethane bushings / shorter steel sleeves for the front lower shock mounts. (See Photo # 12)

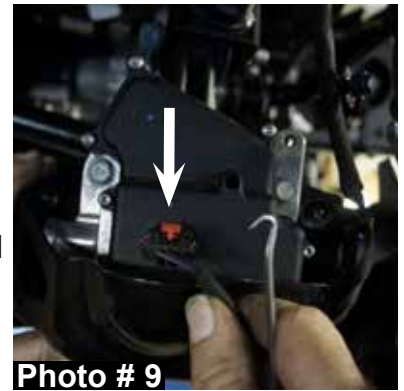


Photo # 9



Photo # 10

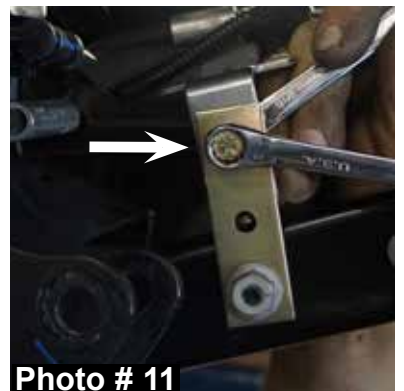


Photo # 11



Photo # 12

24. Install the new Skyjacker front sway bar end links using the supplied polyurethane bushings, steel sleeves, 12mm x 70mm bolts, 7/16" USS washers, 12mm nuts, OEM hardware, a 18mm socket / wrench, & 19mm socket / wrench. (See Photo # 13) **Note:** On the driver side of the vehicle, install the OEM lower bolt with the large washer to the bushing side of the new front sway bar end link.



25. Install the OEM front skid plate using the OEM hardware & a 13mm socket / wrench. (See Photo # 2)


26. Install the front tires / wheels using a 22mm socket & lower the front of the vehicle to the ground. (See Photo # 1)

27. Install the fixed end of the new Skyjacker adjustable front track bar to the frame using the OEM hardware & a 21mm socket / wrench. (See Photo # 14) **Note:** Do not tighten at this time.



28. Using a measuring tape, check the front of the vehicle to make sure the body is centered over the front tires / wheels & adjust the new Skyjacker rod end to align with the lower track bar mounting location.

29. Install the adjustable end of the new Skyjacker adjustable front track bar to the front differential using the supplied rod end bushings, OEM hardware, & a 21mm socket / wrench. (See Photo # 15) **Note:** Fully tighten the OEM hardware at this time.

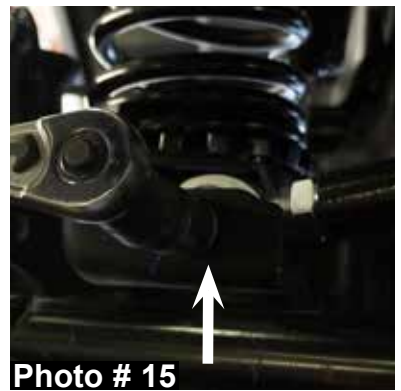


30. Tighten the supplied jam nut of the new Skyjacker adjustable front track bar using a 1 1/8" wrench.

### **Rear Installation:**

1. Block the front tires / wheels, raise the rear of the vehicle, support the frame rails, & rear differential using jack stands.

2. Remove the rear tires / wheels using a 22mm socket. (See Photo # 16)

3. Remove the OEM rear sway bar end links using a 6mm hex key socket / wrench & 18mm socket / wrench. (See Photo # 17)

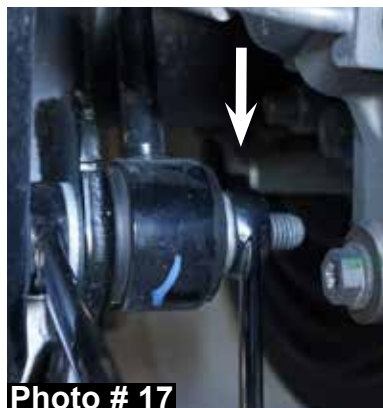

4. Disconnect the OEM rear track bar from the frame using a 21mm socket / wrench. (See Photo # 18)
5. In order to gain access to the OEM rear upper shock mounting bolts, remove the OEM rear lower fender liners using a 8mm socket / wrench. (See Photo # 19)
6. Remove the OEM rear shocks using a 18mm socket / wrench. (See Photo # 20)
7. Disconnect the OEM rear brake line brackets from the frame & rear differential using a 10mm socket / wrench & 13mm socket / wrench. (See Photo # 21)
8. While checking for appropriate slack in ABS lines, brake lines, differential vent hose, & etc. Lower the rear differential & remove the OEM rear coil springs.
9. Install the new Skyjacker rear upper track bar bracket to the frame with the double hole side of the new rear upper track bar bracket towards the outside of the vehicle using the supplied 1/2" x 5" bolt, 1/2" washers, 1/2" nut, 9/16" x 1 1/4" bolts, 9/16" washers, 9/16" nuts, a 3/4" socket / wrench, 13/16" socket / wrench, & 7/8" socket / wrench. (See Photo # 22) **Note:** Install the 1/2" bolt & 9/16" bolts with the threads inward of the new rear upper track bar bracket. It may be necessary to slightly grind the welds of the OEM rear upper track bar bracket on the frame in order for the new rear upper track bar bracket to be installed easily over the OEM rear upper track bar bracket on the frame.
10. Install the new Skyjacker rear bump stop spacers to the OEM rear bump stop pads using the supplied 5/16" x 1" bolts, 5/16" washers, 5/16" nuts, & a 1/2" socket / wrench. (See Photo # 23) **Note:** Install the new rear bump stop spacers so the angled end is towards the rear of the vehicle.



Photo # 18



Photo # 19



Photo # 20

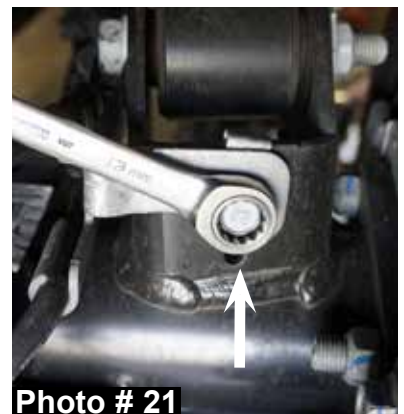


Photo # 21

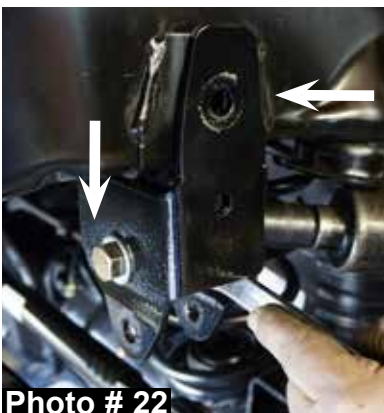


Photo # 22



Photo # 23



11. Install the new Skyjacker rear coil springs. **Note:** The new rear coil spring with a "L" as the last digit of the part # is to be installed on the Driver Side of the vehicle & the new rear coil spring with a "R" as the last digit of the part # is to be installed on the Passenger Side of the vehicle. Be sure when installing the new rear coil springs that the tabs of each OEM rear upper coil spring isolator are aligned with the holes of the OEM rear upper coil spring mounts.

12. Raise the rear differential in order to load the new Skyjacker rear coil springs & install the new Skyjacker rear shocks using the supplied polyurethane bushings, steel sleeves, OEM hardware & a 18mm socket / wrench. **Note:** The new rear shocks use the larger inside diameter polyurethane bushings / longer steel sleeves for the rear upper shock mounts & the smaller inside diameter polyurethane bushings / shorter steel sleeves for the rear lower shock mounts. (See Photo # 12)

13. Install the OEM rear lower fender liners using the OEM hardware & a 8mm socket / wrench. (See Photo # 19)

14. Connect the OEM rear brake line brackets to the rear differential using the OEM hardware & a 13mm socket / wrench. (See Photo # 21)




15. Install the new Skyjacker rear brake line brackets to the frame using the OEM hardware & a 10mm socket / wrench. (See Photo # 24)

16. Slightly bend / straighten the OEM rear hard brake lines & connect the OEM rear brake line brackets to the new Skyjacker rear brake line brackets using the supplied 1/4" x 1" bolts, 1/4" washers, 1/4" nuts, & a 7/16" socket / wrench. (See Photo # 24) **Note:** Be very careful not to damage the OEM rear hard brake lines.

17. Install the new Skyjacker rear sway bar end links using the supplied polyurethane bushings, steel sleeves, 12mm x 65mm button head bolts, 7/16" USS washers, 12mm nuts, OEM hardware, a 5/16" hex key socket / wrench, & 18mm socket / wrench. (See Photo # 25) **Note:** Install the new upper end link button head bolts from the outside of the vehicle inward & the OEM lower bolts with the large / washer to the bushing side of the new rear sway bar end links.

18. Install the rear tires / wheels using a 22mm socket & lower the rear of the vehicle to the ground. (See Photo # 13)


19. Connect the OEM rear track bar to the new Skyjacker rear upper track bar bracket using the OEM hardware & a 21mm socket / wrench. (See Photo # 15) **Note:** Install the OEM bolt with the threads towards the rear of the vehicle.

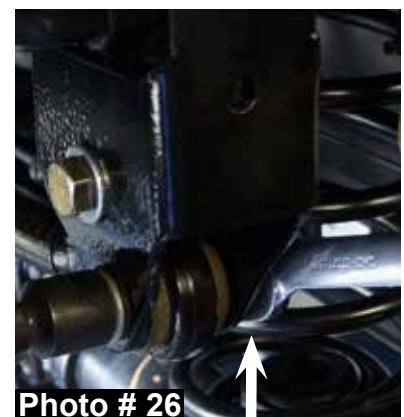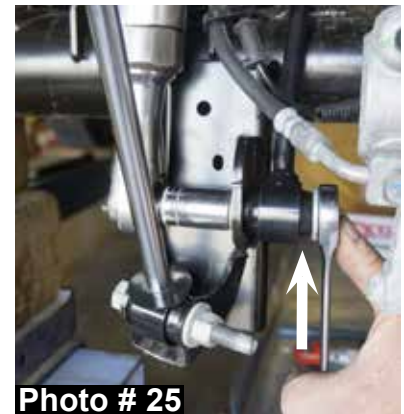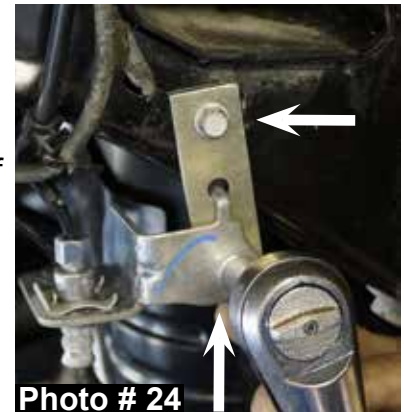



## Front Lower & Rear Upper Cam Bolt Installation:

1. One at a time, disconnect the OEM front lower & rear upper control arms from the front & rear differentials using a 21mm socket / wrench & 24mm socket / wrench.
2. The OEM front lower & rear upper control arm brackets are scribed so they can be made a slotted hole. Knock out these notches on the front & rear half of the OEM front lower & rear upper control arm brackets. (See Photo # 27)
3. One at a time, connect the OEM front lower & rear upper control arms to the front & rear differential using the new Skyjacker eccentric cam bolts, eccentric washers, nuts, a 21mm socket / wrench, 22mm socket / wrench, & 24mm socket / wrench. (See Photo # 28)
4. With the vehicle on the ground & the weight of the vehicle on the tires / wheels, tighten the new Skyjacker eccentric cam bolts using a 21mm socket / wrench, 22mm socket / wrench, & 24mm socket / wrench. **Note:** These new eccentric cam bolts can be rotated forward or backward for caster adjustment & to adjust the axle pinion angle to eliminate driveline vibrations.

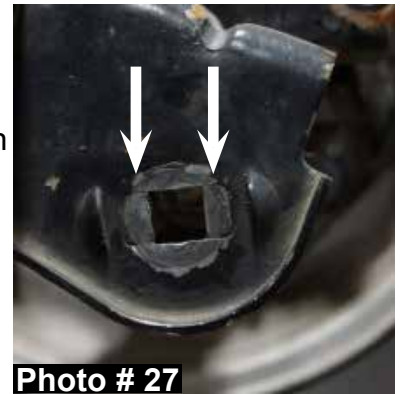

## Final Notes:

- After the installation is complete, double check that all nuts & bolts are tight. Refer to the following chart for the proper torque specifications. (Do not retighten the nuts & bolts where thread lock compound was used.)
- With the vehicle placed on the ground, cycle the steering lock to lock & inspect the steering, suspension, brake lines, front & rear drivelines, fuel lines, & wiring harnesses for proper operation, tightness, & adequate clearance.
- Have the headlights readjusted to the proper settings.
- Have a qualified alignment center align the vehicle to the OEM specifications.
- After the first 100 miles, check all hardware for the proper torque & periodically thereafter.

## TORQUE SPECIFICATIONS

| <u>INCH SYSTEM</u> |                |                | <u>METRIC SYSTEM</u> |                  |                   |
|--------------------|----------------|----------------|----------------------|------------------|-------------------|
| <b>Bolt Size</b>   | <b>Grade 5</b> | <b>Grade 8</b> | <b>Bolt Size</b>     | <b>Class 8.8</b> | <b>Class 10.9</b> |
| 5/16               | 15 FT LB       | 20 FT LB       | 6MM                  | 5 FT LB          | 9 FT LB           |
| 3/8                | 30 FT LB       | 35 FT LB       | 8MM                  | 18 FT LB         | 23 FT LB          |
| 7/16               | 45 FT LB       | 60 FT LB       | 10MM                 | 32 FT LB         | 45 FT LB          |
| 1/2                | 65 FT LB       | 90 FT LB       | 12MM                 | 55 FT LB         | 75 FT LB          |
| 9/16               | 95 FT LB       | 130 FT LB      | 14MM                 | 85 FT LB         | 120 FT LB         |
| 5/8                | 135 FT LB      | 175 FT LB      | 16MM                 | 130 FT LB        | 165 FT LB         |
| 3/4                | 185 FT LB      | 280 FT LB      | 18MM                 | 170 FT LB        | 240 FT LB         |

• The above specifications are not to be used when the bolt is being installed with a bushing.

### Optional HD OEM Replacement Steering Stabilizers Available:

7008 HD OEM Replacement Steering Stabilizer - White Steering Damper  
 8008 HD OEM Replacement Steering Stabilizer - Black Steering Damper  
 9008 HD OEM Replacement Steering Stabilizer - Silver Steering Damper

### Optional Dual Steering Stabilizer Kits Available:

7208 Dual Steering Stabilizer Kit - White Steering Dampers  
 8208 Dual Steering Stabilizer Kit - Black Steering Dampers  
 9208 Dual Steering Stabilizer Kit - Silver Steering Dampers

### Optional HD Front / Rear Upper & Lower Control Arms Available:

JL24LL HD Front & Rear Lower Control Arms - Set / 1"- 4" Lift  
 JL24LLX Single Flex Front & Rear Lower Control Arms - Set / 1"- 6" Lift  
 JLL24F-SX Single Flex Front Lower Control Arms - Pair / 1"- 6" Lift  
 JLL24R-SX Single Flex Rear Lower Control Arms - Pair / 1"- 6" Lift  
 JLULF26-SX Single Flex Front Upper Control Arms - Pair / 1"- 6" Lift  
 JLULR26-SX Single Flex Rear Upper Control Arms - Pair / 1"- 6" Lift



As of February 21, 2018 Skyjacker is proud to have passed the rigorous FMVSS No.126 testing requirements on all Jeep Wrangler JL lift systems. FMVSS No.126 is the National Highway Traffic Safety Administration (NHTSA) that is established for the Federal Motor Vehicle Safety Standard (FMVSS) No.126 requiring all new passenger vehicles under 10,000lbs GVWR that include an Electronic Stability Control (ESC) system through a series of evasive lane-change maneuvers at highway speeds to ensure the driver can maintain control in critical driving situations. The main objective behind this mandate is to reduce the risk of rollovers among passenger vehicles. Skyjacker has a number of our lift systems tested to prove compliance with the FMVSS No.126 mandate. These Skyjacker systems are proven to work in harmony with the Electronic Stability Control (ESC) system. Through SEMA & the advanced testing technology by Link Engineering that involves robotic steering & outrigger equipment Skyjacker has demonstrated compliance with these safety standards.

**Seat Belts Save Lives, Please Wear Your Seat Belt.**



**Jesus Forgives,  
Rocks Don't**

***Jesus Christ Died For You.***

John 3:16

For God so loved the world that He gave His only Son, so that everyone who believes in Him should not perish, but have everlasting life.  
Romans 3:23

For all have sinned; all fall short of God's glorious standard.  
Ephesians 2:8

God saved you by his special favor when you believed. And you can't take credit for this; it is a gift from God.  
Psalms 18:2

The Lord is my Rock, my fortress, and my savior; my God is my Rock, in whom I find protection. He is my shield, the strength of my salvation, and my stronghold.  
Romans 10:9-10

That if you shall confess with thy mouth the Lord Jesus, and shall believe in your heart that God hath raised him from the dead, you shall be saved. For with the heart man believeth unto righteousness; and with the mouth confession is made unto salvation.

Pray This Simple Prayer:

God, I come to You admitting I have sinned against You and I need you to take control of my life. The Bible says anyone who calls on the name of the Lord will be saved. I am calling on You, Jesus. I ask that You come live in my heart and be the Lord over my life today. I do believe You died on the cross for me and came back to life to give me life! Thank You, Lord Jesus for a new life in You!

Now, go and tell somebody about your new life in Jesus, get a Bible, begin to read it, and go to a Bible believing church.

If you would like someone to pray with you, call Kenneth Copeland Ministries anytime at 800-600-7395.

To listen to commercial free Christian radio on the web, go to [www.887fm.org](http://www.887fm.org)

***Jesús murió por ti.***

Juan 3:16

“Porque tanto amó Dios al mundo, que dio a su Hijo unigénito, para que todo el que cree en él no se pierda, sino que tenga vida eterna.”  
Romanos 3:23

“Pues todos han pecado y están privados de la gloria de Dios.”  
Efesios 2:8

“Porque por gracia ustedes han sido salvados mediante la fe; esto no procede de ustedes, sino que es el regalo de Dios.”  
Salmos 18:2

“El Señor es mi roca, mi amparo, mi libertador; es mi Dios, el peñasco en que me refugio. Es mi escudo, el poder que me salva, ¡mi más alto escondite!”  
Romanos 10:9-10

“9 Que si confi esas con tu boca que Jesús es el Señor, y crees en tu corazón que Dios lo levantó de entre los muertos, serás salvo. 10 Porque con el corazón se cree para ser justificado, pero con la boca se confía esa para ser salvo.”

Ahora dí esta simple oración:

Dios, vengo a Ti y admito que he pecado contra Ti, necesito que tomes el control de mi vida. La Biblia dice que todo aquel que invoca el nombre del Señor escapará con vida. En este momento yo clamo ante Ti, Jesús; te pido que vengas a vivir en mi corazón y que tomes el control de mi vida. ¡Yo creo que tu moriste en la cruz y resucitaste para darme vida! ¡Gracias Señor Jesús, por una nueva vida que tengo en Ti! Amen.

Ahora ve y dile a alguien sobre la nueva vida que tienes en Cristo. Compra una Biblia y empieza a leerla. Busca una Iglesia que cree en la Biblia y hazte parte de esa Iglesia.

Si te gustaría orar con alguien, puedes llamar a este número 800-600-7395

Puedes ir a este sitio de Internet para escuchar música Cristiana sin anuncios, [www.887fm.org](http://www.887fm.org)

**Check out our favorite ministries at:**

[www.innministries.org](http://www.innministries.org)

[www.familychurch.org](http://www.familychurch.org)

[www.kcm.org](http://www.kcm.org)

