



1984 - 2001 Jeep Cherokee XJ 3" Suspension Lift Installation Instructions

www.skyjacker.com

REQUIRED TOOL LIST:

- Safety Glasses
- Metric / Standard Wrenches & Sockets
- Drill / Assorted Drill Bits
- C-Clamps
- Hacksaw
- Floor Jack
- Jack Stands
- Measuring Tape
- Torque Wrench



Before beginning the installation, thoroughly & completely read these instructions & the enclosed driver's WARNING NOTICE. Affix the WARNING decal in the passenger compartment in clear view of all occupants. Please refer to the Parts List to insure that all parts & hardware are received prior to the disassembly of the vehicle. If any parts are found to be missing, contact SKYJACKER® Customer Service at 318-388-0816 to obtain the needed items. If you have any questions or reservations about installing this product, contact SKYJACKER® Technical Assistance at 318-388-0816.

Make sure you park the vehicle on a level concrete or asphalt surface. Many times a vehicle is not level (side-to-side) from the factory & is usually not noticed until a lift kit has been installed, which makes the difference more visible. Using a measuring tape, measure the front & rear (both sides) from the ground up to the center of the fender opening above the axle. Record this information below for future reference.

Driver Side Front: _____

Passenger Side Front: _____

Driver Side Rear: _____

Passenger Side Rear: _____

Important Notes:

- If larger tires (10% more than the OEM diameter) are installed, speedometer recalibration will be necessary. Contact your local Jeep dealer or an authorized dealer for details.
- After installation, a qualified alignment facility is required to align the vehicle to the OEM specifications.



Component Box Breakdown:

Part #: JC301BH / JC315BSH / JC318BSH


Item #	Description	Qty	Item #	Description	Qty
JC30FS	JEEP XJ FRONT COIL SPRING	2	12X318X612U	1/2 X 3 1/8 X 6 1/2 U-BOLT	4
R3135S	JEEP XJ REAR ADD A LEAF (Included With JC301BH Box)	2		(Included With JC318BSH Box)	
5163S	5/16 X 3 TIE BOLT (Included With JC301BH Box)	2	12FTN	1/2 FINE THREAD LOCK NUT (Included With JC315BSH & JC318BSH Box)	8
516TBN	5/16 TIE BOLT NUT (Included With JC301BH Box)	2	12UBW	1/2 U-BOLT WASHER (Included With JC315BSH & JC318BSH Box)	8
12X234X6U	1/2 X 2 3/4 X 6 U-BOLT (Included With JC315BSH Box)	4	H7016	HYDRO SHOCK W/RED BOOT	2
			H7018	HYDRO SHOCK W/RED BOOT	2
			I-JC301B	INST: JC301BH/JC315BSH/JC318BSH	1

Front Installation:

1. With the vehicle on a level concrete or asphalt surface, set the emergency brake & block the rear tires / wheels.
2. Lift the front of the vehicle & support the vehicle using jack stands.
3. Remove the front tires / wheels.
4. Remove the OEM front shocks.
5. Disconnect the OEM track bar from the passenger side lower front axle mount. **Note:** It may be necessary to pry the OEM track bar loose from the passenger side lower front axle mount. (See Photo # 1)
6. Disconnect the OEM drag link from the OEM pitman arm.
7. Disconnect the OEM sway bar end links from the front axle mounts. (See Photo # 2)
8. Remove the OEM bottom bolt & clip from the driver side OEM front coil spring. (See Photo # 3)
9. While checking for appropriate slack in ABS lines, brake lines, differential breather hose, & etc. Lower the front axle & remove the OEM front coil springs. (See Photo # 4)

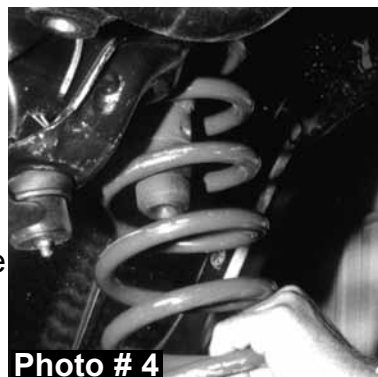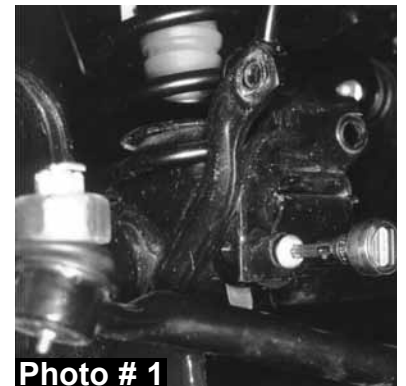

10. Measure straight across (Inward) 3/4" from the center of OEM track bar passenger side lower front axle mounting location. Mark, center punch, & drill a 7/16" hole through both the OEM front & back plates, keeping the drill as straight & square to the bracket as possible. (See Photo # 5)

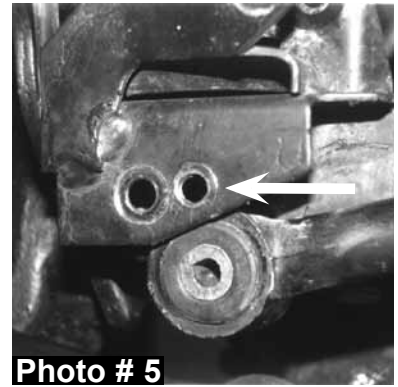

11. Install the new Skyjacker front coil springs & install the OEM bottom bolt & clip to the new Skyjacker driver side front coil spring. (See Photo # 3)

12. Raise the front axle in order to load the new Skyjacker front coil springs & connect the OEM track bar to the new previously drilled passenger side lower front axle mounting location using the OEM hardware. (See Photo # 5)

13. Install the new Skyjacker front shocks using the supplied & OEM hardware. (See Photo # 6)



14. Connect the OEM drag link to the OEM pitman arm using the OEM hardware.

15. Connect the OEM sway bar end links to the front axle mounts using the OEM hardware. (See Photo # 2)

16. Install the front tires / wheels & lower the front of the vehicle to the ground.

Rear Installation:


17. Block the front tires / wheels, lift the rear of the vehicle, & support the vehicle using jack stands.

18. Support the rear axle & remove the OEM rear shocks & u-bolts.


19. While checking for appropriate slack in ABS lines, brakelines, differential breather hose, & etc. Lower the rear axle to gain access to the OEM rear leaf springs.

20. Add-A-Leaf Installation:

To perform the installation of the new Skyjacker rear add a leafs properly, you must use two large C-clamps to contain the elastic potential energy of the OEM rear leaf springs when the OEM tie bolts are being removed. Attach & tighten a C-clamp on each end of the OEM rear leaf spring to hold the leaf spring assembly securely together. Using a wrench & locking pliers to hold the head of the OEM tie bolt, loosen & remove. With care, slowly loosen & remove the C-clamps. (See Photo # 7)

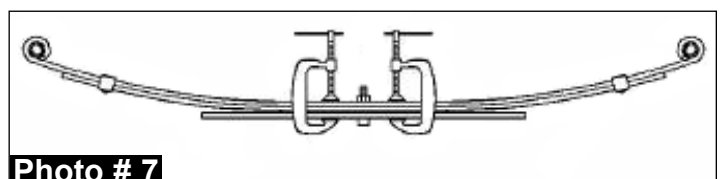

21. Install the new Skyjacker rear add a leafs into the OEM rear leaf springs so the leaves remain progressive longest to shortest while matching the long end & short end of the new rear add-a-leafs to the OEM rear leaf springs. (See Photo # 8)

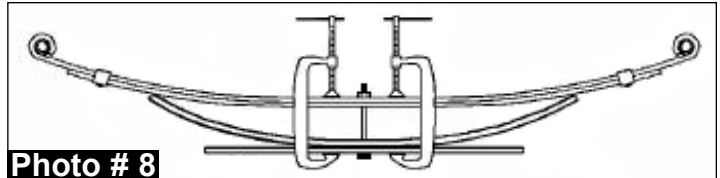

22. Install the new Skyjacker tie bolts through the OEM rear leaf spring. Do not tighten at this time. (See Photo # 8)

DO NOT USE THE NEW SKYJACKER TIE BOLTS TO DRAW THE OEM LEAF SPRING LEAVES TOGETHER. FAILURE OF ANY COMPONENT CAN CAUSE AN EXPLOSIVE DISASSEMBLY & POSSIBLE INJURY!


23. Place one C-clamp on each side of the new Skyjacker tie bolts & tighten evenly. Once the C-clamps have drawn the leaves securely together, hold the tie bolt heads with locking pliers & tighten the tie bolt nuts. Remove the C-clamps & cut off the excess length of the new tie bolts using a hacksaw. (See Photo # 8)
24. Raise the rear axle & install the OEM u-bolts using the OEM hardware. (Proceed to Step # 27)

25. Rear Leaf Spring Installation:

Remove the leaf spring eye bolts & remove OEM leaf springs from the vehicle. Install the new Skyjacker leaf springs with thick end of the bottom degree shims pointing toward the rear bumper (Which is also the long end of the leaf spring toward the rear bumper). (See Photo # 9)

26. Raise the rear axle aligning the spring pins with the axle housing & install the new Skyjacker u-bolts using the supplied 1/2" nuts & washers. (Proceed to Step # 27)

27. Install the new Skyjacker rear shocks using the supplied & OEM hardware.

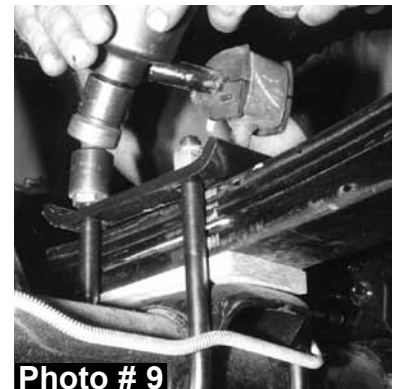

28. Install the rear tires / wheels & lower the rear of the vehicle to the ground.

Final Notes:

- After the installation is complete, double check that all nuts & bolts are tight. Refer to the following chart for the proper torque specifications. (Do not retighten the nuts & bolts where thread lock compound was used.)
- With the vehicle placed on the ground, cycle the steering lock to lock & inspect the steering, suspension, brake lines, front & rear drivelines, fuel lines, & wiring harnesses for proper operation, tightness, & adequate clearance.

- Have the headlights readjusted to the proper settings.
- Have a qualified alignment center align the vehicle to the OEM specifications.
- After the first 100 miles, check all of the hardware for the proper torque & periodically thereafter.

TORQUE SPECIFICATIONS					
INCH SYSTEM			METRIC SYSTEM		
Bolt Size	Grade 5	Grade 8	Bolt Size	Class 8.8	Class 10.9
5/16	15 FT LB	20 FT LB	6MM	5 FT LB	9 FT LB
3/8	30 FT LB	35 FT LB	8MM	18 FT LB	23 FT LB
7/16	45 FT LB	60 FT LB	10MM	32 FT LB	45 FT LB
1/2	65 FT LB	90 FT LB	12MM	55 FT LB	75 FT LB
9/16	95 FT LB	130 FT LB	14MM	85 FT LB	120 FT LB
5/8	135 FT LB	175 FT LB	16MM	130 FT LB	165 FT LB
3/4	185 FT LB	280 FT LB	18MM	170 FT LB	240 FT LB

- The above specifications are not to be used when the bolt is being installed with a bushing.

Seat Belts Save Lives, Please Wear Your Seat Belt.



Jesus Christ Died For You.

John 3:16

For God so loved the world that He gave His only Son, so that everyone who believes in Him should not perish, but have everlasting life.
Romans 3:23

For all have sinned; all fall short of God's glorious standard.
Ephesians 2:8

God saved you by his special favor when you believed. And you can't take credit for this; it is a gift from God.
Psalms 18:2

The Lord is my Rock, my fortress, and my savior; my God is my Rock, in whom I find protection. He is my shield, the strength of my salvation, and my stronghold.
Romans 10:9-10

That if you shall confess with thy mouth the Lord Jesus, and shall believe in your heart that God hath raised him from the dead, you shall be saved. For with the heart man believeth unto righteousness; and with the mouth confession is made unto salvation.

Pray This Simple Prayer:

God, I come to You admitting I have sinned against You and I need you to take control of my life. The Bible says anyone who calls on the name of the Lord will be saved. I am calling on You, Jesus. I ask that You come live in my heart and be the Lord over my life today. I do believe You died on the cross for me and came back to life to give me life! Thank You, Lord Jesus for a new life in You!

Now, go and tell somebody about your new life in Jesus, get a Bible, begin to read it, and go to a Bible believing church.

If you would like someone to pray with you, call Kenneth Copeland Ministries anytime at 800-600-7395.

To listen to commercial free Christian radio on the web, go to www.887fm.org

Jesús murió por ti.

Juan 3:16

"Porque tanto amó Dios al mundo, que dio a su Hijo unigénito, para que todo el que cree en él no se pierda, sino que tenga vida eterna."
Romanos 3:23

"Pues todos han pecado y están privados de la gloria de Dios."
Efesios 2:8

"Porque por gracia ustedes han sido salvados mediante la fe; esto no procede de ustedes, sino que es el regalo de Dios."
Salmos 18:2

"El Señor es mi roca, mi amparo, mi libertador; es mi Dios, el peñasco en que me refugio. Es mi escudo, el poder que me salva, ¡mi más alto escondite!"
Romanos 10:9-10

"9 Que si confi esas con tu boca que Jesús es el Señor, y crees en tu corazón que Dios lo levantó de entre los muertos, serás salvo. 10 Porque con el corazón se cree para ser justificado, pero con la boca se confiesa para ser salvo."

Ahora dí esta simple oración:

Dios, vengo a Ti y admito que he pecado contra Ti, necesito que tomes el control de mi vida. La Biblia dice que todo aquel que invoca el nombre del Señor escapará con vida. En este momento yo clamo ante Ti, Jesús; te pido que vengas a vivir en mi corazón y que tomes el control de mi vida. ¡Yo creo que tu moriste en la cruz y resucitaste para darme vida! ¡Gracias Señor Jesús, por una nueva vida que tengo en Ti! Amen.

Ahora ve y dile a alguien sobre la nueva vida que tienes en Cristo. Compra una Biblia y empieza a leerla. Busca una Iglesia que cree en la Biblia y hazte parte de esa Iglesia.

Si te gustaría orar con alguien, puedes llamar a este número 800-600-7395

Puedes ir a este sitio de Internet para escuchar música Cristiana sin anuncios, www.887fm.org

Check out our favorite ministries at:

www.innministries.org

www.familychurch.org

www.kcm.org

