

TACTIK® Full Door Cab Cover

Installation & Use Instructions

92'-18' (YJ, TJ & JK) Wrangler

NOTICE

THIS PRODUCT REQUIRES THE USE OF A SEPARATE WINDSHIELD CHANNEL FOR INSTALLATION.

⚠️ WARNING ⚠️

NEVER OPERATE YOUR VEHICLE WITH THIS PRODUCT INSTALLED. NEVER INSTALL THIS PRODUCT WHILE THE ENGINE IS RUNNING. BEFORE INSTALLING THIS PRODUCT, PUT THE VEHICLE IN PARK AND SET THE EMERGENCY BRAKE. THIS PRODUCT SHOULD NEVER BE USED TO COVER YOUR VEHICLE WHILE IS IN TOW.

⚠️ CAUTION ⚠️

RISK OF EYE INJURY. SAFETY GLASSES SHOULD BE WORN AT ALL TIMES WHILE INSTALLING OR MAINTAINING THIS PRODUCT.



for 92-95 YJ & 97-06 TJ Wrangler



for 07-18 JK Wrangler 2-Door



for 07-18 JK Wrangler 4-Door

PARTS LIST

Fabric 3 Layer Full Door Cab Cover QTY 1

REQUIRED TOOLS

Safety Glasses

Important Safety information

Your Full Door Cab Cover is intended to sun and light shower protection of your off-road capable vehicle. Before installation, please take a moment to review the following safety information and installation instructions. Important safety information is generally preceded by one of three signal words indicating the relative risk of injury. The signal words mean:

⚠️ WARNING ⚠️

A hazardous situation which, if not avoided, could result in death or serious injury. You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.

⚠️ CAUTION ⚠️

A hazardous situation which, if not avoided, could result in minor or moderate injury. You CAN be moderately HURT and also may suffer property damage if you don't follow instructions.

NOTICE

Careful attention is required to this instruction or operation but does generally not relate to personal injury. Damage to your Tactik® product or other property may result if you don't follow instructions.

Before you begin Installation:

We are excited that you have chosen the Full Door Cab Cover! This high quality Cab Cover is designed to provide sun and light shower protection. Please note that it is important that you become familiar with the installation process of this top by reading the following instruction sheet and warnings thoroughly. Though we have used only the finest materials in creating this cover, any product that is exposed to the elements requires some general maintenance to keep it looking like new. Please note that it is normal for fabric to contract and wrinkle when stored in the shipping carton. In a few days the fabric will relax and wrinkles will disappear.


NOTICE

For a smooth fit and ease of installation, this top should be installed at temperatures above 72 degrees. We highly recommend taking the top out of the package and letting it sit inside a warm place or direct sunlight for 1-2 hours before you install the top. When warm, this top will install quickly and most wrinkles will disappear.

TACTIK®

92'-06' YJ & TJ INSTALLATION

Pre-Installation of Full Door Cab Covers (all versions)

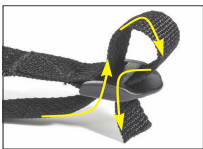

Threading Straps through Buckles:

Throughout the installation, you will need to thread webbing straps through buckles several times. Please review the picture for correct strap routing through the buckles. As a rule of thumb, run the strap below and through the sewn side of the buckle first and then back down through the end of the buckle. Tighten the strap by simply pulling the exposed webbing after threading the strap through the buckle.

STEP 1

Drape Cab Cover over vehicle. Put on safety glasses. Place the Cab Cover material on the vehicle. Orient the Cab cover on the vehicle with the door side panels facing down on the side of the vehicle (adjustable straps/buckle are on the side of the cover) and MasterTop Badge facing the rear of the vehicle.

NOTICE This product has been designed to fit Jeep vehicles that have the soft top/hard top removed. This product will work with a Bimini Top, Bimini Top Plus or all MasterTop Sun Block Mesh Summer Soft Tops installed on the vehicle.

FIG 1



FIG 2



STEP 2

Locate and Hook Side Straps. Once the cover is placed on the vehicle, locate the side straps below the door(s). Pull the straps down and hook each strap to the bottom of the vehicle pinch welds and tighten slightly to keep them hooked. (Fig 1)

Repeat this procedure on the other side of the vehicle. Once all straps are secure, tighten each strap to secure the cover on the vehicle.(Figs 1 & 2)

STEP 3

Secure Cab Cover to Belt Rail. Install side/corner Belt Rail Strips onto vehicle. Slip these strips with a slight rolling motion into the factory belt rail on the vehicle. (See FIG 3).

FIG 3





STEP 4

Secure Rear of Cab Cover. Locate the two small side straps and the large center strap. Loop the two small side straps over the rear Taillight housing (Fig 4). Loop the large center strap over the spare tire or, if you have a smaller spare tire, around the tire carrier See Figs 5 & 6.

STEP 5

Reposition Wipers. Once all straps are secure, tuck the cover under your front windshield wipers (Fig 7).



Your TJ, YJ Cab Cover is now installed! **For Cab Cover for 07'-18' JK, See Page 4**

07'- 18' JK INSTALLATION



STEP 7

Locate and Hook Side Straps. Once the cover is placed on the vehicle, locate the side straps below the door(s). Pull the straps down and hook each strap to the bottom of the vehicle pinch weld and tighten slightly to keep them hooked.

Repeat this procedure on the other side of the vehicle. Once all straps are secure, tighten each strap to secure the cover on the vehicle. (Figs 12, 13 & 14). Note: The 4 Door version has 3 straps on each side. The 2 Door version has two straps on each side

NOTICE

If your Wrangler has Rock rails or steps, the straps should go over the Rock Rails/Steps and not between them and the body of the vehicle.

STEP 8

Secure Cab Cover to Belt Rail. Install side/corner Belt Rail Strips onto vehicle. There are two small plastic strips sewn onto the side of a 2 door Cab Cover and five strips sewn onto the side/corner a four door Cab Cover.

Slip these strips with a slight rolling motion into the factory belt rail on the vehicle. See Fig 15.



STEP 9

Secure the rear of the cover. Locate the two adjustable buckle straps on the rear of the cover. Pull the straps down and attach to the bottom portion of the tailgate as shown in Figs 16 & 17.

STEP 10

Reposition Wipers. Once all straps are secure, tuck the cover under your front windshield wipers as shown in Fig 18



Your JK Cab Cover is now installed!

TACTIK® Exclusive One Year Limited Warranty

Your TACTIK® branded accessories are covered by the following Limited Warranty provided exclusively by TACTIK® located at 1028 Saunders Lane, West Chester PA 19380.

This **Limited Warranty** is the only warranty made in connection with your purchase. TACTIK® neither assumes nor authorizes any vendor, retailer or other person or entity to assume for it any other obligation or liability in connection with this product or **Limited Warranty**.

What is Covered: Subject to the terms, exclusions and limitations herein and with respect only to TACTIK® branded accessories first sold in the United States, TACTIK® warrants to the initial retail purchaser only that your TACTIK® accessory shall be free of defects in material and workmanship: **for a period of one (1) year from date of retail purchase.**

This **Limited Warranty** is not assignable and shall terminate upon sale of the vehicle upon which the TACTIK® accessory is installed or other transfer third persons.

All other warranties are hereby disclaimed, except to the extent prohibited by applicable law in which case any implied warranty of merchantability or fitness for a particular purpose on this product is limited to 1 year from date of initial retail sale. TACTIK® reserves the rights to: (a.) require invoice or other proof your accessory is within the terms of this **Limited Warranty** as a condition of warranty service and, (b.) make future revisions to this product and **Limited Warranty** without prior notice or obligation to upgrade your product.

Remedy Limited to Repair/Replacement: The exclusive remedy provided hereunder shall, upon TACTIK® inspection and at TACTIK's option, be either repair or replacement of product or parts (new or refurbished) covered under this Limited Warranty. Customers requesting warranty consideration should first contact TACTIK® to obtain a RGA number via telephone at 800-603-4064, or initiate customer service by email at: customerservice@tactik4x4.com . All labor, removal, ship- ping and installation costs are customer's responsibility.

Other Limitations - Exclusion of Damages- Your Rights Under State Law:

In consideration of the purchase price paid, neither TACTIK® nor any independent TACTIK® distributor/licensee are responsible for any time loss, rental costs, or for any incidental, consequential, punitive or other damages you may have or incur in connection with any part or product purchased. Your exclusive remedy hereunder for covered parts is repair/ replacement as described above.

This **Limited Warranty** gives you specific rights. You may also have other rights that vary from state to state. For example, some states do not allow limitations of how long an implied warranty lasts and /or do not allow the exclusion or limitation of incidental or consequential damages, so the limitations and exclusions herein may not apply to you..

©TACTIK® 2021 All Rights Reserved. LTR Version

TACTIK®