



Rev 2025  
Mag Safe



**WARNING:**

This product can expose you to chemicals including vinyl chloride and lead, which is known to the state of California to cause cancer and birth defects or other reproductive harm.

For more information go to  
[www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

## CFE PRODUCTS

MODEL # TJ-PMM 9706

Jeep TJ Wrangler Magnetic Grab Handle


Phone Mount 1997 to 2006 TJ

### INSTALLATION INSTRUCTIONS





## New & Improved , Now with **MAG SAFE MOUNT**

- 1. WARNING** DISCONNECT AND ISOLATE THE NEGATIVE BATTERY CABLE to protect against accidental air bag deployment.  
Wait 5 min before proceeding.
2. Open the Glove Box, and remove it from the Dash as shown in picture #1.
3. Using a 10mm socket, remove the two 10 mm nuts behind the Glove Box that hold the Handle to the Dash.
4. Slide the Mounting Brackets over the Handle Posts shown in picture #2& #3. The larger Mounting Bracket goes to the Left Side and the Smaller Spacer Piece goes on the Right Side
5. Align the Brackets and re-install the Dash Handle as shown in picture #2 & #3.
6. Install the Round Metal Ring to your phone. Hold your phone up to the Mount and determine where you should attach the Mounting Ring. (If you use a case on your phone, the Metal Ring can be placed inside the case without attaching it to your phone.) The center of the back of the phone usually works best. Metal Ring is shown in picture #3.
7. Re-install Glove Box, and reconnect Negative Battery Terminal.

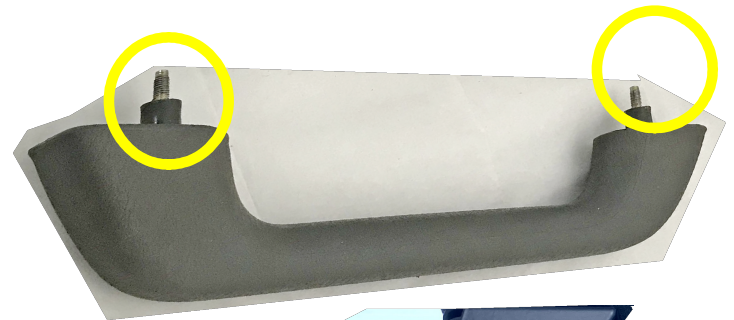

2

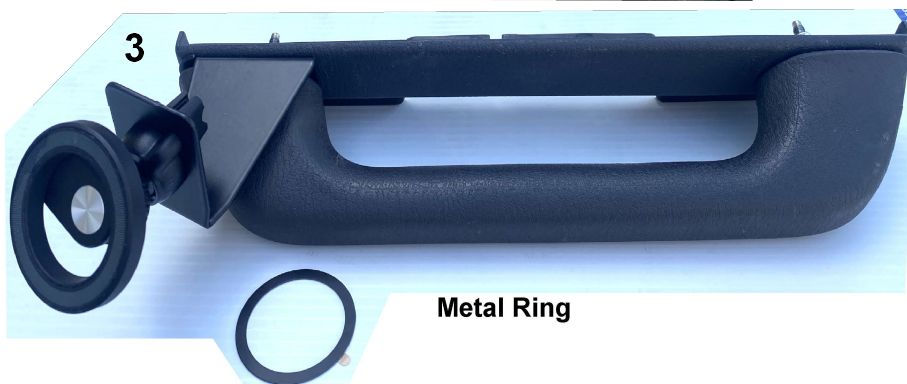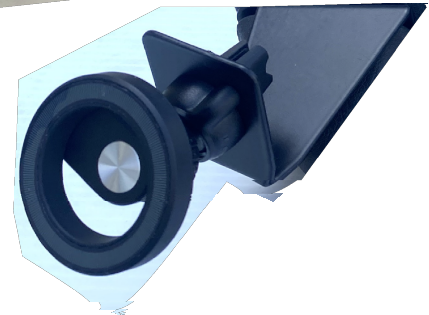

Metal Ring



Questions or Comments ? call CFE PRODUCTS @  
610 358 1886 / ASK FOR BOB