

INSTALLATION INSTRUCTIONS




OUTLAW RUNNING BOARDS
APPLICATION:
2018-2023 Jeep JL 4 Door
PART NUMBER:
28-34065


CONTENT			
ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	DRIVER OUTLAW RUNNING BOARD	TORQUE WRENCH
2	1	PASSENGER OUTLAW RUNNING BOARD	RATCHET
3	1	FRONT DRIVER BRACKET	10MM SOCKET
4	1	CENTER DRIVER BRACKET	10MM WRENCH
5	1	REAR DRIVER BRACKET	13MM SOCKET
6	1	FRONT PASSENGER BRACKET	13MM WRENCH
7	1	CENTER PASSENGER BRACKET	16MM SOCKET
8	1	REAR PASSENGER BRACKET	16MM WRENCH
9	3	SUPPORT DRIVER BRACKET	
10	3	SUPPORT PASSENGER BRACKET	
11	12	M10 SERRATED FLANGE HEX HEAD CAP SCREW	
12	12	M10 SERRATED FLANGE HEX NUT	
13	6	M8 EXTRUDED U-NUT CLIP	
14	12	M8 HEX HEAD CAP SCREW	
15	12	M8 SPLIT LOCK WASHER	
16	6	M8 HEX NUT	
17	18	M8 FLAT WASHER	
18	12	M6 HEX NUT	
19	12	M6 FLAT WASHER	
20	12	M6 SPLIT LOCK WASHER	
21	12	M6 CARRIAGE BOLT	


ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING

Item 1





Item 2




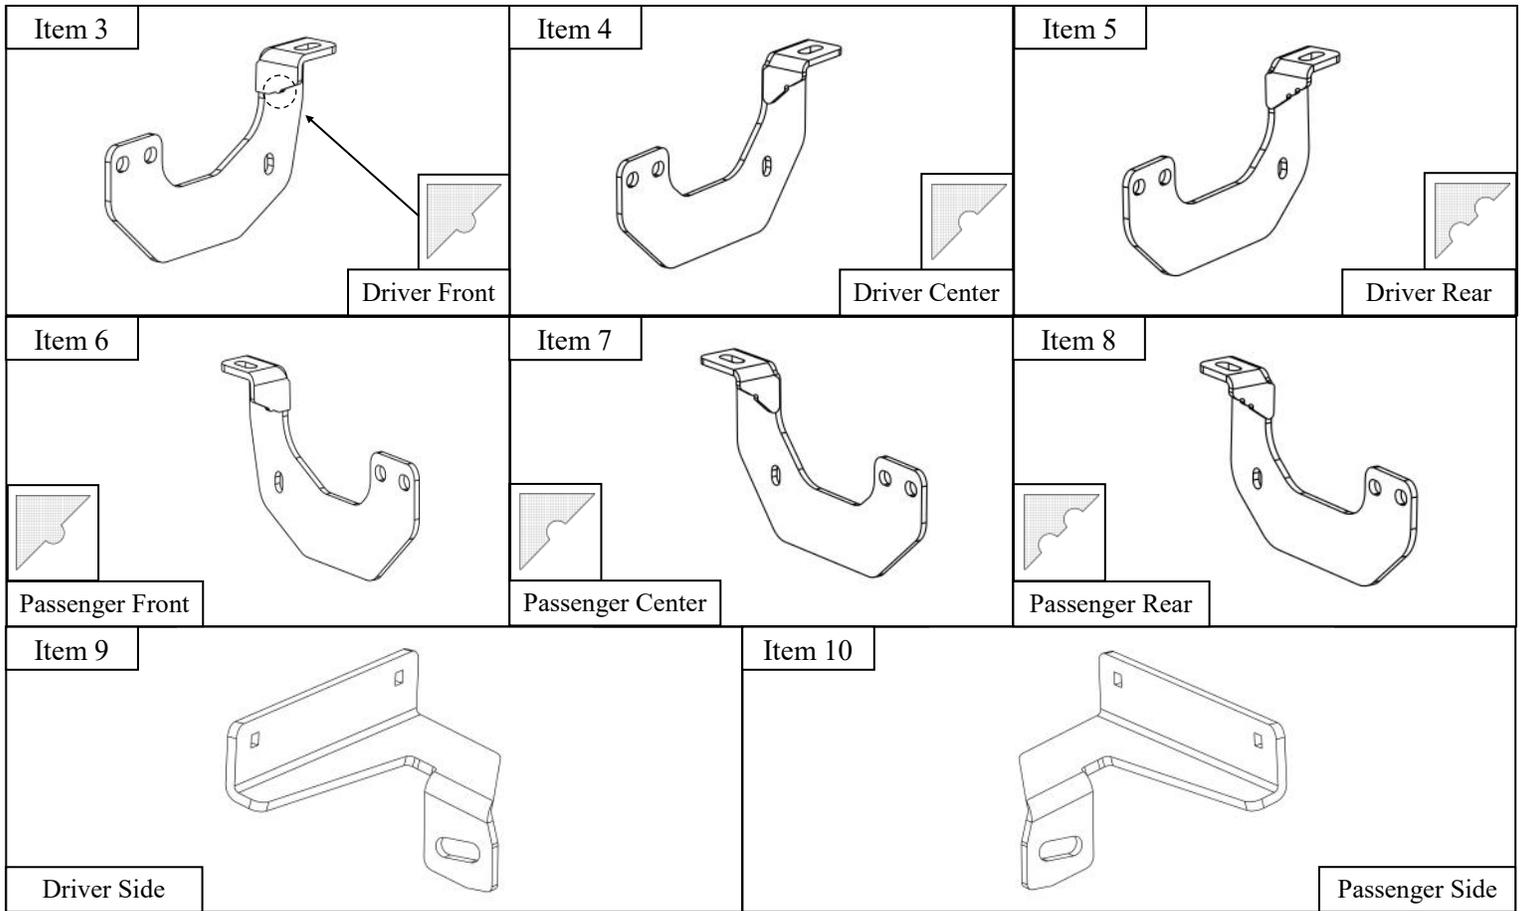


PROCEDURE




- Remove contents from box, verify if all parts listed are present and free from damage. Carefully read and understand all instructions before attempting installation. **Failure to identify damage before installation could lead to a rejection of any claim.**
- Starting on the driver side mount locations, locate three Support Driver Bracket (**Item 9**). Loosely secure the brackets using the supplied M6 hardware. See **Figure 1 & 2** for reference.

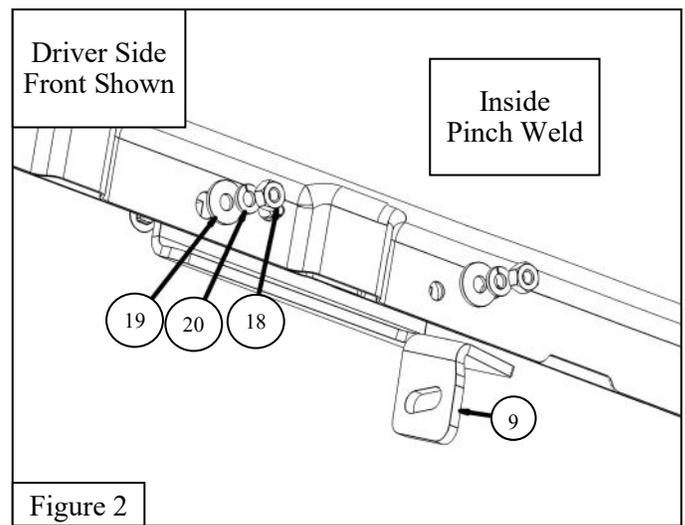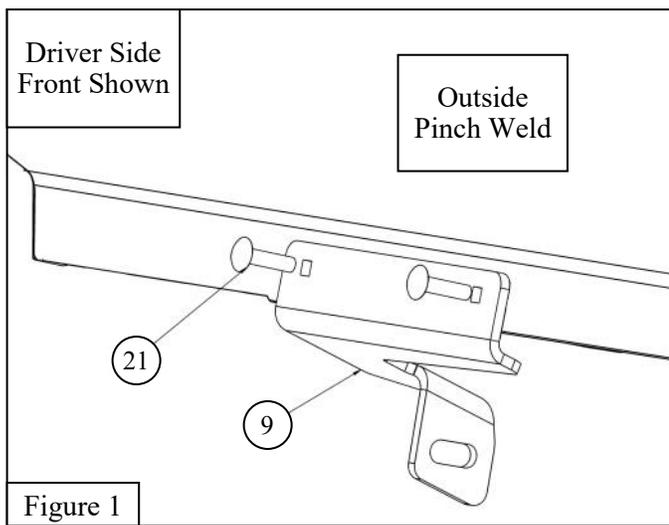

3. Locate the Front Driver Bracket (**Item 2**) and using the hardware provided loosely secure the bracket to the Support Driver Bracket (**Item 9**) and vehicle. See **Figure 3 & 4** for reference. **NOTE:** *If a threaded hole is not present use the supplied M8 Extruded U-Nut Clip (**Item 13**).*
4. Locate the Center Driver Bracket (**Item 3**) and using the hardware provided loosely secure the bracket to the Support Driver Bracket (**Item 9**). See **Figure 3 & 4** for reference. **NOTE:** *If a threaded hole is not present use the supplied M8 Extruded U-Nut Clip (**Item 13**).*
5. Locate the Rear Driver Bracket (**Item 4**) and using the hardware provided loosely secure the bracket to the Support Driver Bracket (**Item 9**). See **Figure 3 & 4** for reference. **NOTE:** *If a threaded hole is not present use the supplied M8 Extruded U-Nut Clip (**Item 13**).*

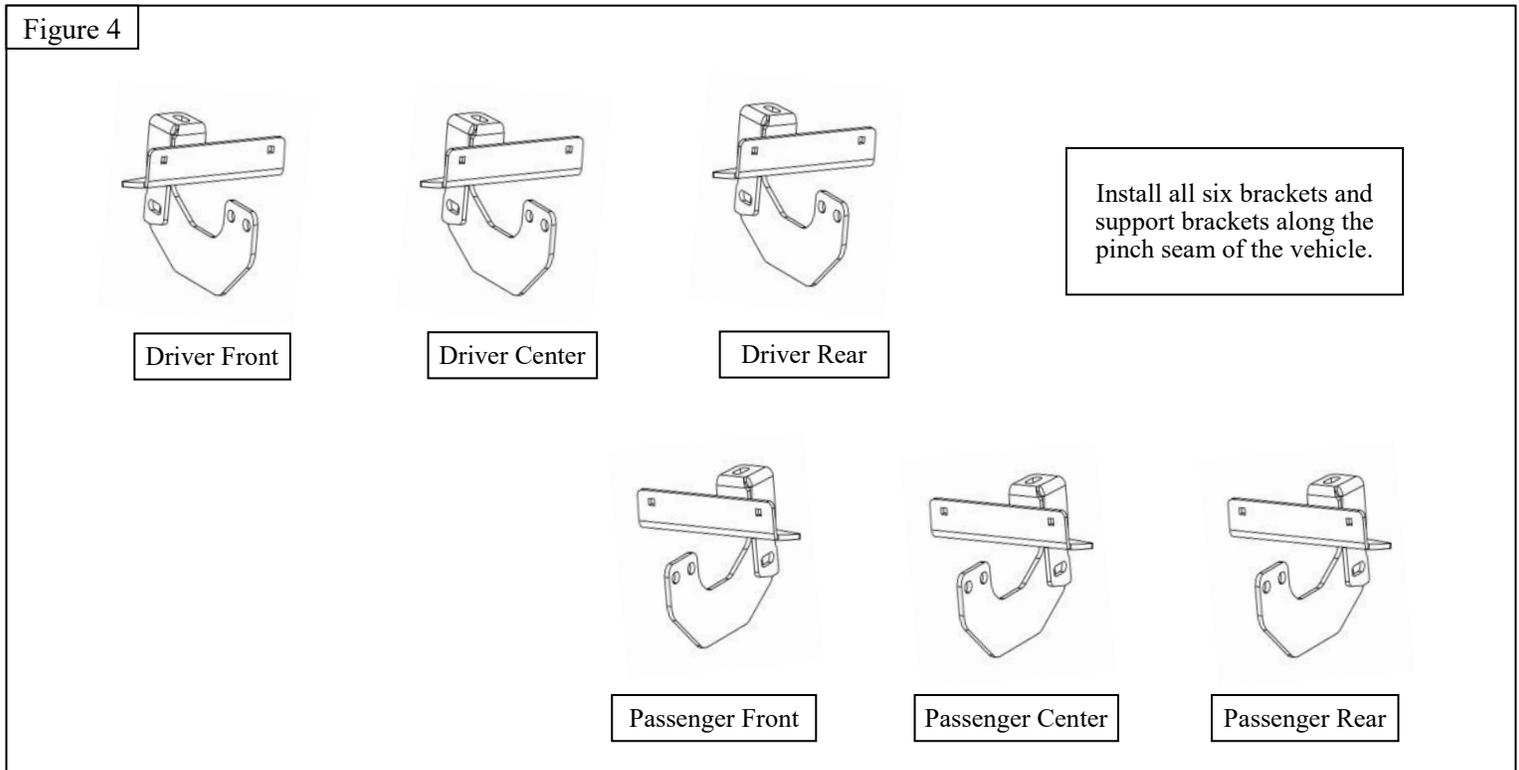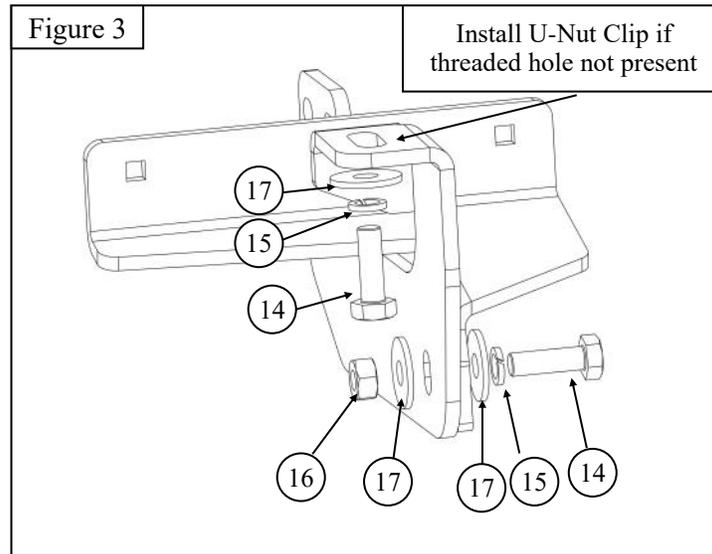

6. Locate the Driver Outlaw Running Board (**Item 1**) and loosely secure it to the previously installed brackets with the provided hardware. See **Figure 5** for reference.
7. Repeat **Steps 2-6** for the passenger side.
8. Align and adjust the Outlaw Running Boards to the desired position. Torque and tighten all M6 hardware to 8-11 ft-lbs., M8 hardware to 15-18 ft-lbs., and M10 hardware to 35-38 ft-lbs.

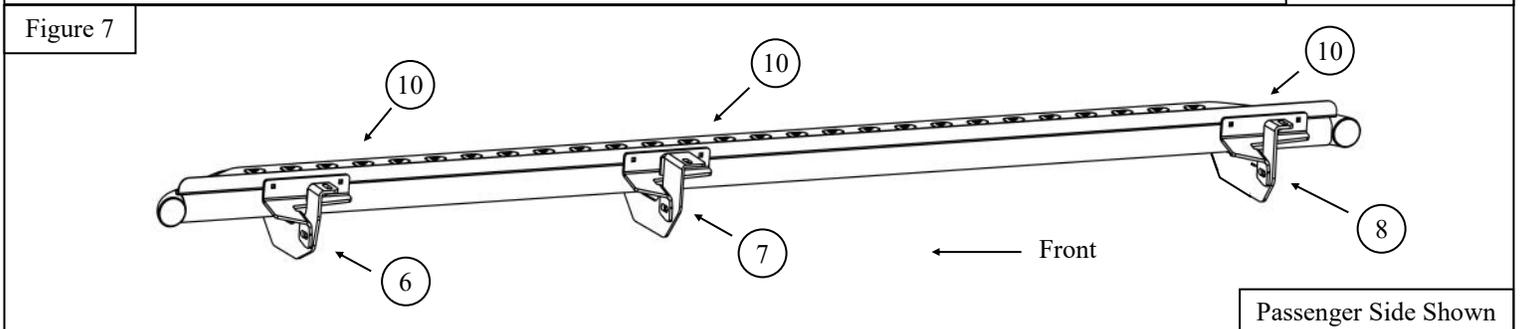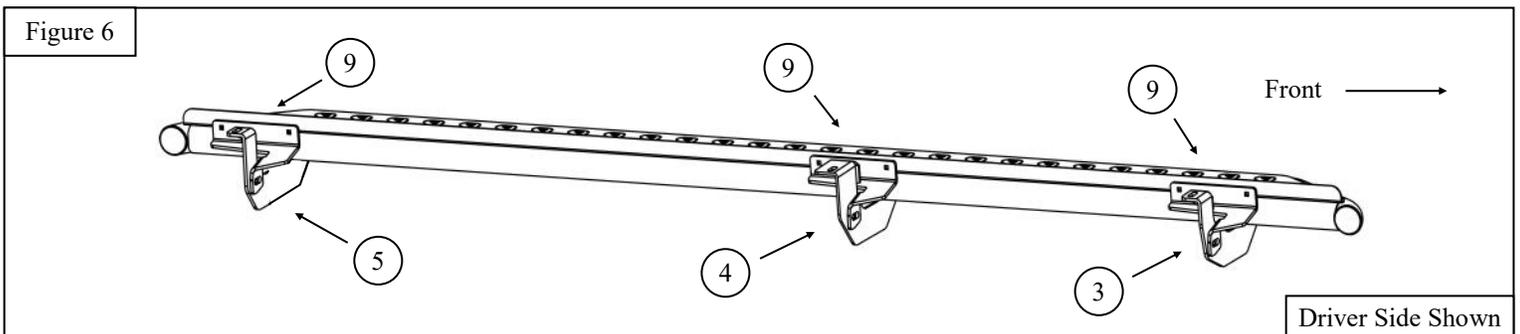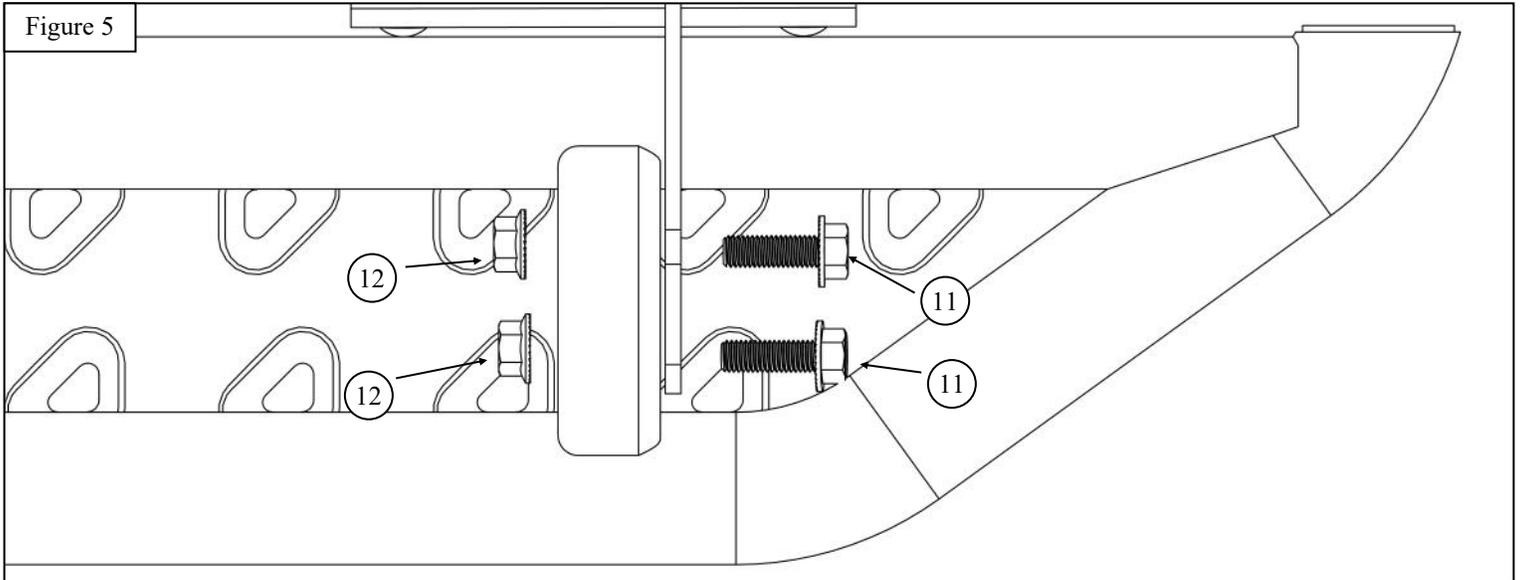

INSTALLATION COMPLETE



CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES.
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER.

WESTIN Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

Thank you for choosing Westin products
for additional installation assistance please call
Customer Service (800) 793-7846
www.westinautomotive.com



WARNING



Failure to follow these instructions could lead to death, personal injury, and / or property damage.

Failure to follow these instructions could lead to death, personal injury, and / or property damage.

FASTENERS:

All Westin supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. **DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE, AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.**

DRILLING:

Most Westin products do not require drilling for installation. If drilling is defined as required, use caution when drilling a vehicle. **FAILURE TO REVIEW AN AREA TO BE DRILLED MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

EYE PROTECTION:

ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.

MAXIMUM TOWING/CARRYING CAPACITY: (if applicable)

The Westin Receiver Hitches will have a visible tow rating label affixed directly on the product. User should never exceed the vehicle manufacturers maximum tow and weight rating regardless of the capacity of the hitch. **FAILURE TO FOLLOW THESE GUIDELINES WILL VOID THE WESTIN WARRANTY AND MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

FOR CALIFORNIA RESIDENTS ONLY-PROP 65 WARNING:

Some products may contain chemicals such as DEHP, which can cause cancer, birth defects or other reproductive harm. For more info go to www.p65warnings.ca.gov



Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773