


PARTS LIST:

- 1- Platform A Center Tray
- 1- Driver's Side Mount (DS)
- 1- Passenger Side Mount (PS)

FASTENER LIST:

4 – 3/8 16 x 1"



4 – 3/8 16 Nylok Nuts




8 – 3/8 Washers




8 – Rubber Washers



1 – 7/32" Allen Wrench

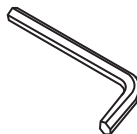

SCAN FOR INSTRUCTIONAL VIDEO:

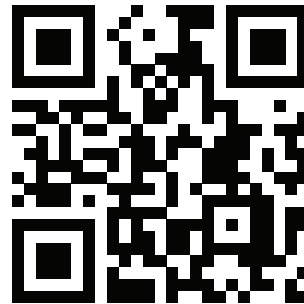

Scan the QR code with your smartphone and it will take you to the link below:

<https://qrgo.page.link/yYQYH>

TOOLS NEEDED:

Torx Wrench for
Roof Side Mounting Bolts.
(Varies by Model)



INSTALLATION TIME & SKILL LEVEL:

15-20 minutes, Skill Level 01

WARNING!

Platform A is engineered to support up to 150lb of evenly distributed cargo. Operator responsible for **securing all fasteners and cargo** prior to operating vehicle. Do not stack cargo to height that obstructs rear view mirror.

Do not carry flammable liquids or solids in Platform A.

Do not use Platform A as a bed of any sort.

XG Cargo warrants all products for workmanship only and cannot assume responsibility for products abuse or misuse by the end user.


STEP 01:

Remove all components from box and be sure all components including fasteners are intact.

STEP 02:


Remove two (2) hard top mounting bolts closest to back seat on each side of vehicle. **Do not remove smaller bolt.** Loosely install side accessory plates as shown with **rubber washer** under plate at all for bolts. Side mounts are marked DS for driver's side and PS for passenger side.

Do not tighten these bolts until last. Leave loose!

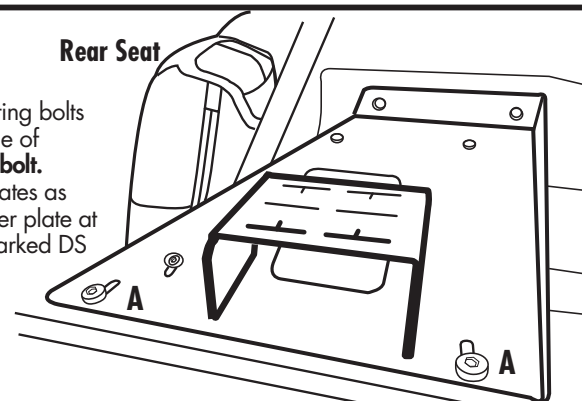

STEP 03:


If installing with one person, install box or support in center of cargo area to elevate center tray to correct height

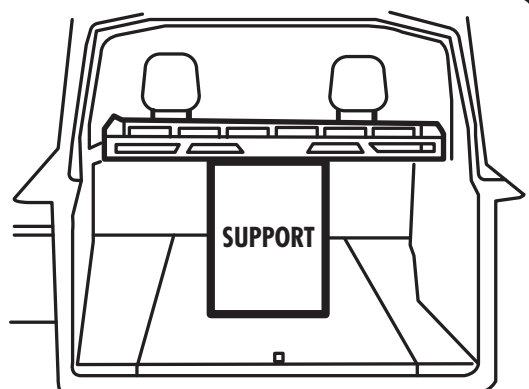

STEP 04:

Install tray to side mounts using 4 3/8 16 bolts, washers and lock nuts on each side. There are two heights to choose.

As you tighten bolts, be sure the mounts are aligned with tray. Tighten securely.

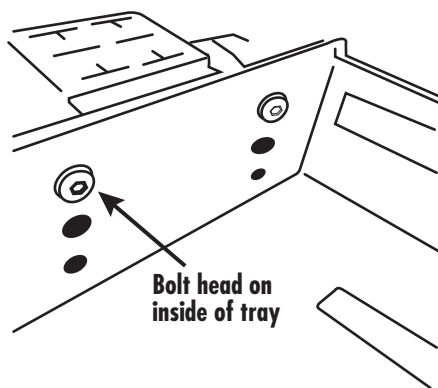

STEP 05:

Tighten side mounting plate bolts last. Be sure tray is centered in vehicle. **DO NOT USE A LEVEL TO CHECK TRAY LEVEL.** Jeeps are preloaded higher on driver's side. Tray should align with top of back seats.

