



Installation Instructions Supertop Glide for JL-2-Door

Vehicle Application:
Jeep® Wrangler 2-Door JL 2018-Current
Part Number 54728

Installation Tips

Before you begin installing your new Supertop Glide, please read all the instructions thoroughly.



WARNING

Do not rely in any way on the components of this product to protect against injury or death in the event of an accident. Never operate the vehicle in excess of manufacturer's specifications.

Read and follow, precisely, all installation instructions provided when installing this product. Failure to do so may result in a poor fit and could place occupants of the vehicle in a potentially dangerous situation.

Important Note:

Before attaching the hardware to the vehicle, it is recommended that you protect the paint on the sport bar. It is also recommended that you have someone help lift the assembled hardware onto the vehicle. It is best to loosely install all of the fasteners until the top is installed then tighten all of the fasteners.



CAUTION

Safety glasses should be worn at all times when installing this product.

WEAR SEAT BELTS AT ALL TIMES



Tools



Safety Glasses



T20, T30 and T50
Torx Drivers



2.5mm Hex Key




10mm Wrench



Torque Wrench



Step Ladder

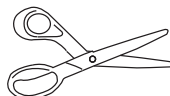

Scissors

Installation Time



4 hours

Skill Level



3 - Moderately Difficult

Support

We're here to help! Go to:
<https://www.bestop.com>
and click on **Need Help?**



<https://www.bestop.com/video-library>



Installation Instructions Supertop Glide for JL-2-Door

Vehicle Application:
Jeep® Wrangler 2-Door JL 2018-Current
Part Number 54728

Sugerencias de Instalación

Antes de empezar a instalar esta unidad, lea atentamente todas las instrucciones.

Para un buen ajuste:

Para facilitar la instalación, el producto debe instalarse a temperaturas superiores a 72 °F (22 °C).

Por debajo de esta temperatura, la tela puede encogerse una pulgada o más, lo que dificultaría su ajuste al vehículo.

Es normal que la tela se contraiga o arrugue cuando está guardada en la caja de empaque. A los pocos días después de la instalación, la tela se relajará y las arrugas desaparecerán.



ADVERTENCIA

Este producto se diseñó principalmente para mejorar la apariencia del vehículo y proteger a los ocupantes de las condiciones climáticas comunes. De ninguna manera piense que los componentes de este producto pueden servir como medio de contención para los ocupantes del vehículo o que pueden protegerlos contra lesiones o la muerte en caso de accidente. Este producto no protegerá a los ocupantes contra caídas de objetos. Nunca conduzca este vehículo fuera de las especificaciones del fabricante.

USE LOS CINTURONES DE SEGURIDAD EN TODO MOMENTO

Lea y siga con precisión todas las instrucciones de instalación que se proporcionan para instalar este producto. Si no lo hace, podría producirse un mal ajuste que colocaría a los ocupantes del vehículo en una situación potencialmente peligrosa.



PRECAUCIÓN

Debe usar gafas protectoras en todo momento durante la instalación de este producto.

Conseils pour l'installation

Lire toutes les instructions au complet avant de commencer l'installation de cet assemblage.

Pour un ajustement sans problème :

Afin de faciliter l'installation, ce produit doit être installé à des températures au-dessus de 72 °F (22 °C).

Sous cette température, le tissu peut rétrécir d'un pouce (2,5 cm) ou plus, ce qui rendra l'ajustement sur le véhicule difficile.

Il est normal que le tissu rétrécisse et plisse pendant qu'il est dans la boîte d'expédition. En quelques jours après l'installation, le tissu se détendra et les plis disparaîtront.



AVERTISSEMENT

Ce produit est conçu principalement pour améliorer l'apparence du véhicule et pour protéger les occupants des conditions météorologiques usuelles. Ne jamais se fier aux composants de ce produit pour se protéger de blessures ou de la mort en cas d'accident. Ce produit ne protégera pas les occupants des chutes d'objets. Ne jamais utiliser le véhicule au-delà des caractéristiques techniques indiquées par le fabricant.


PORTER UNE CEINTURE DE SÉCURITÉ EN TOUT TEMPS

Lire et suivre, très fidèlement, toutes les instructions d'installation fournies lors de l'installation de ce produit. Ne pas suivre cette consigne peut causer une installation inadéquate et mettre les occupants du véhicule dans une situation potentiellement dangereuse.



MISE EN GARDE


Des lunettes de sécurité doivent être portées en tout temps lors de l'installation de ce produit.


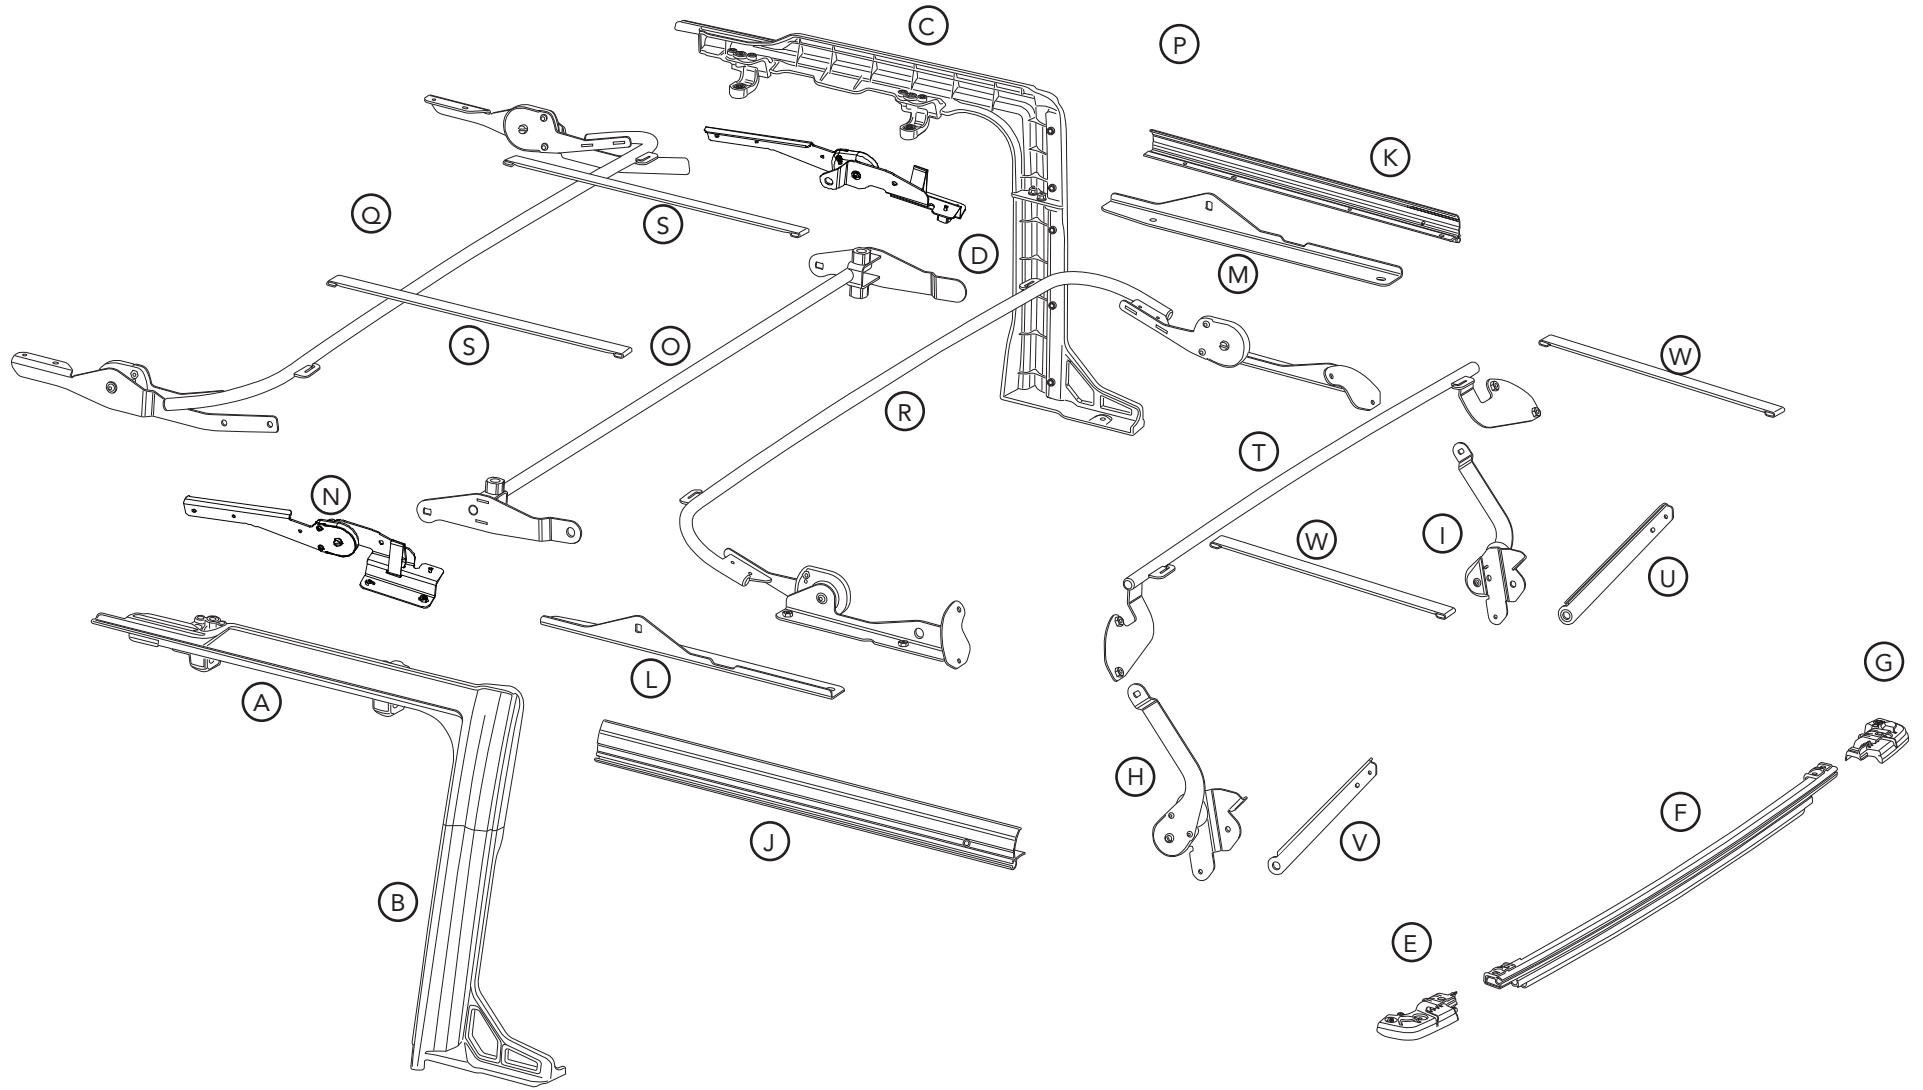




A	Door Rail Upper Left	577.07
B	Door Rail Lower Left	577.09
C	Door Rail Upper Right	577.06
D	Door Rail Lower Right	577.08
E	Tailgate Bar Retainer Left	575.39
F	Tailgate Bar	575.33
G	Tailgate Bar Retainer Right	575.38
H	Rear Bow Arm Left	669.91
I	Rear Bow Arm Right	669.90
J	Quarter Window Retainer Left	665.91
K	Quarter Window Retainer Right	665.90
L	Mounting Bracket Left	664.11
M	Mounting Bracket Right	664.10
N	Sunrider Arm Assembly Left	663.33
O	4 Bar Assembly	663.24
P	Sunrider Arm Assembly Right	663.32
Q	#2 Bow Assembly	663.23
R	#3 Bow Assembly	663.27
S	2 to 3 Bow Strap Assembly (2 ea) (Long)	669.60
T	#4 Bow Assembly	669.70PW
U	#5 Bow Arm Right	669.80PW
V	#5 Bow Arm Left	669.81PW
W	4 to Halo Strap Assembly (2 ea) (Short)	669.89


Small Parts Kit #670.12

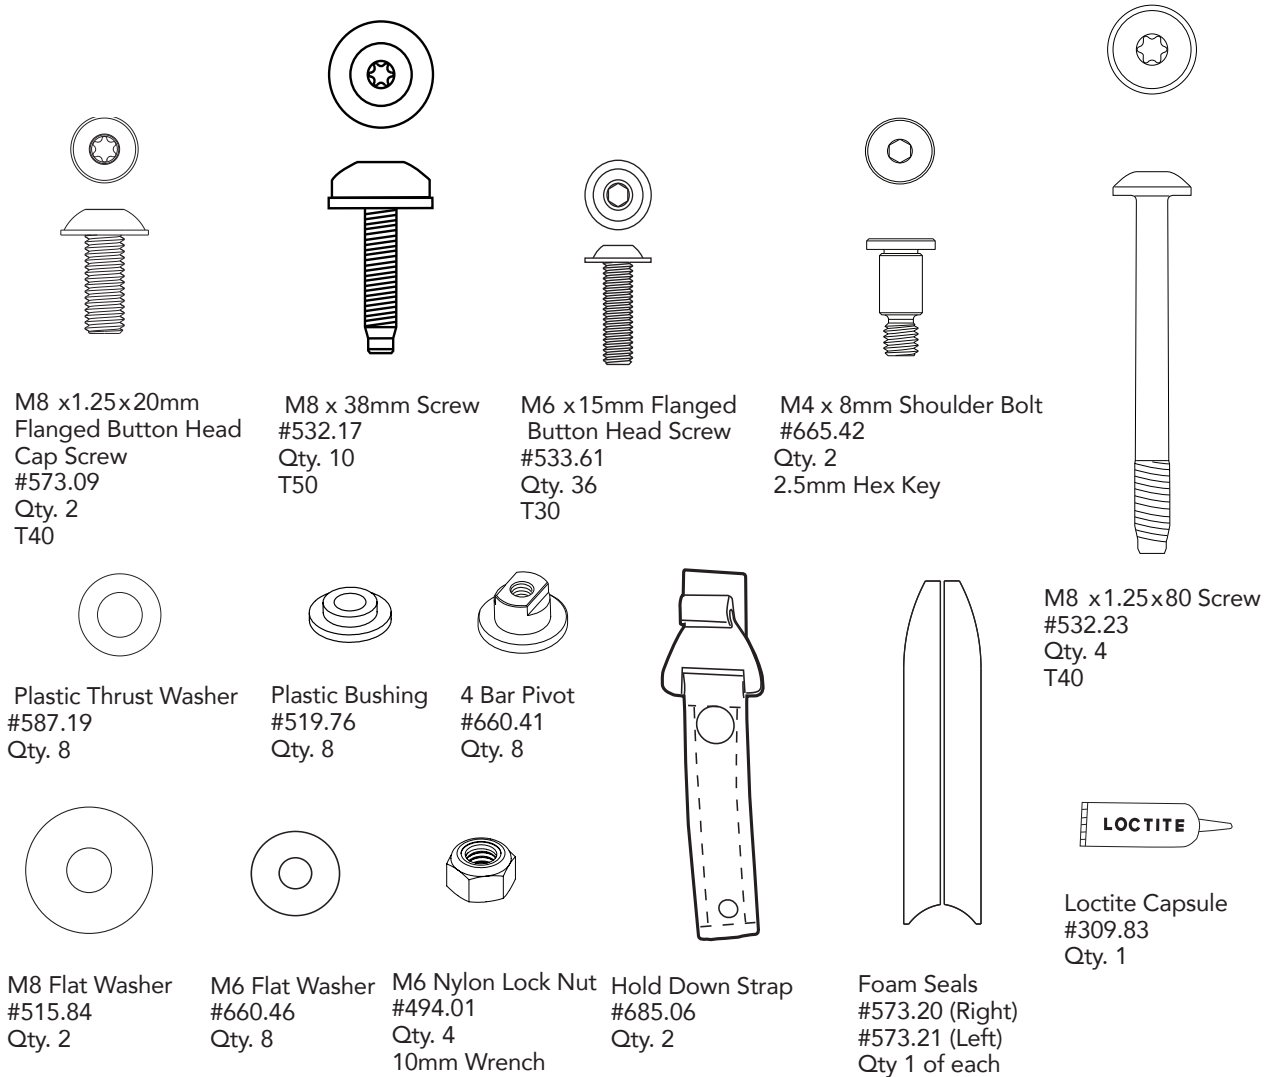

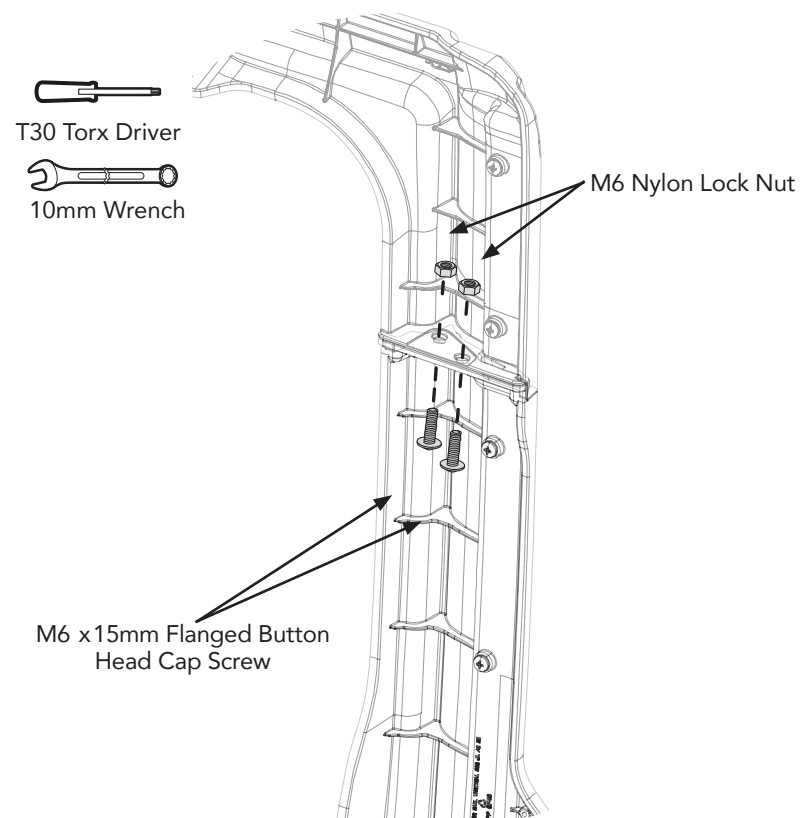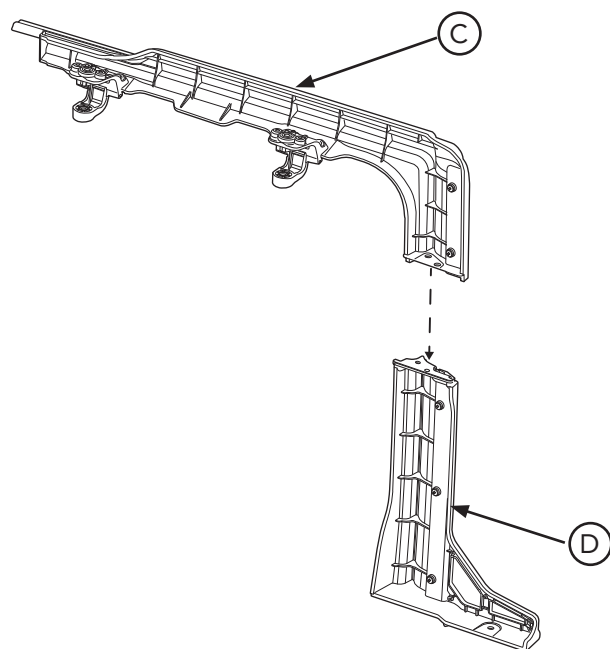

NOTE: Screws must be inserted from the bottom up.


Repeat this on the Left side Door Rails.

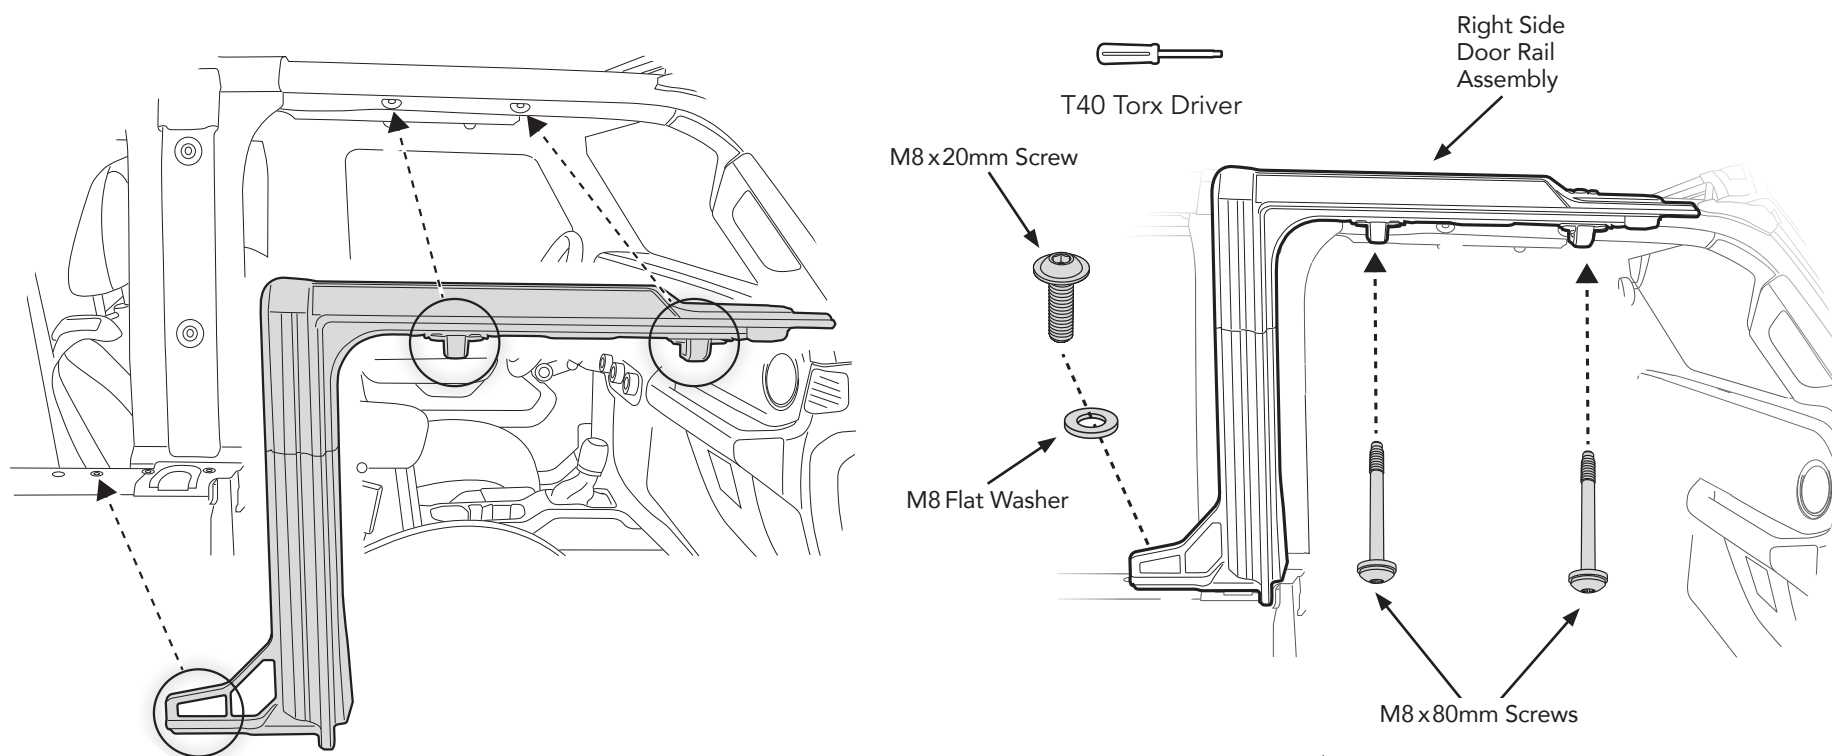


Repeat on left side of vehicle.

NOTE: To prevent over tightening, Use a Screwdriver type Torx driver if a torque wrench is not available.

Torque specs	
6mm fasteners	5.16 ft/lbs (61 in/lbs)
8mm Fasteners	14.75 ft/lbs (106+ in/lbs)

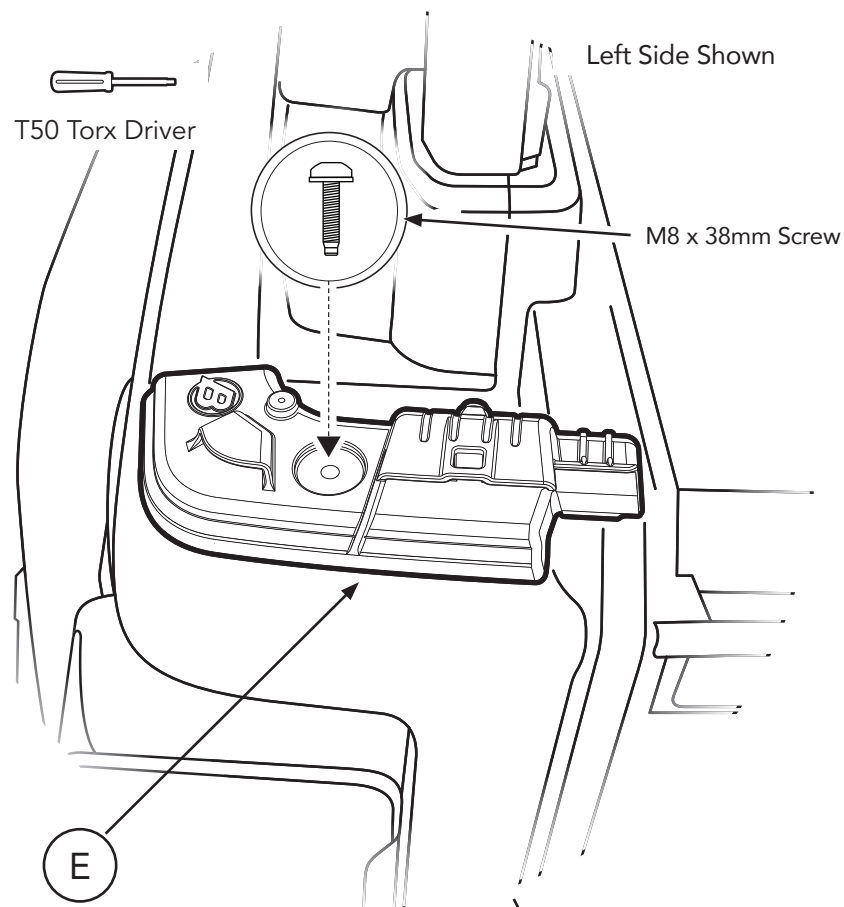


Repeat on right side of vehicle.


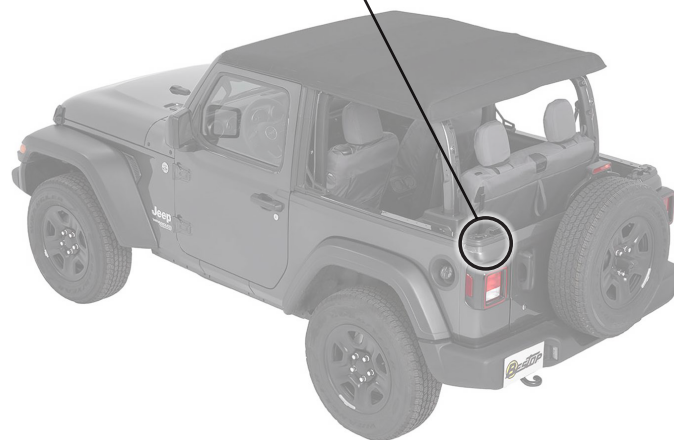


Torque specs
6mm fasteners
5.16 ft/lbs (61 in/lbs)
8mm Fasteners
14.75 ft/lbs (106+ in/lbs)


NOTE: The frame should be pre-assembled on the ground
(Assemble upside down)

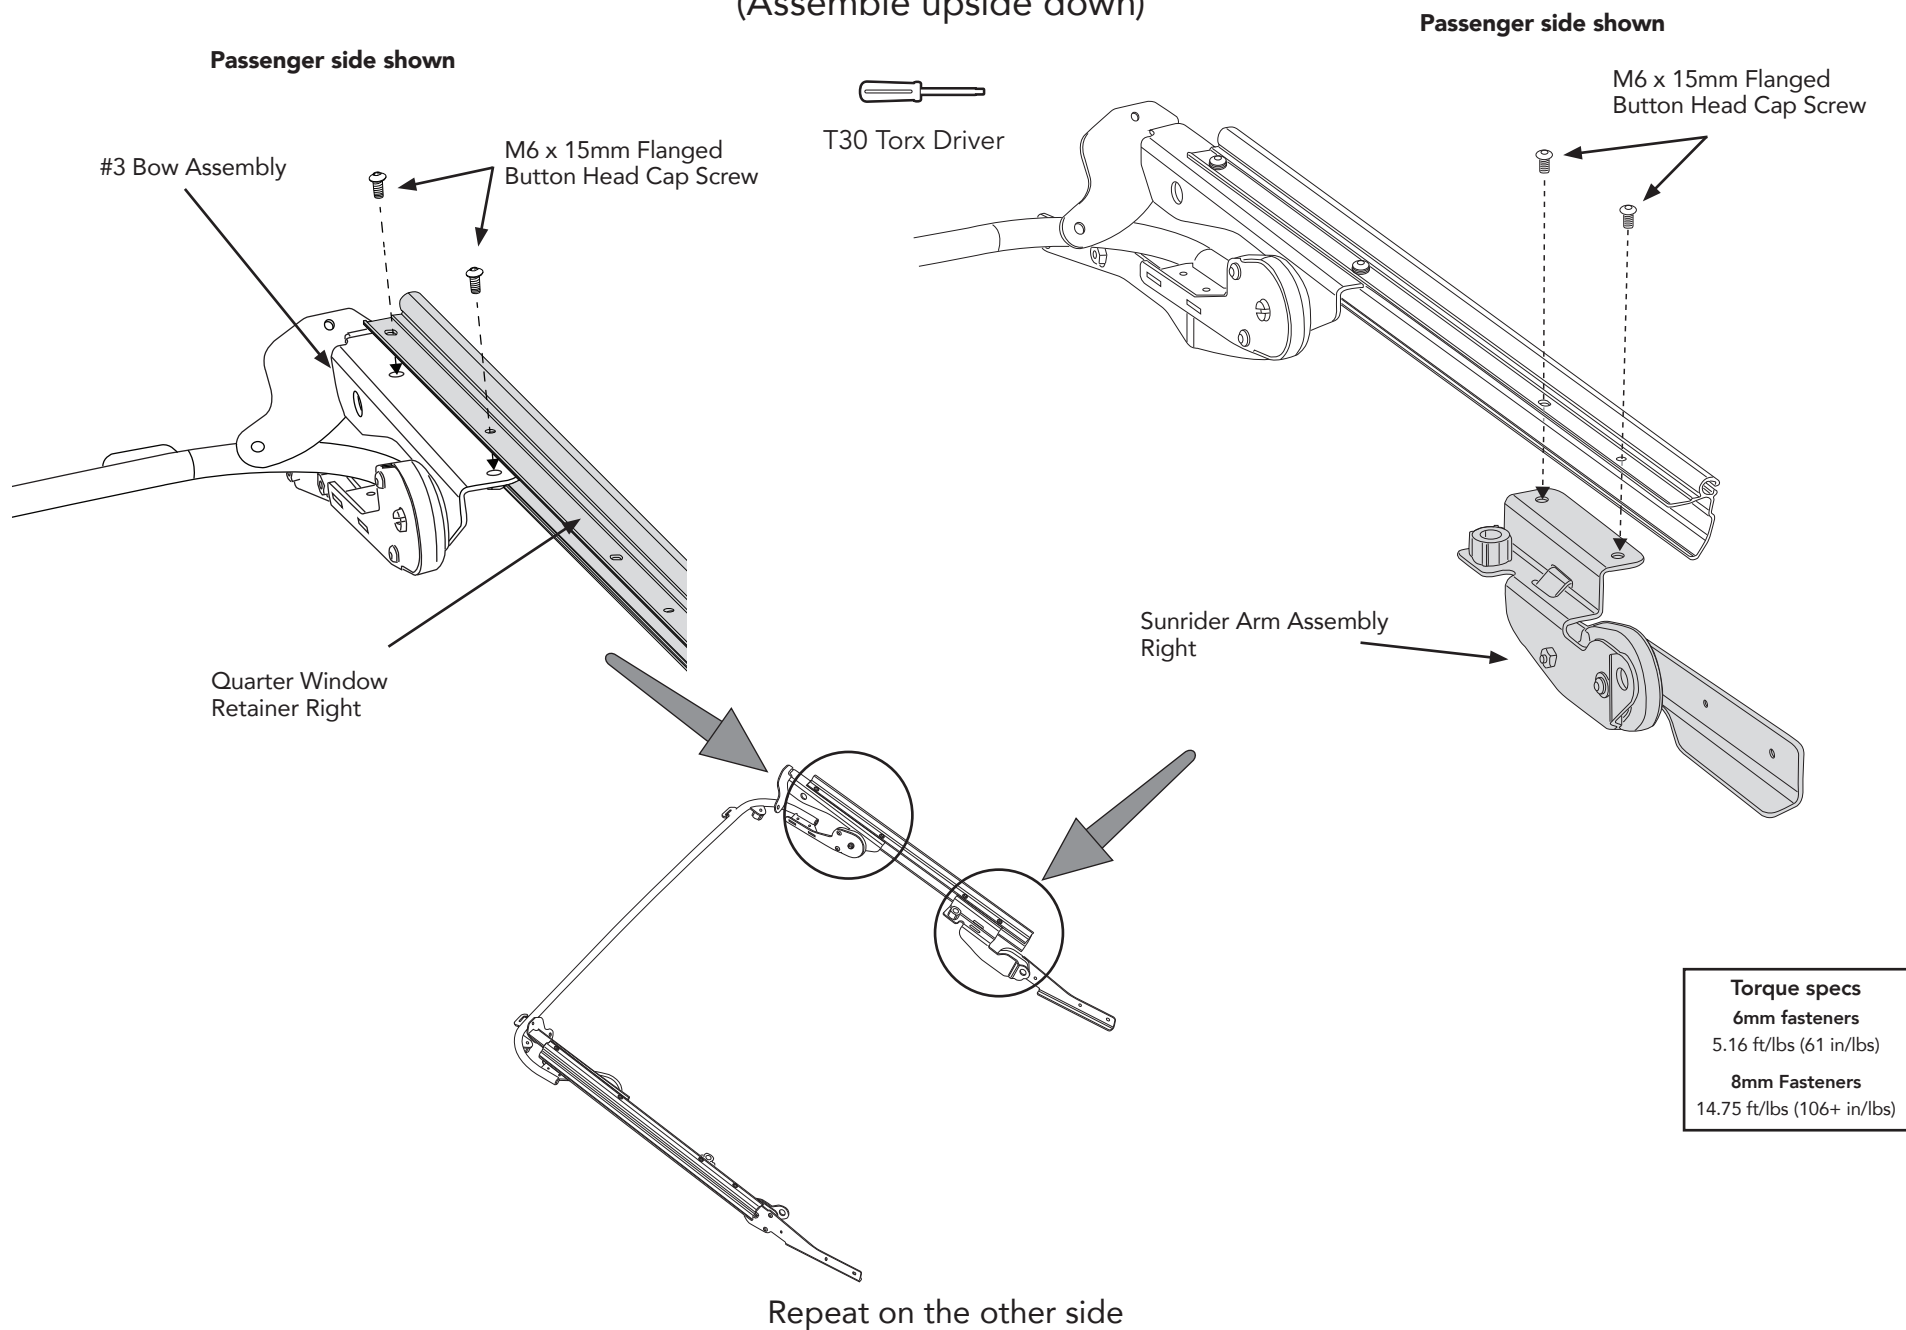

(Assemble upside down)

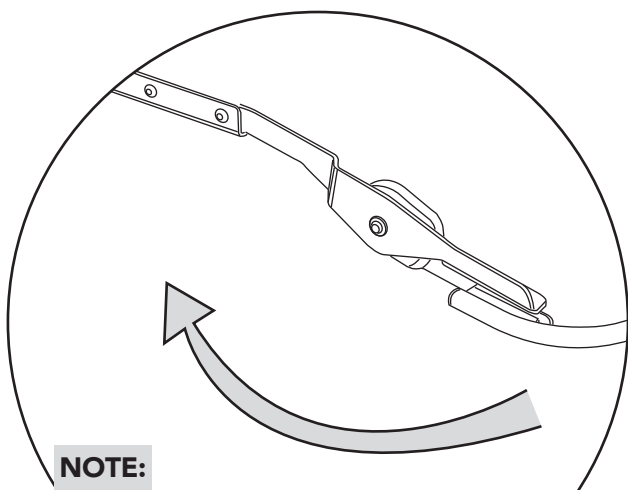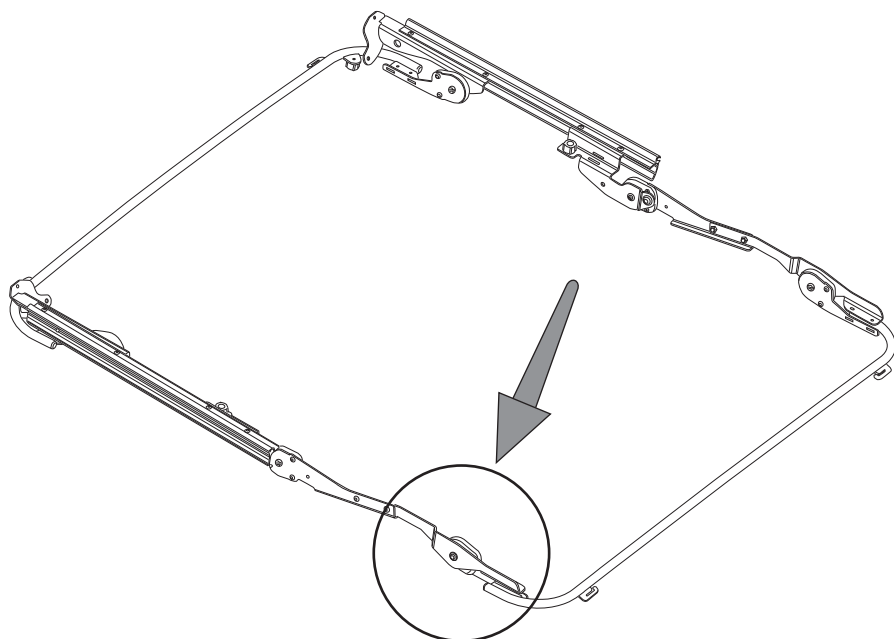**NOTE:**

The #2 Bow needs to be able to pivot downward when installed correctly. When the assembly is installed on the vehicle, the #2 Bow will pivot upward.

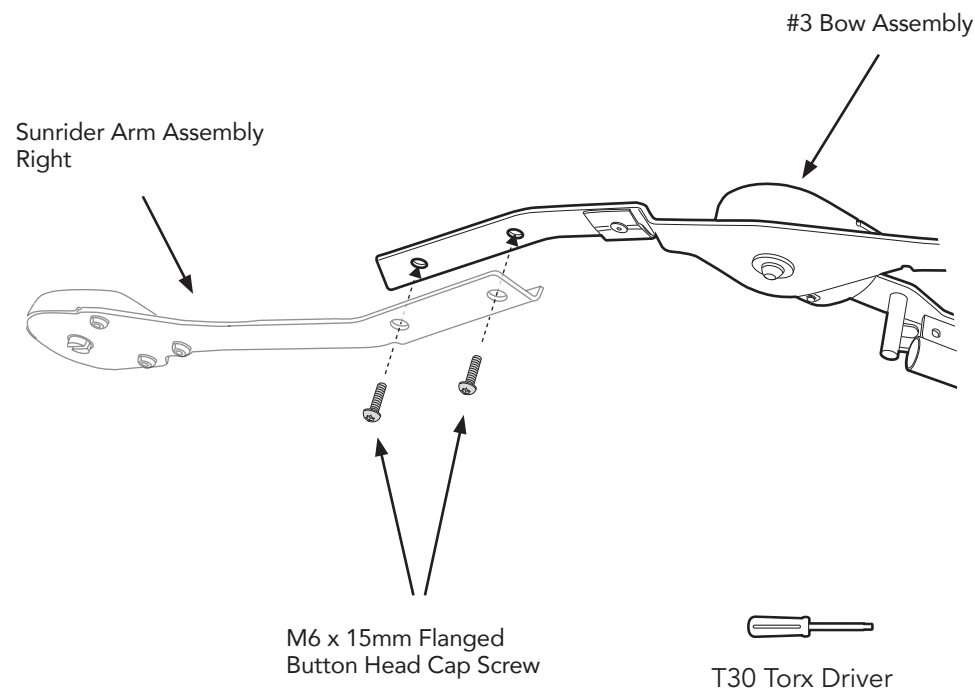

Repeat on the other side

Torque specs	
6mm fasteners	5.16 ft/lbs (61 in/lbs)
8mm Fasteners	14.75 ft/lbs (106+ in/lbs)

Passenger side shown

4 Bar Assembly

T30 Torx Driver

M6 x 15mm Flanged
Button Head Cap Screw

M6 Flat Washer

Mounting Bracket Right

Plastic Bushing

Plastic Thrust Washer

4 Bar Pivot


Front of Vehicle
(Shown Right side up)


End View

Repeat on the other side

Torque specs
6mm fasteners
5.16 ft/lbs (61 in/lbs)
8mm Fasteners
14.75 ft/lbs (106+ in/lbs)

Passenger side shown
(Assemble upside down)

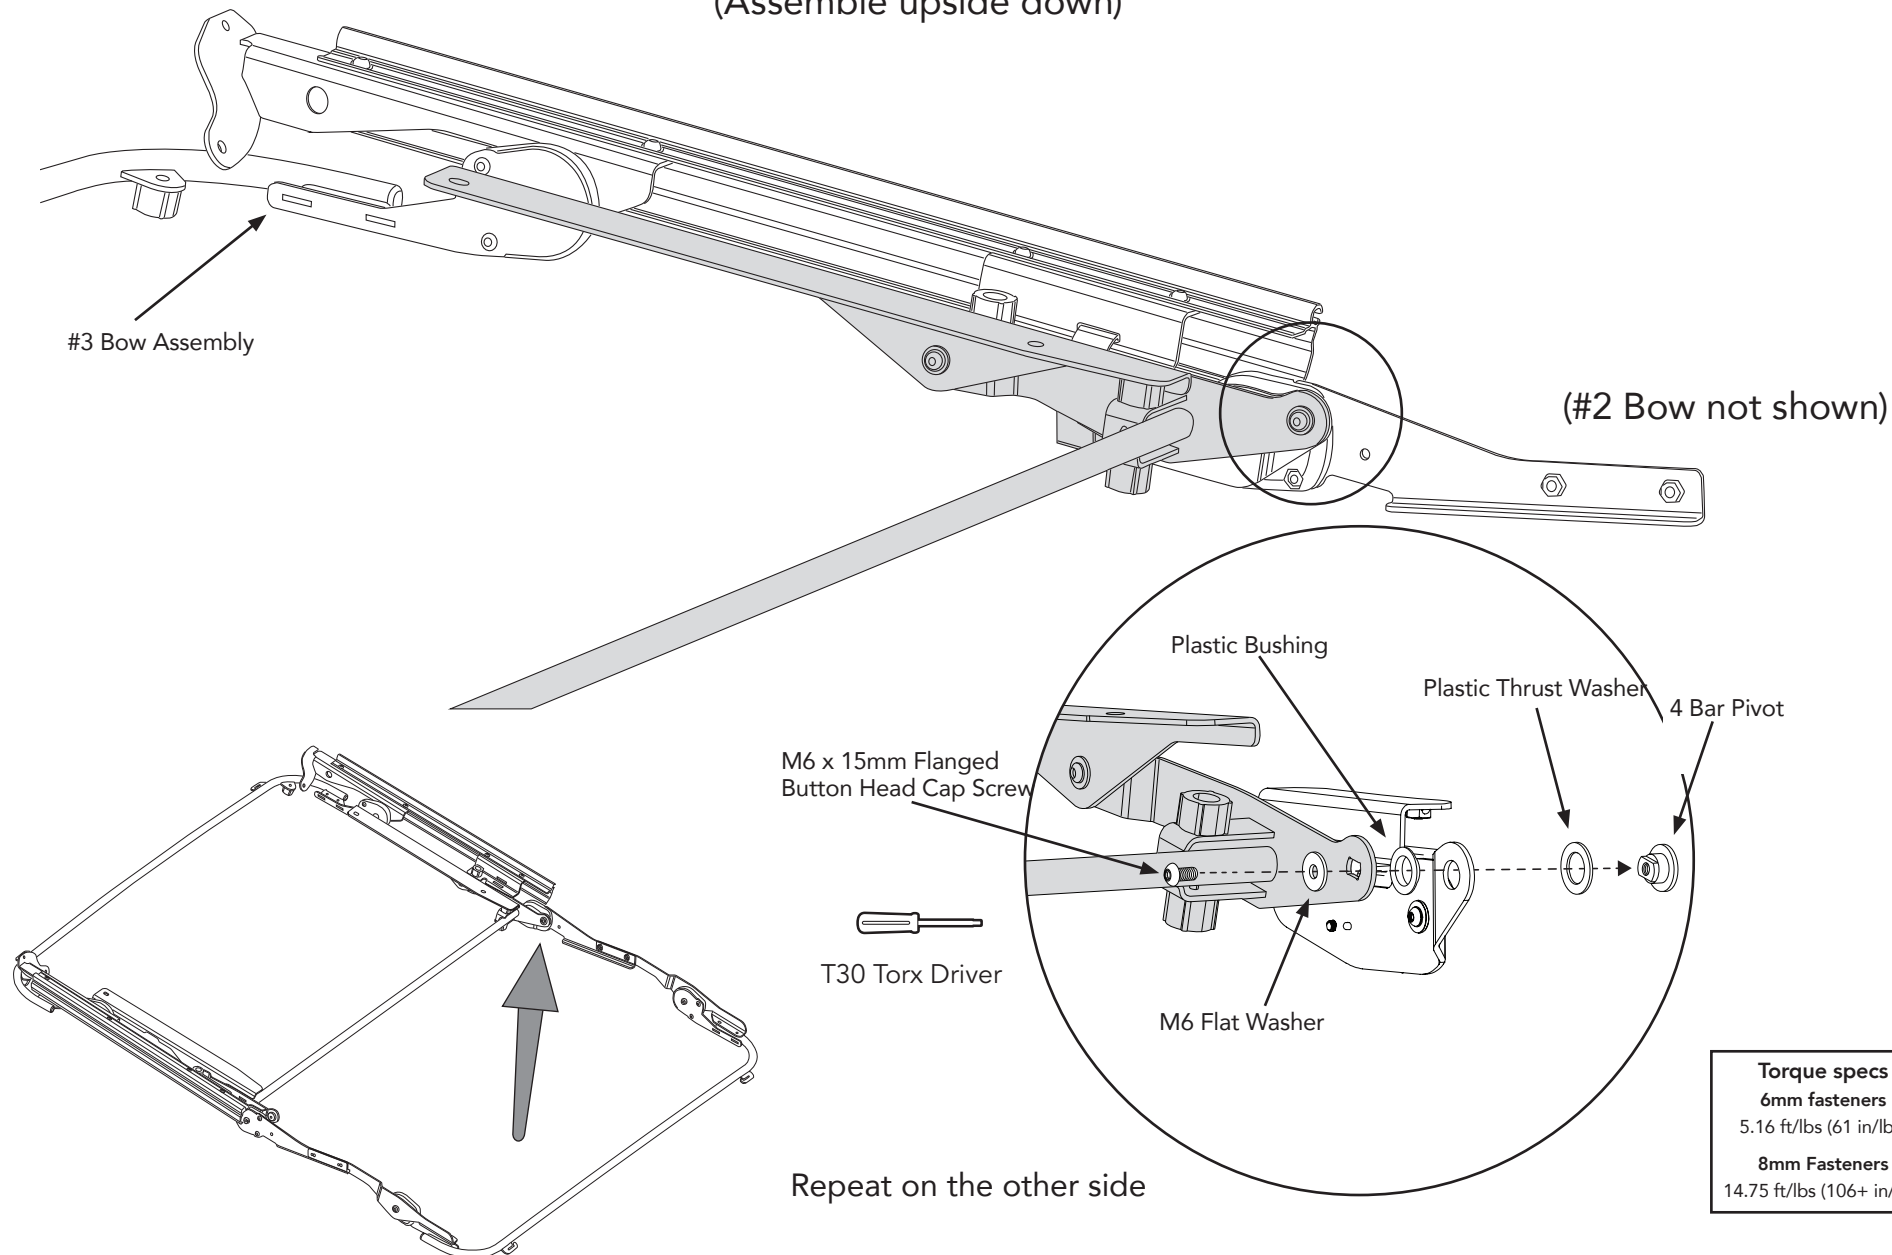

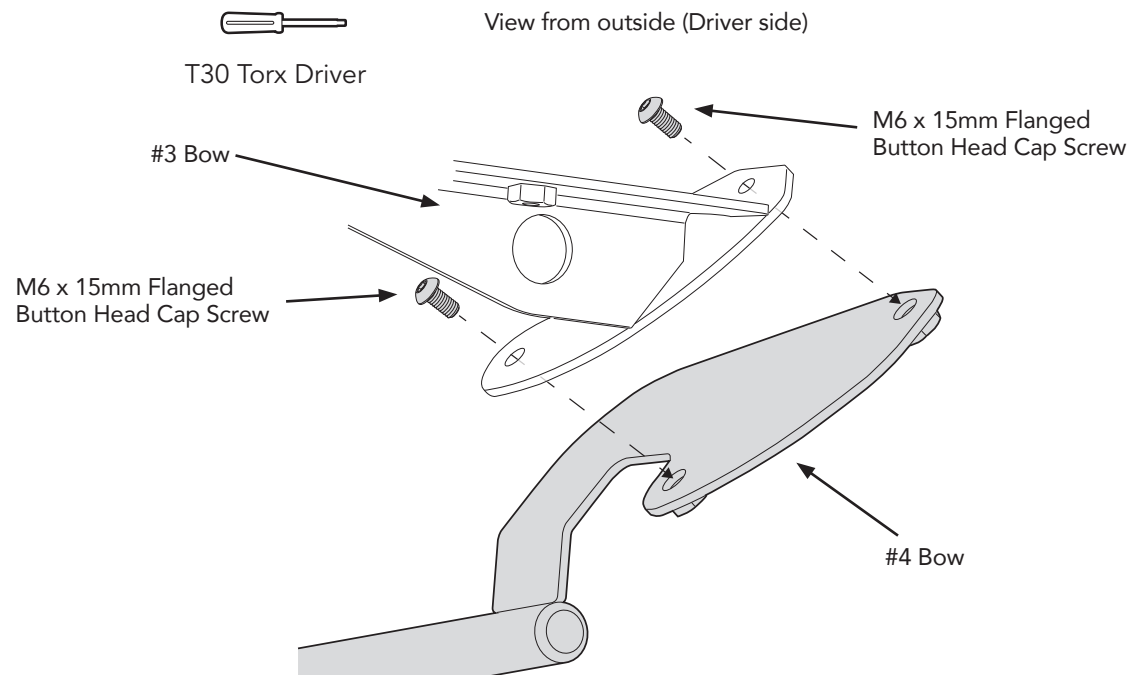


Start all 4 screws (2 from each side) before tightening .

Torque specs	
6mm fasteners	5.16 ft/lbs (61 in/lbs)
8mm Fasteners	14.75 ft/lbs (106+ in/lbs)


(Assemble upside down)



Passenger side shown (Outside)

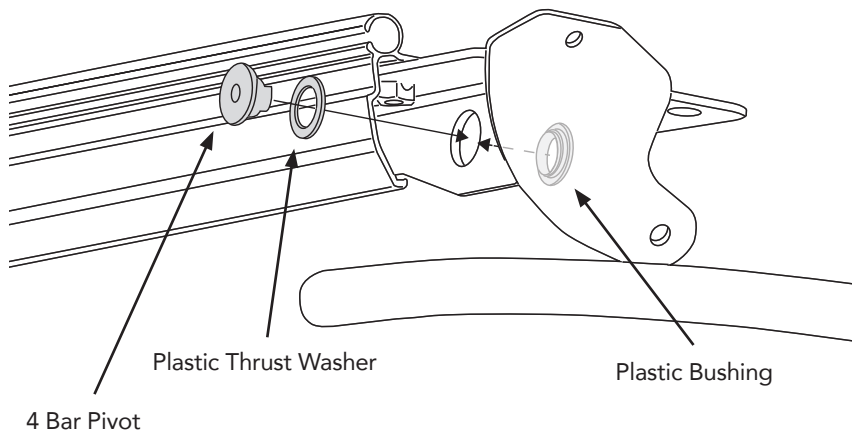


Passenger side shown (Inside)

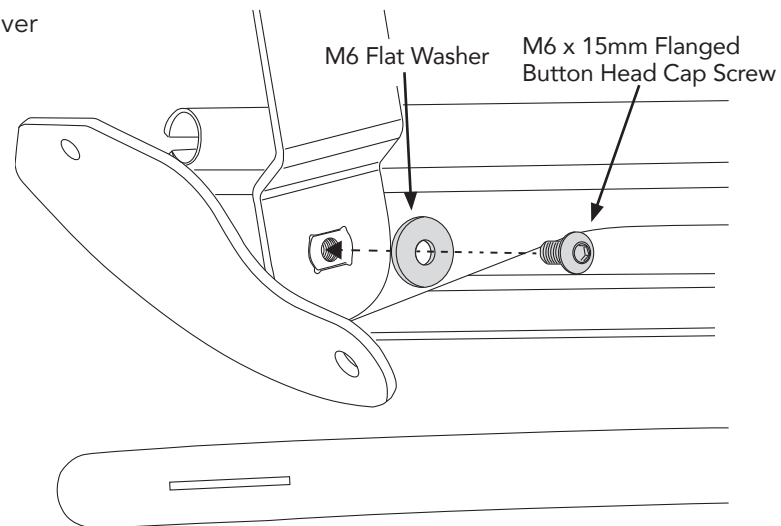

NOTE: #4 Bow not shown




Rear Bow Arm (Right)

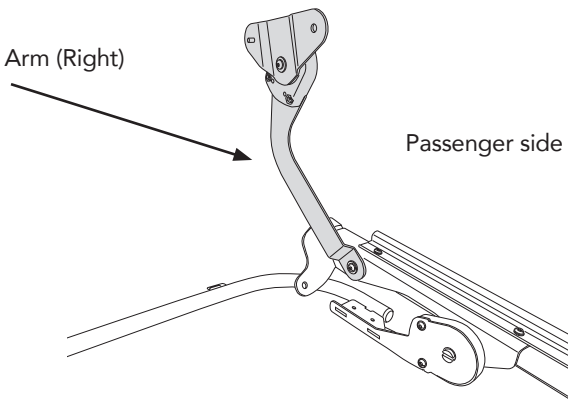


Passenger side shown (Inside)

Torque specs	
6mm fasteners	5.16 ft/lbs (61 in/lbs)
8mm Fasteners	14.75 ft/lbs (106+ in/lbs)

Repeat on the other side

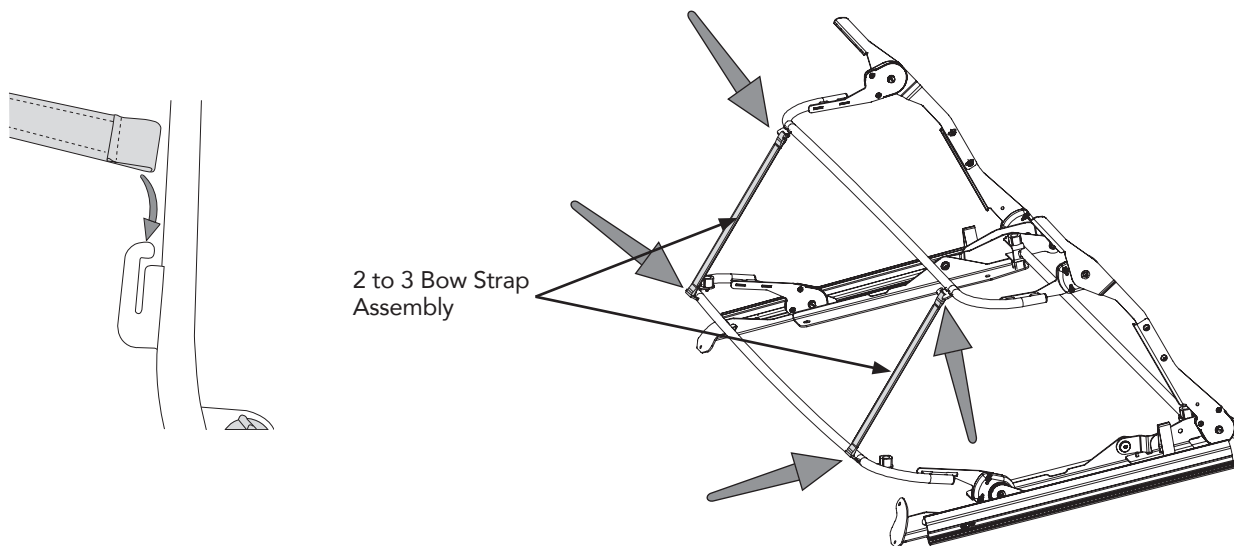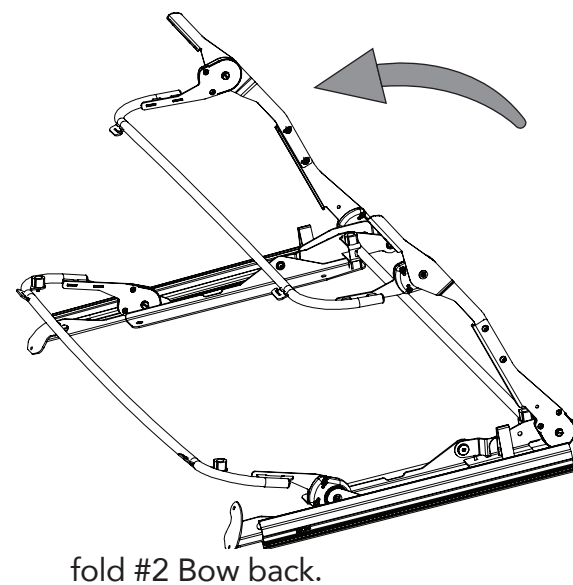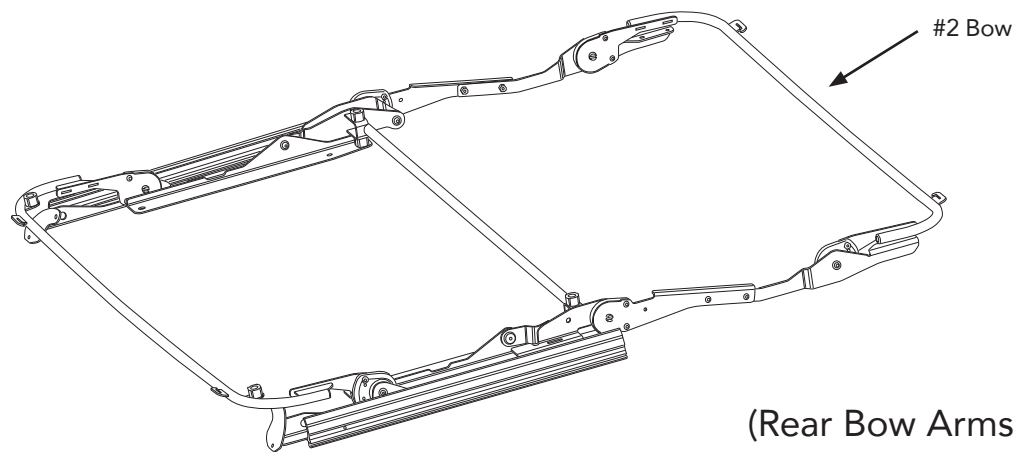



NOTE: Don't allow the straps to twist when installing, it will cause a poor fitting top.

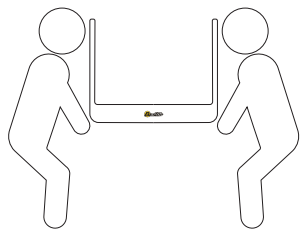

Get a friend (Or someone who owes you a favor) to help you lift the Frame Assembly onto the top of the vehicle.

Tip

The Sportbar may become scratched during this step, we recommend tape or something to protect the paint.

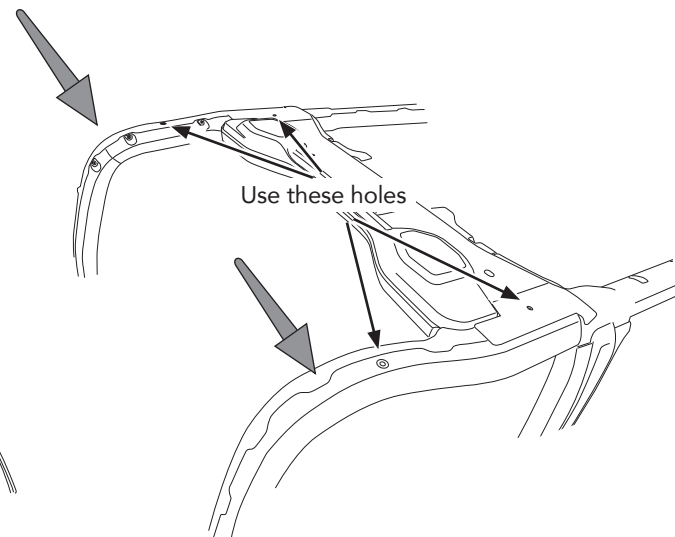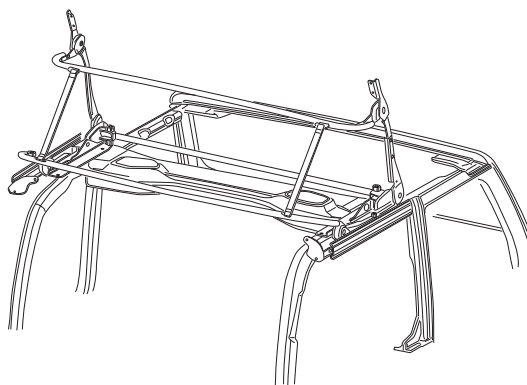


Use these holes

Passenger side shown




T50 Torx Driver

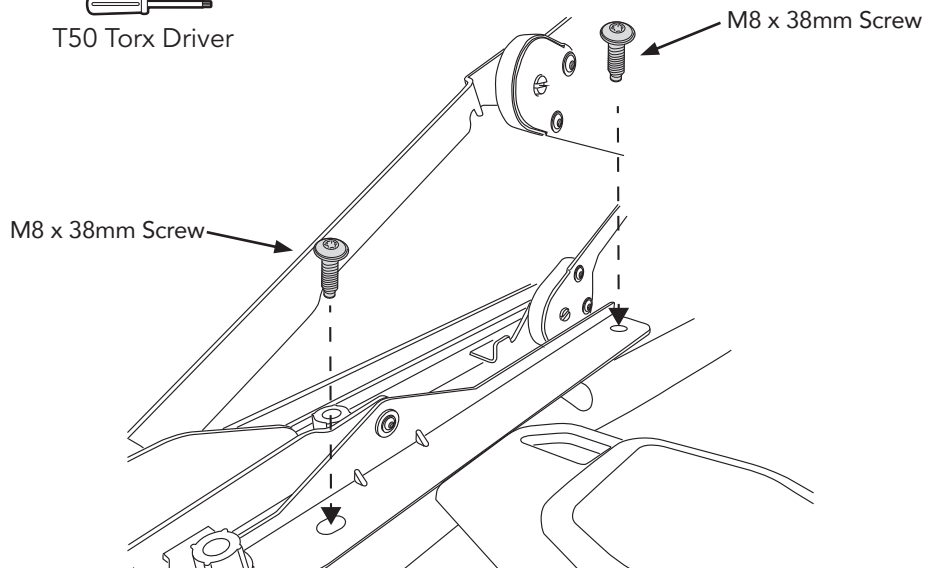

M8 x 38mm Screw



M8 x 38mm Screw

Passenger side shown

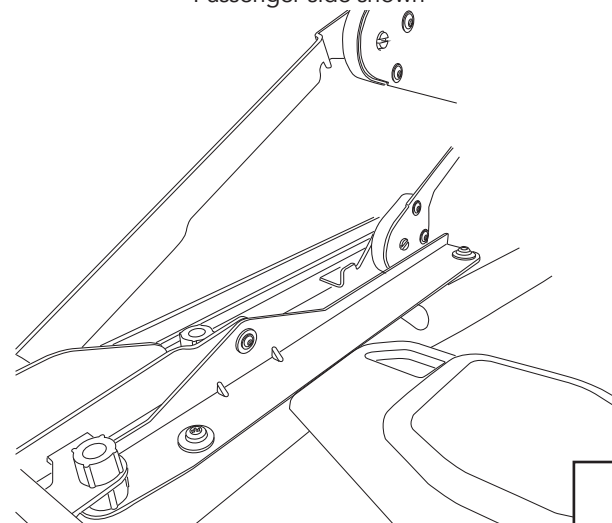


Repeat on the other side


Torque specs	
6mm fasteners	5.16 ft/lbs (61 in/lbs)
8mm Fasteners	14.75 ft/lbs (106+ in/lbs)

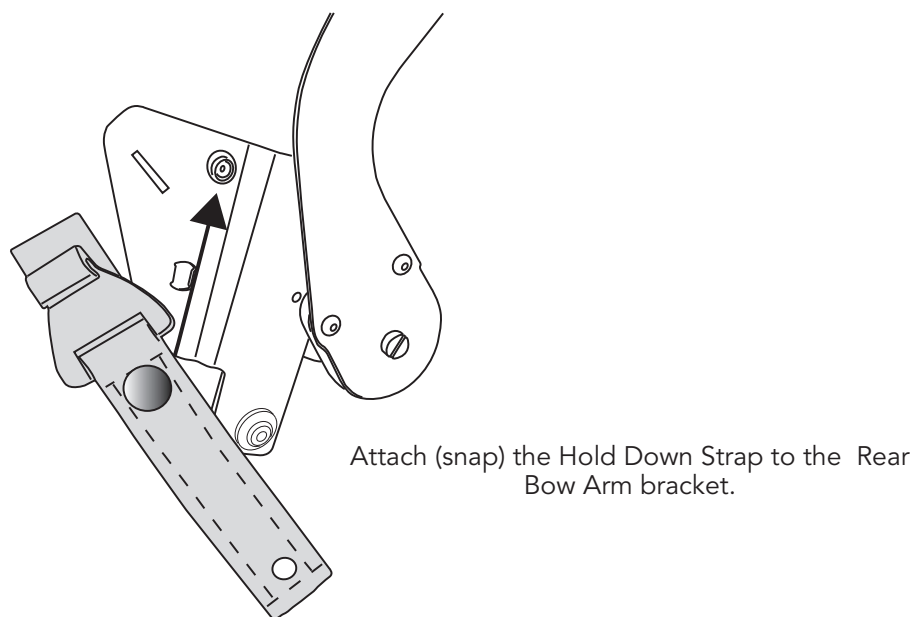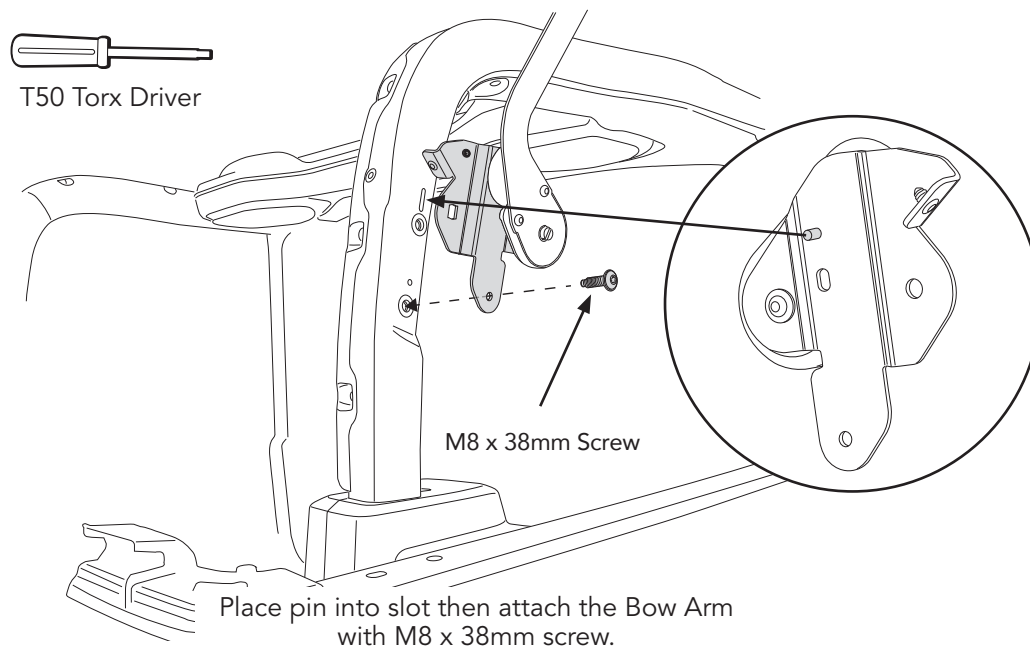

<p>Torque specs</p> <p>6mm fasteners</p> <p>5.16 ft/lbs (61 in/lbs)</p> <p>8mm Fasteners</p> <p>14.75 ft/lbs (106+ in/lbs)</p>

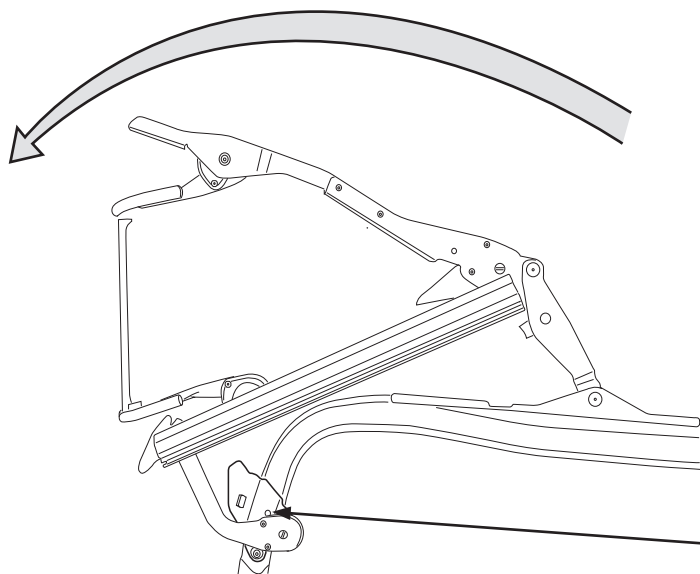


Fold the frame assembly rearward enough to expose the second mounting hole.

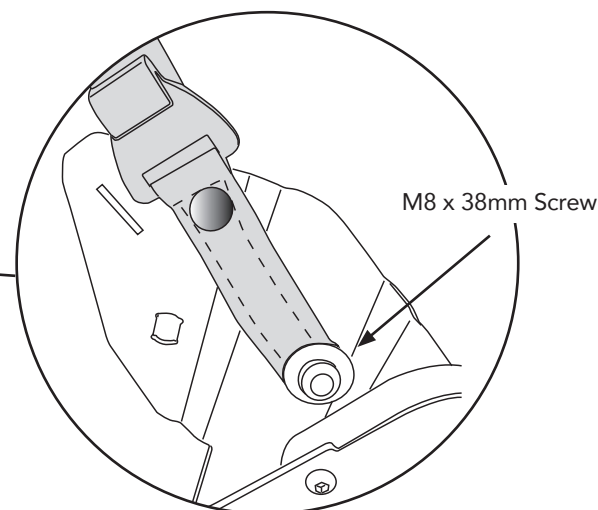



Align the hole in the strap with the hole in the mounting bracket then secure with a M8 x 38mm screw.

Repeat on the left side

Torque specs	
6mm fasteners	5.16 ft/lbs (61 in/lbs)
8mm Fasteners	14.75 ft/lbs (106+ in/lbs)

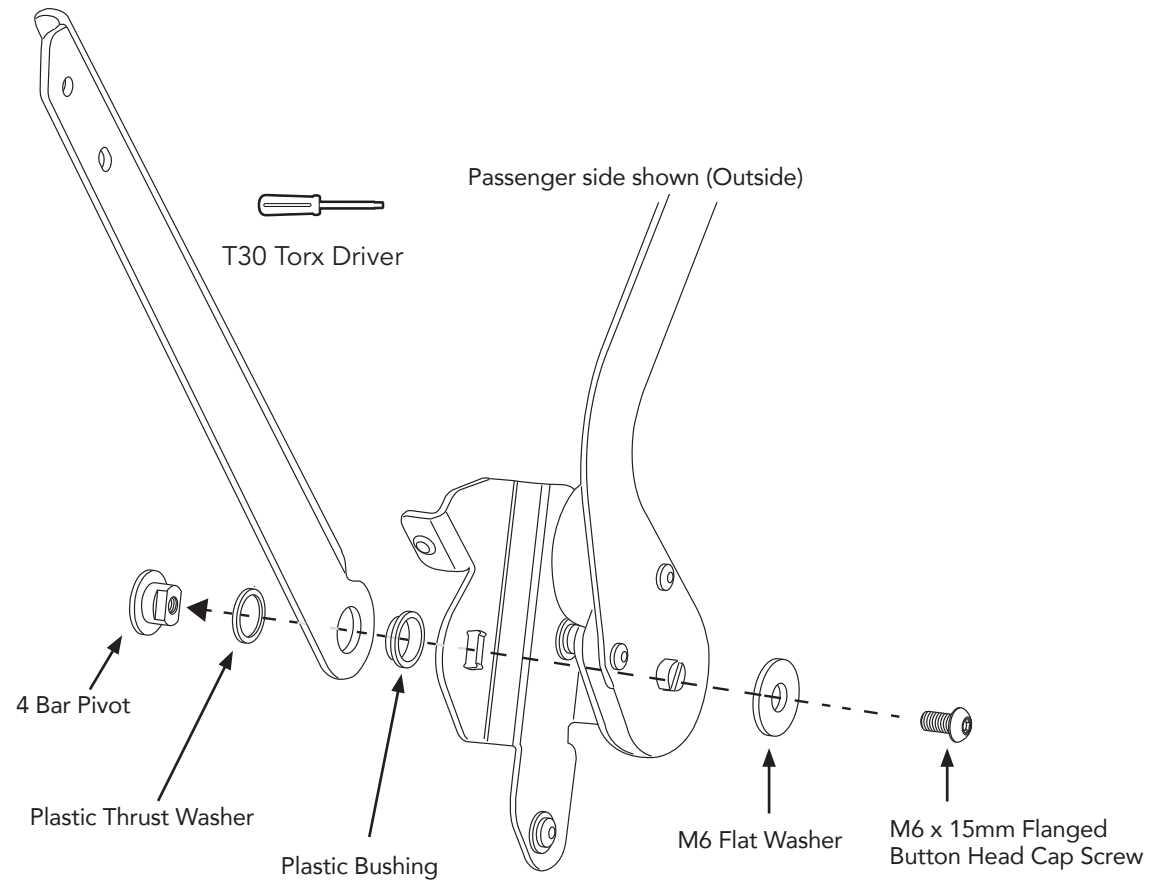

Torque specs	
6mm fasteners	5.16 ft/lbs (61 in/lbs)
8mm Fasteners	14.75 ft/lbs (106+ in/lbs)

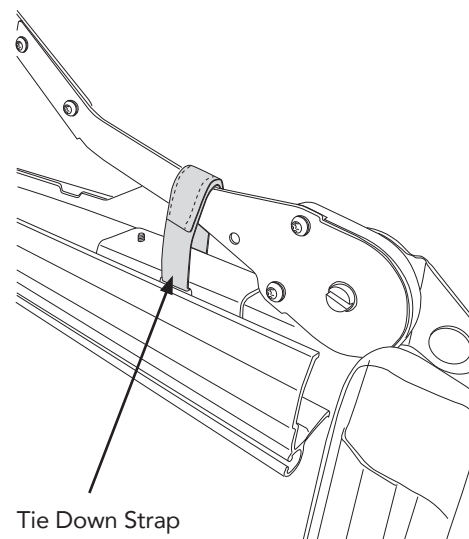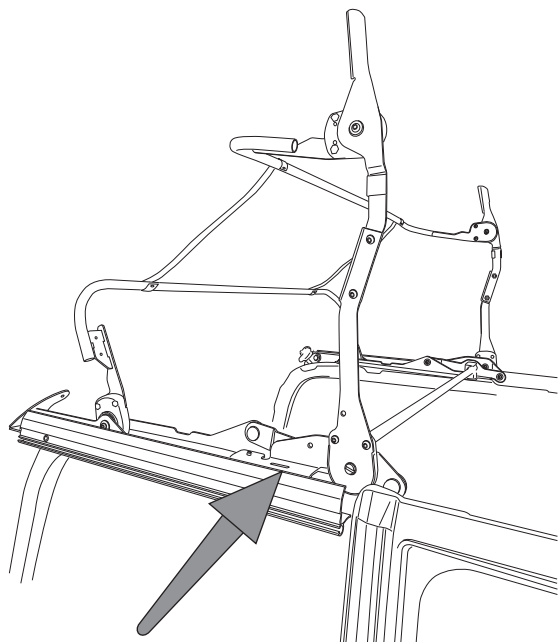

Tip

Tie Down Straps can be used while driving off road to help prevent the frame assembly from bouncing.




T20 Torx Driver

Remove these two screws. HOLD ONTO THESE SCREWS FOR REUSE.



Fold tab back.

Repeat on other side of Fabric/Header Assy.

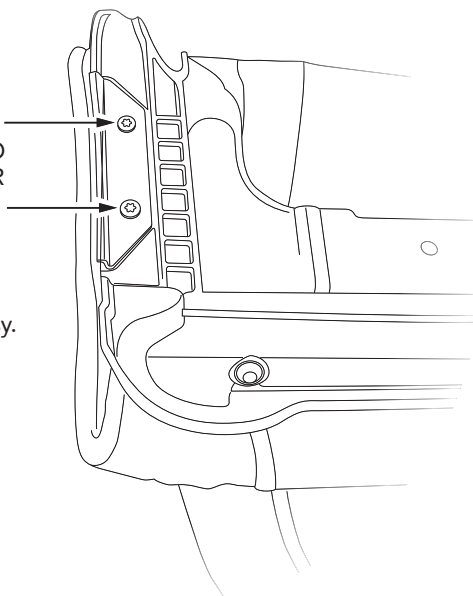

Repeat on the other side.


Tip

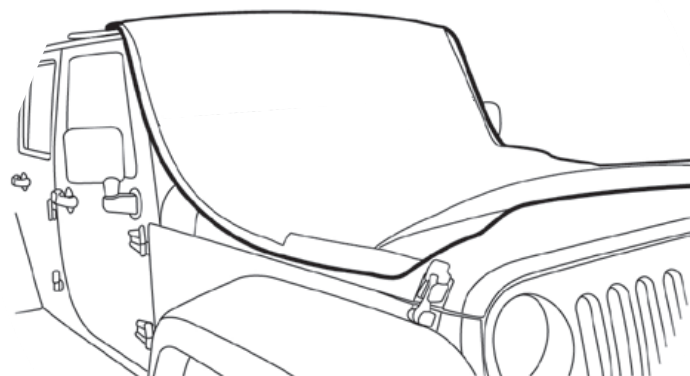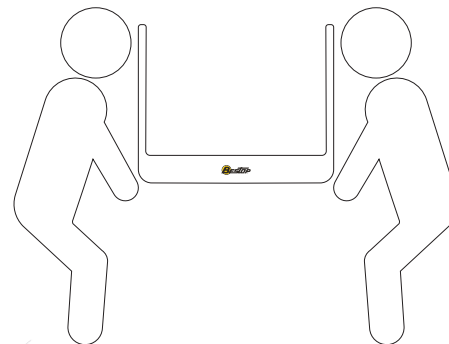

Place the Fabric/Header Assembly on the hood of the vehicle then place the Header on top of the windshield.


Tip

Place a blanket on top of the hood to protect the paint.


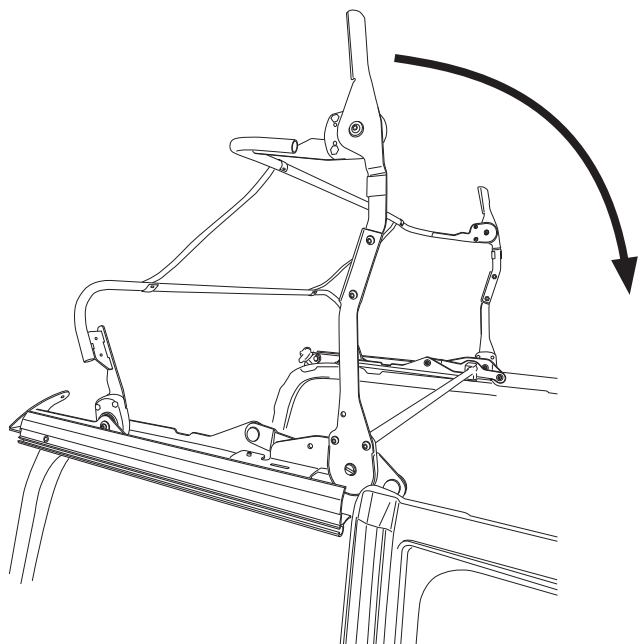


T30 Torx Driver


M6 x 15mm Flanged
Button Head Cap Screw

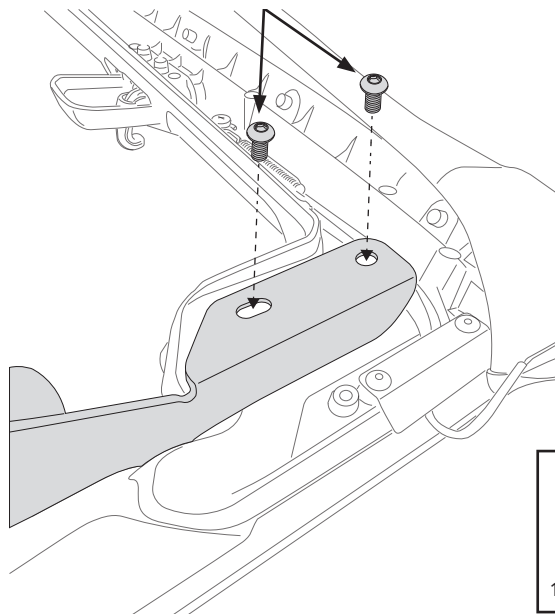


Torque specs
6mm fasteners
 5.16 ft/lbs (61 in/lbs)
8mm Fasteners
 14.75 ft/lbs (106+ in/lbs)

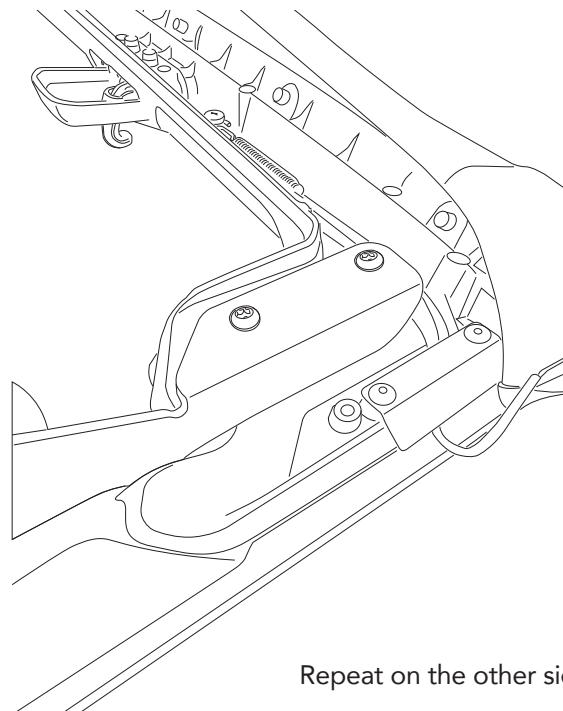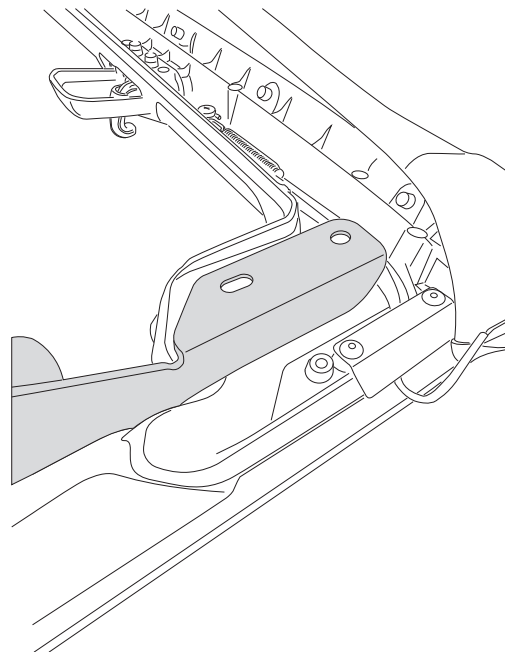

Repeat on the other side.

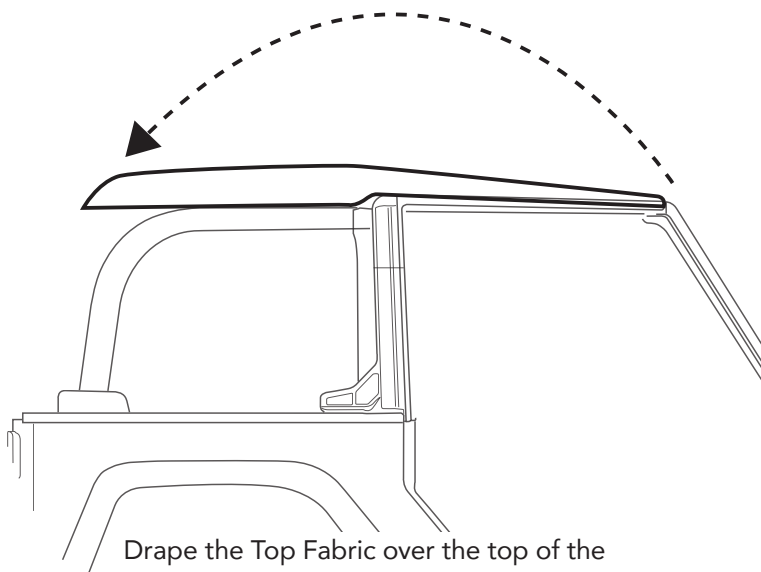

Drape the Top Fabric over the top of the Jeep Sport Bars, and the #2, #3 and #4 Bows.

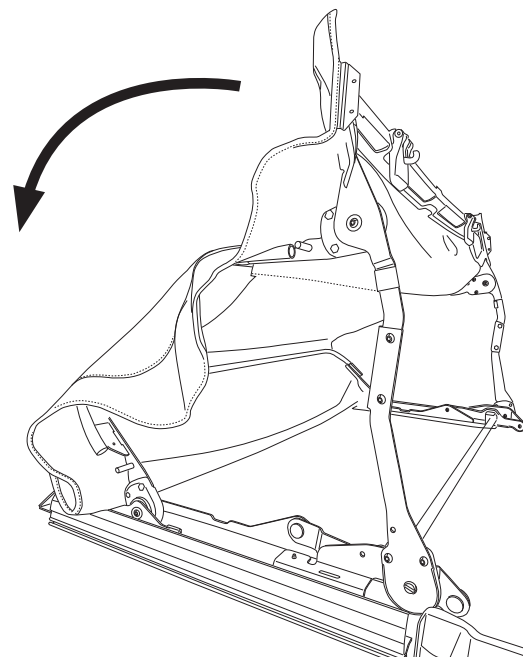

Fold The top Assembly back




T20 Torx Driver



Fold tab back.

Replace these two screws.


Repeat on other side of Fabric/Header Assy.

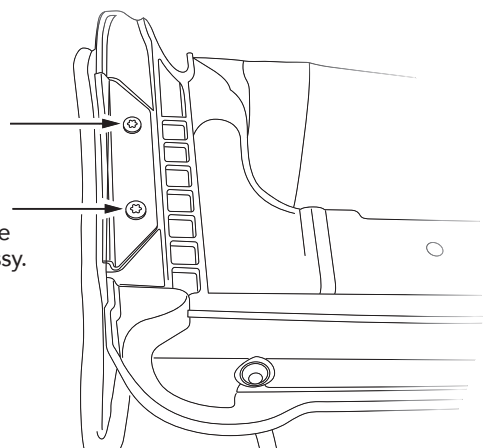


Foam Seal

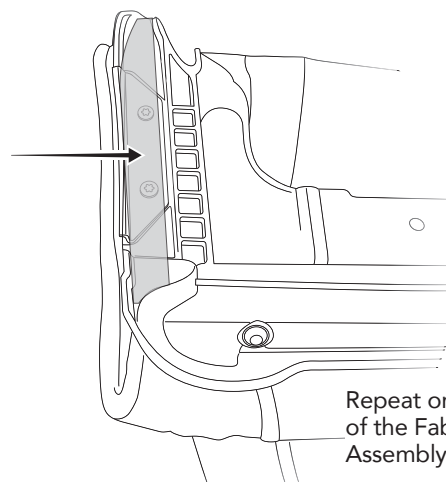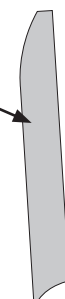


Repeat on the other side of the Fabric/Header Assembly.

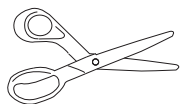


Scissors

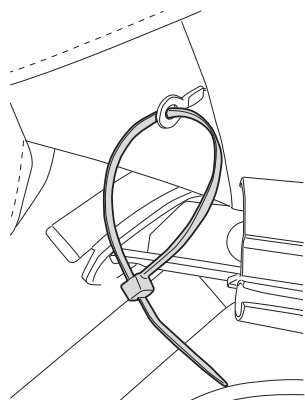

Cut plastic wire tie from the ring terminal located at the end of the cable and discard it.

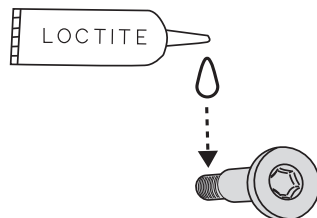

Slit in Top Fabric

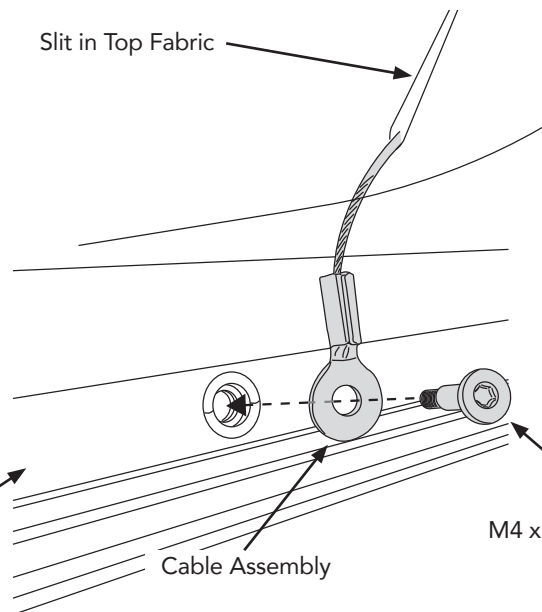


2.5mm
Hex Key



M4 x 8mm Shoulder Bolt

Cable Assembly


Fold Rear Corners up

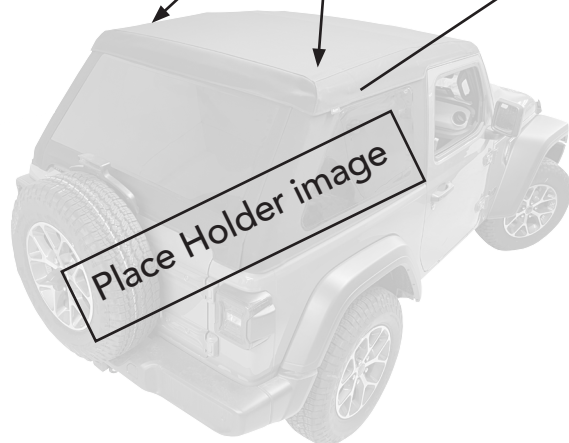

Place Holder image

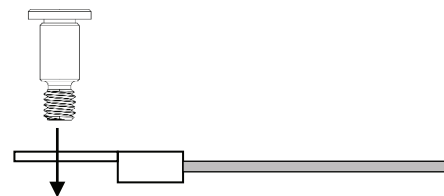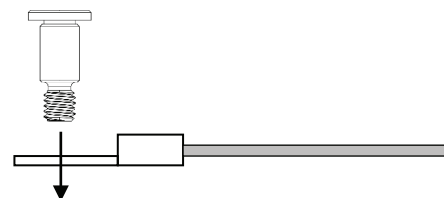

Repeat on left side.

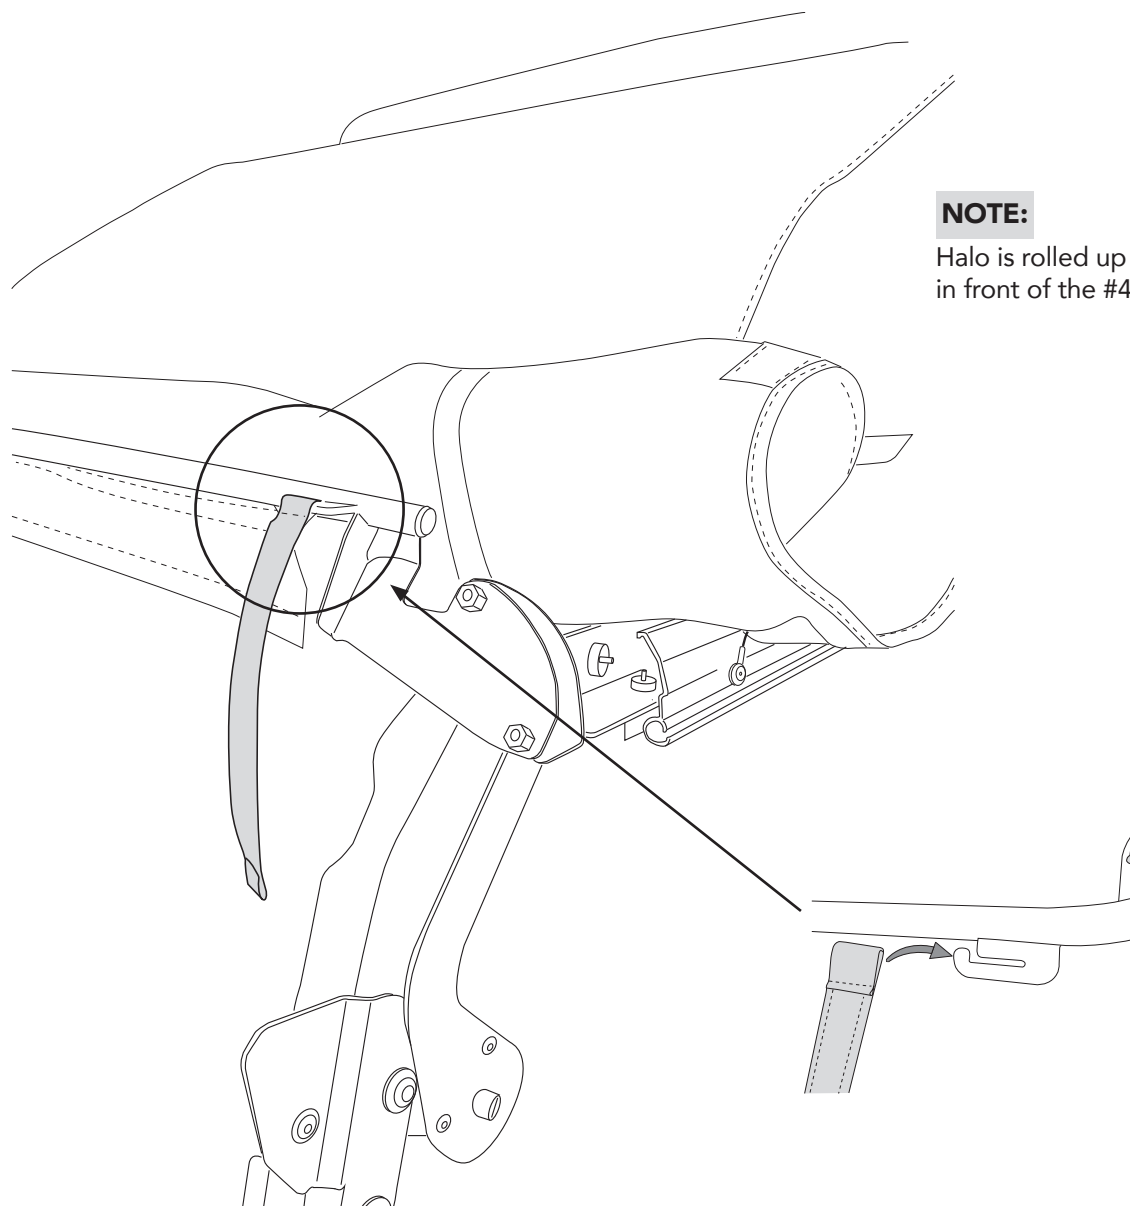


NOTE:


Halo is rolled up with the fabric in front of the #4 Bow

Roll the rear of fabric assembly in front of the #4 Bow then attach the #4 Bow - Halo Straps to the #4 Bow.



Fabric not shown

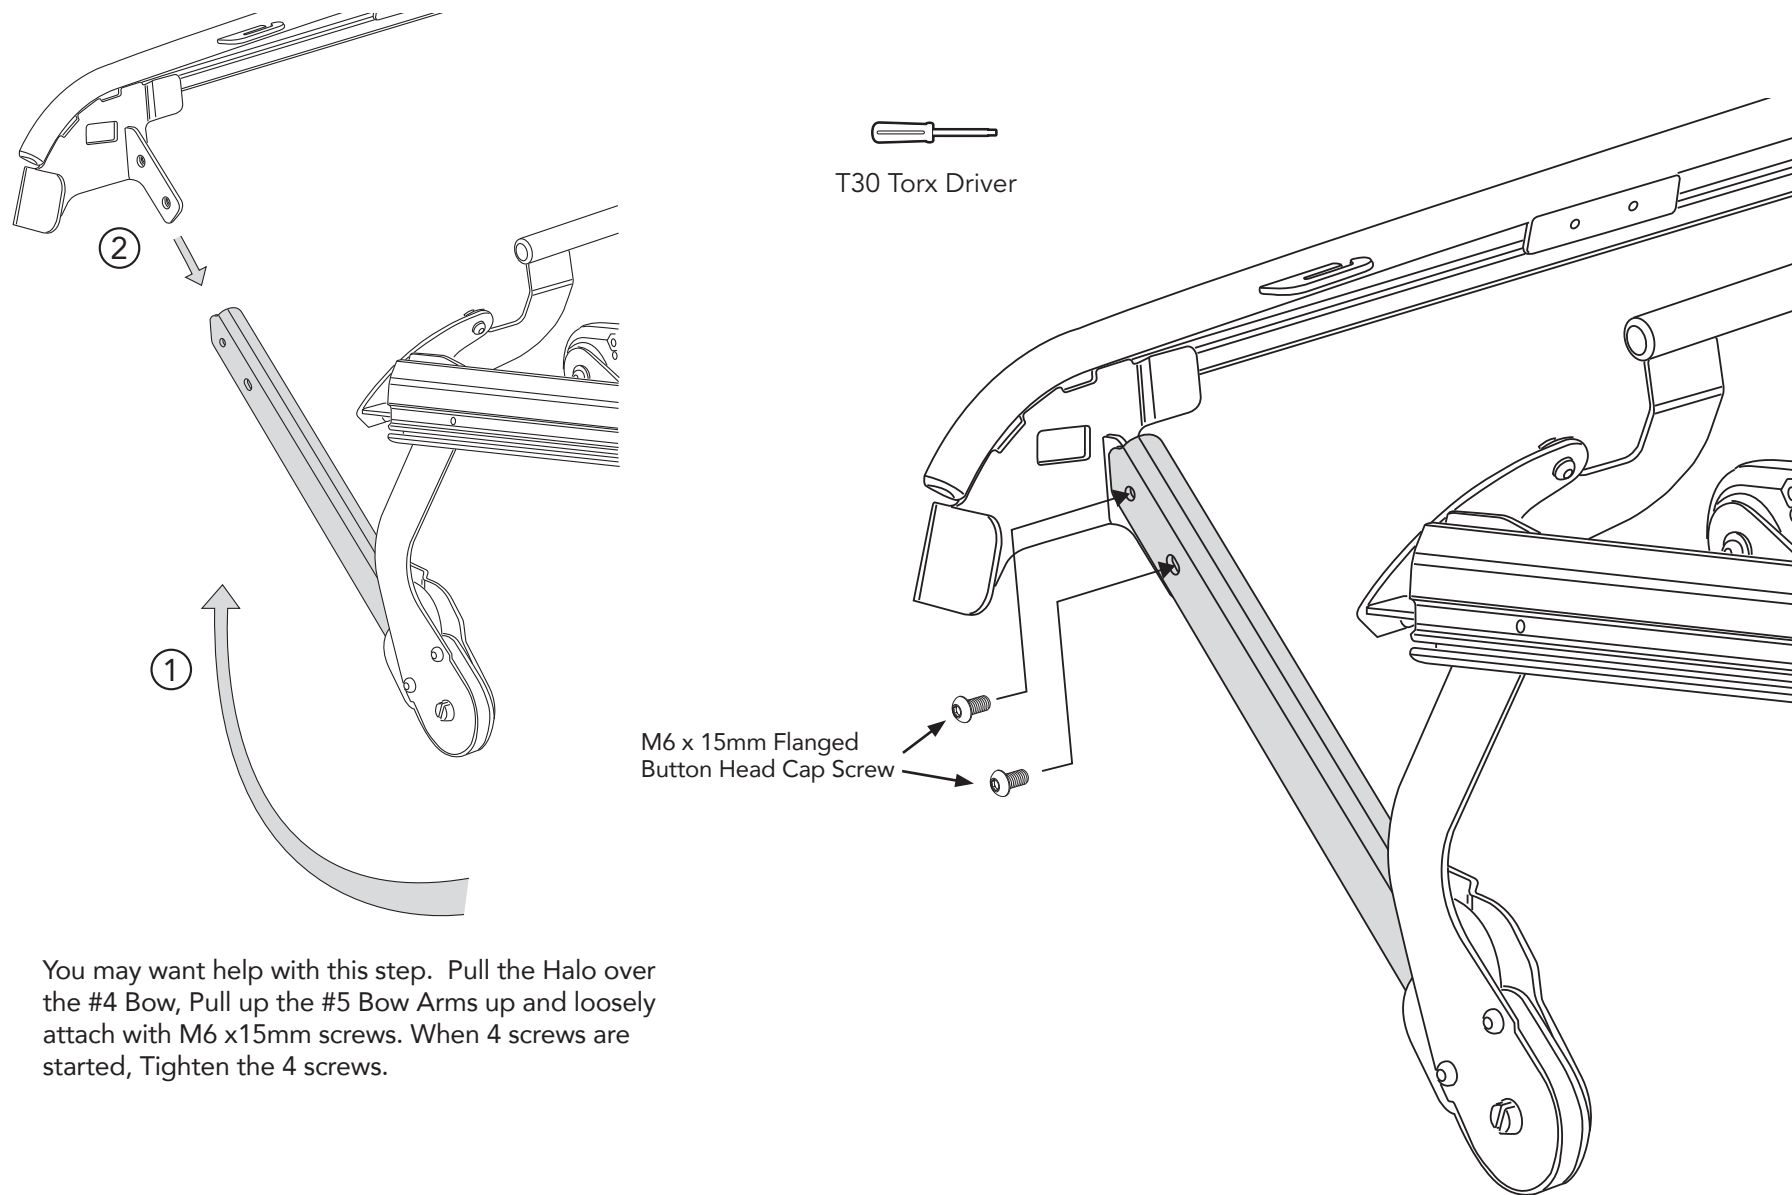



You may want help with this step. Pull the Halo over the #4 Bow, Pull up the #5 Bow Arms up and loosely attach with M6 x15mm screws. When 4 screws are started, Tighten the 4 screws.

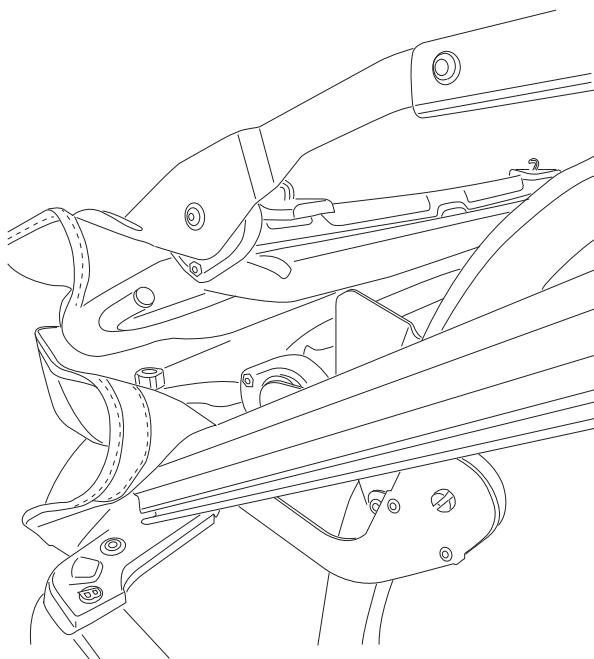


Fold the top to the down (fully open) position.

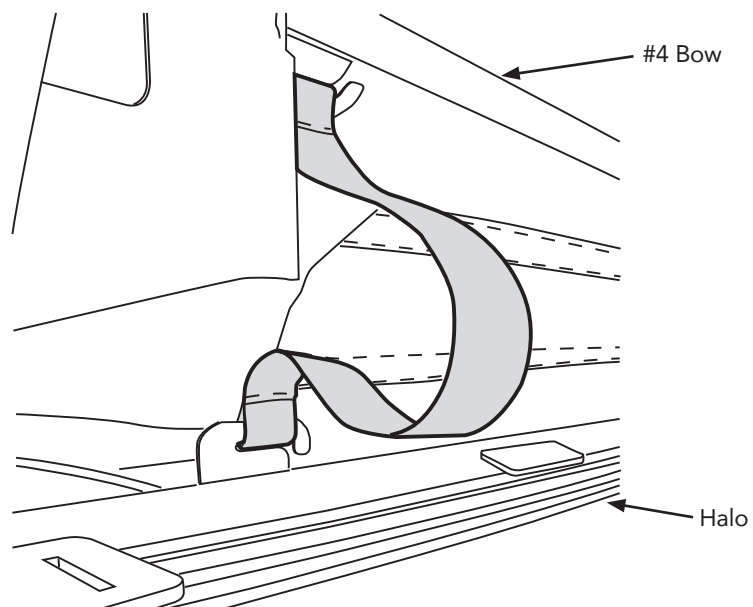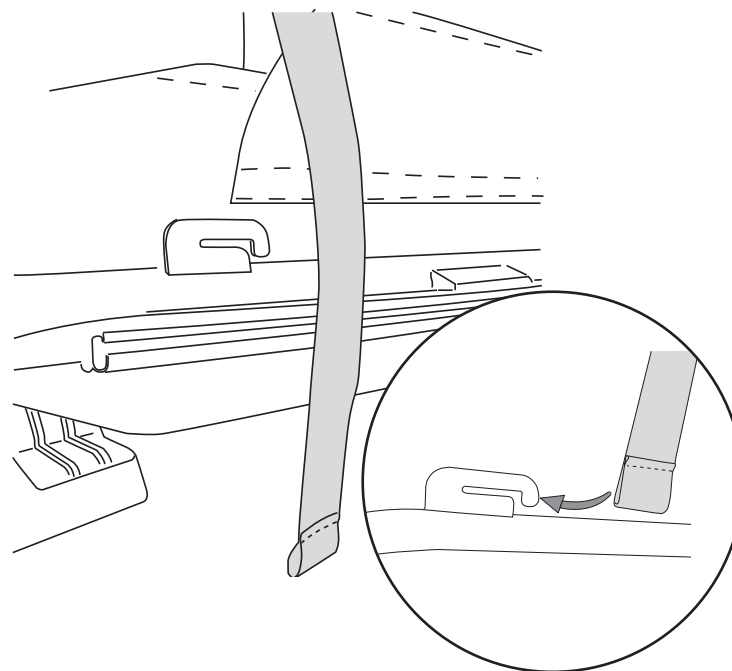



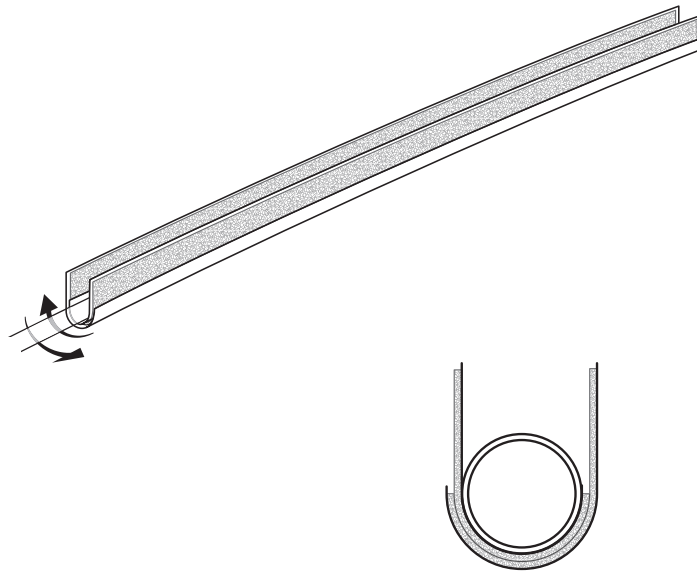


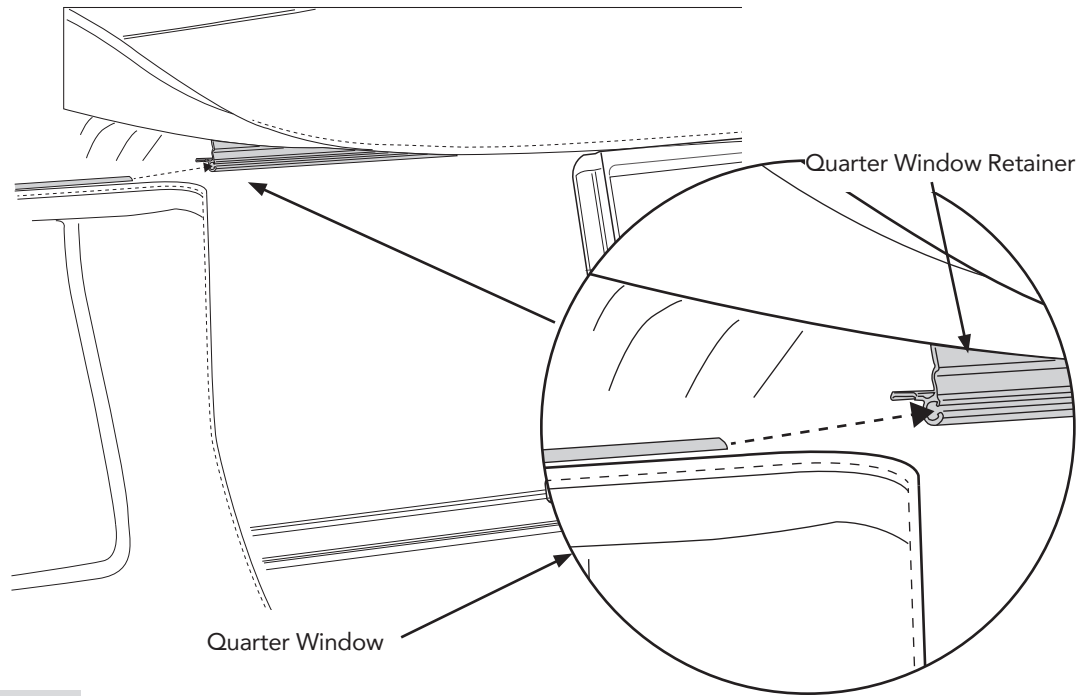

NOTE: It will be easier to slide the windows into the retainers if you lift the back of the window to keep the plastic window retainer (sewn on the window) parallel with the aluminium channel

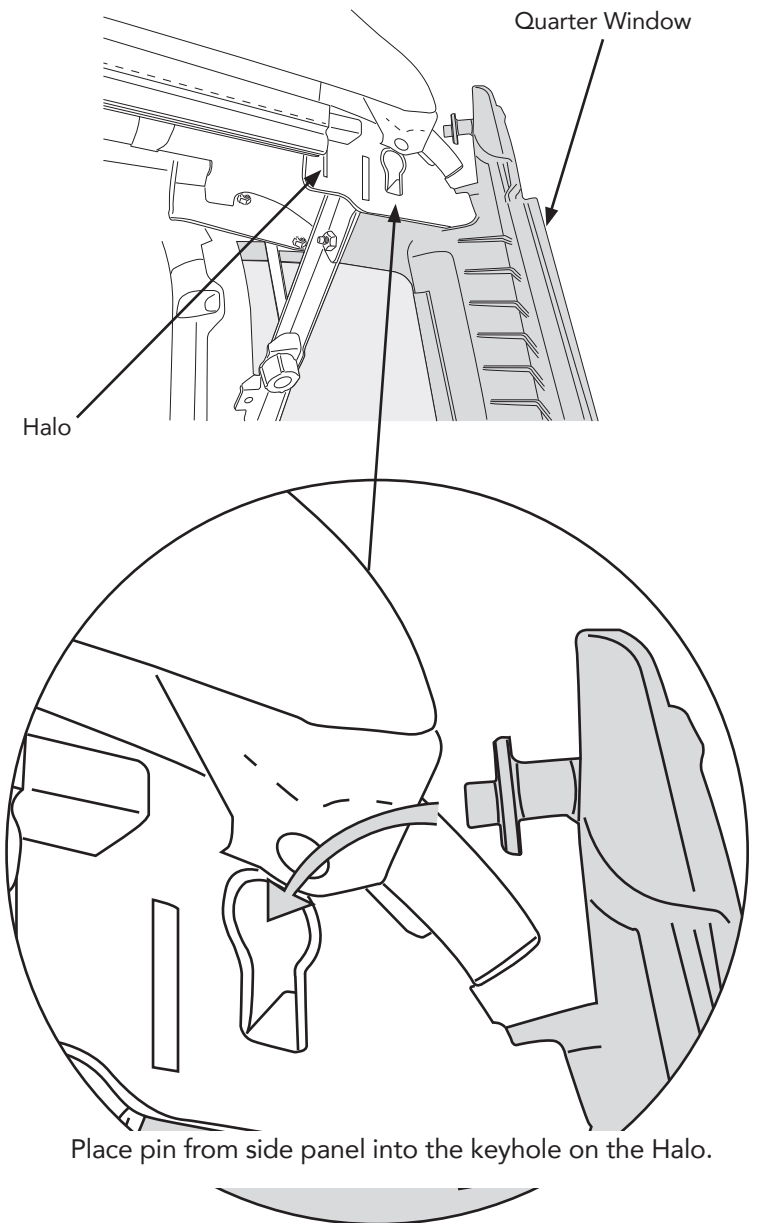


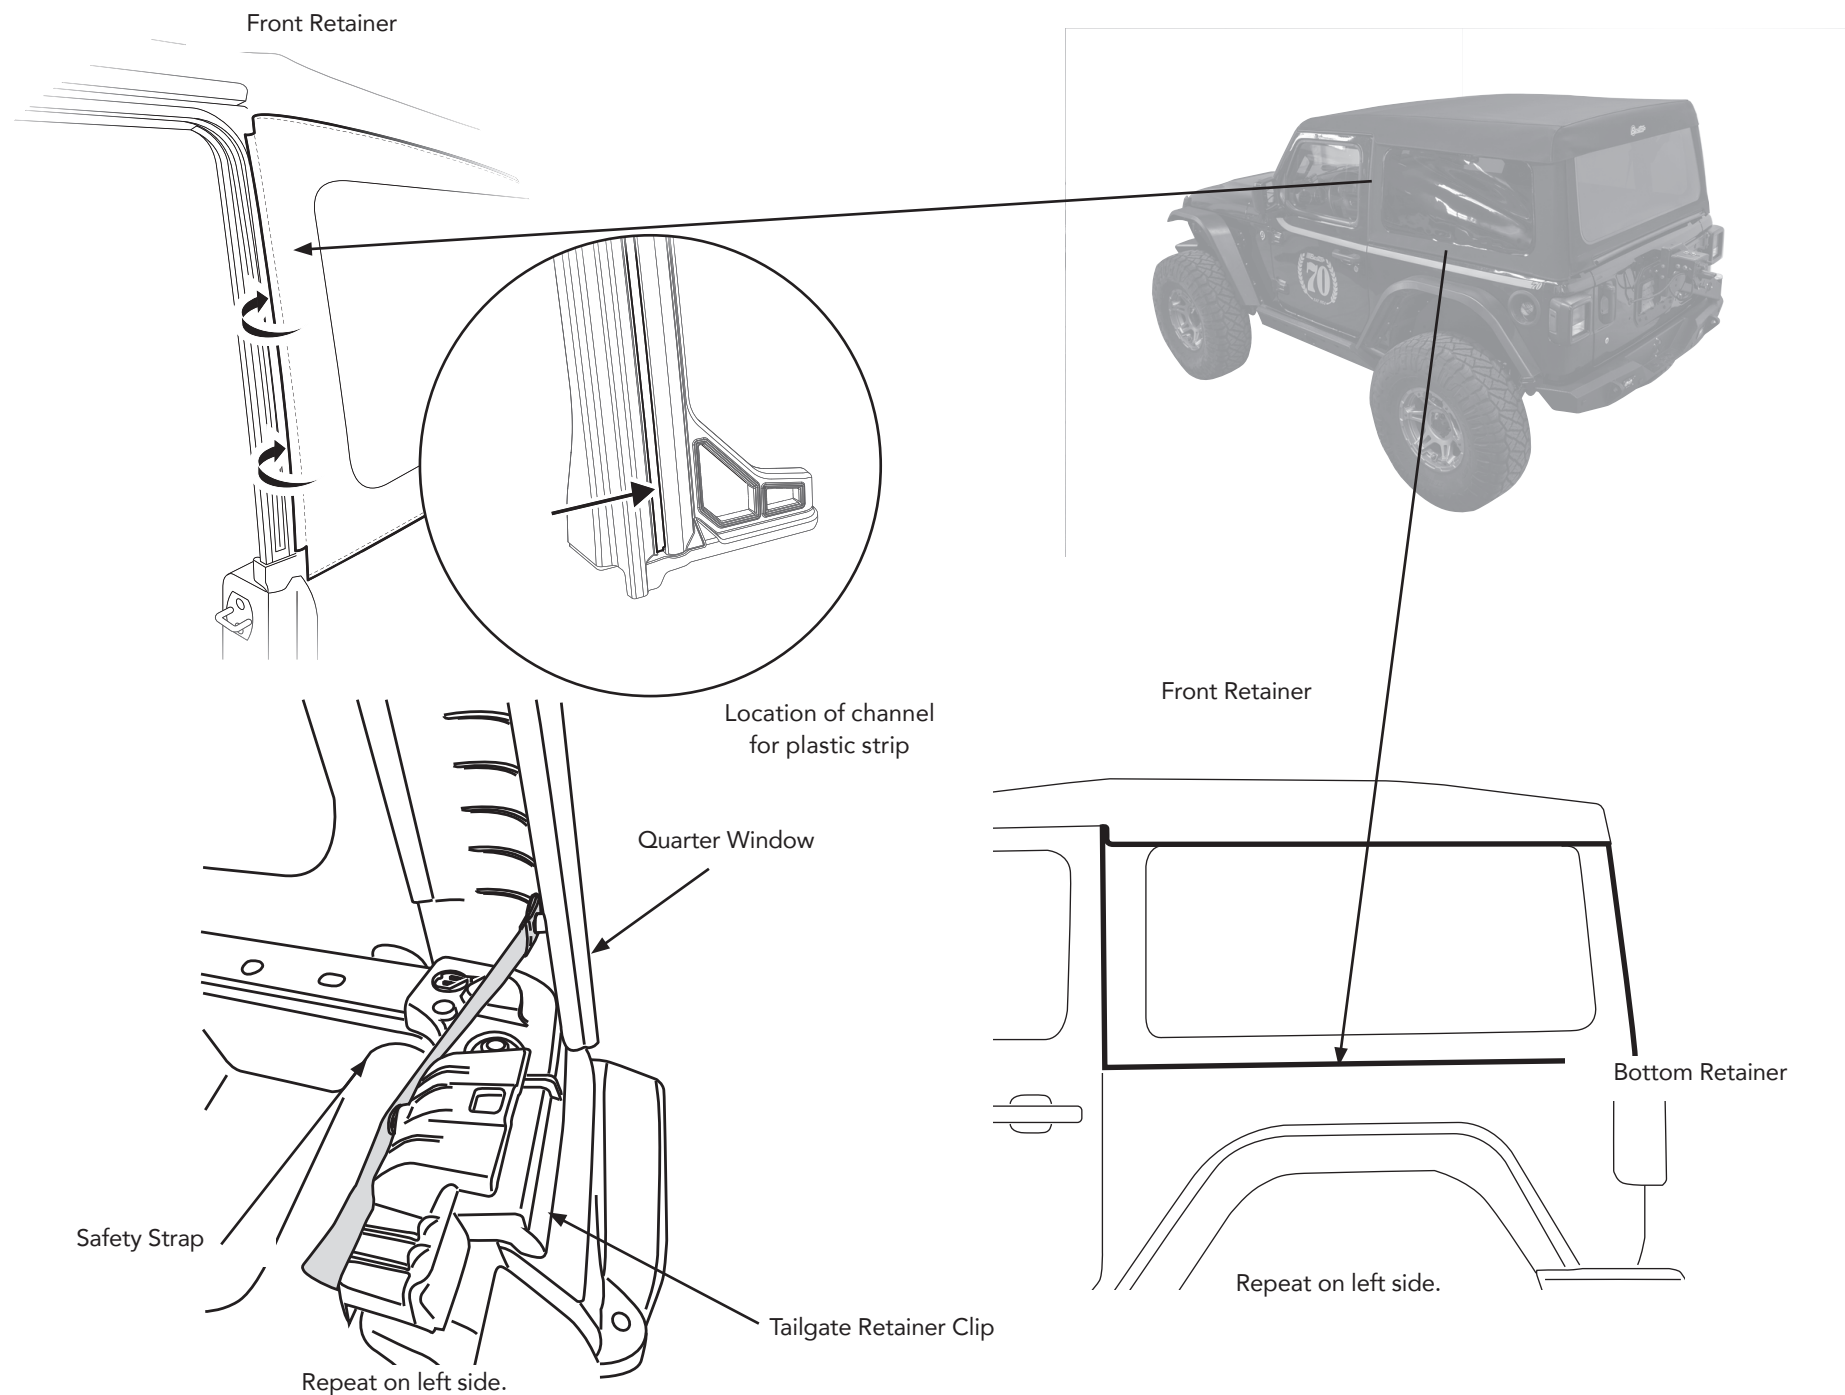

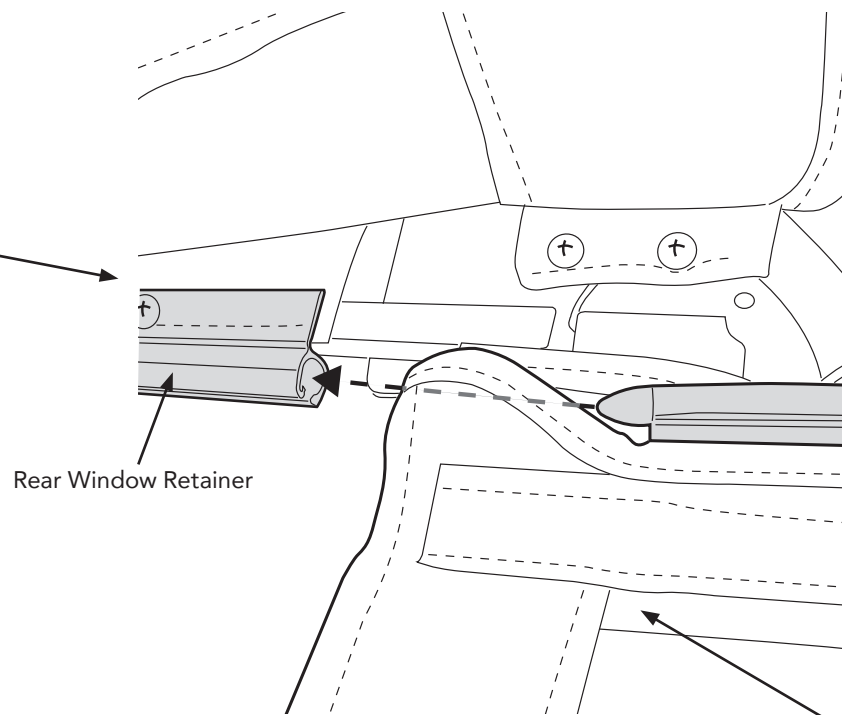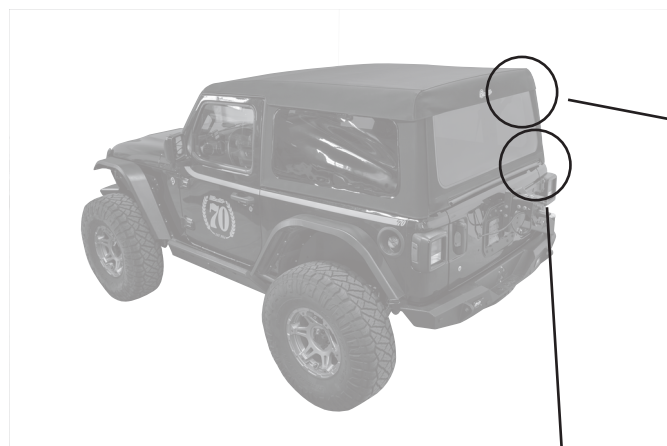


Rear Window Retainer

Rear Window

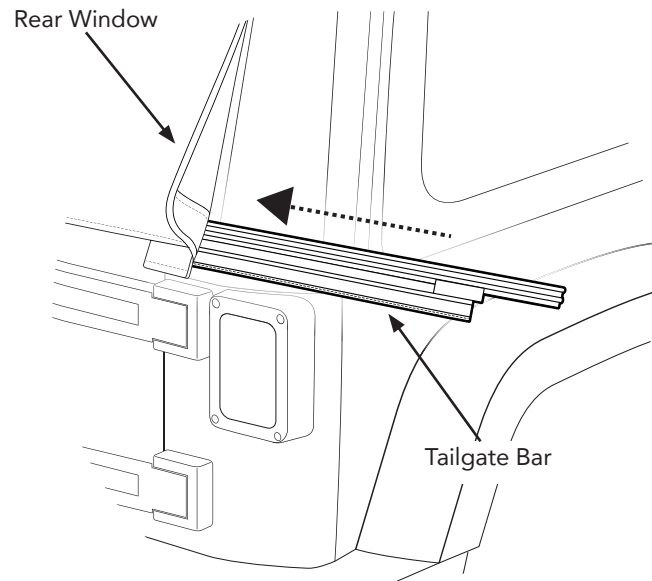



Rear Window

Tailgate Bar

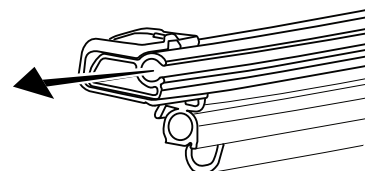


Slide the Tailgate Bar channel over the sewn-in receiver tube on the lower inside of the Rear Window.

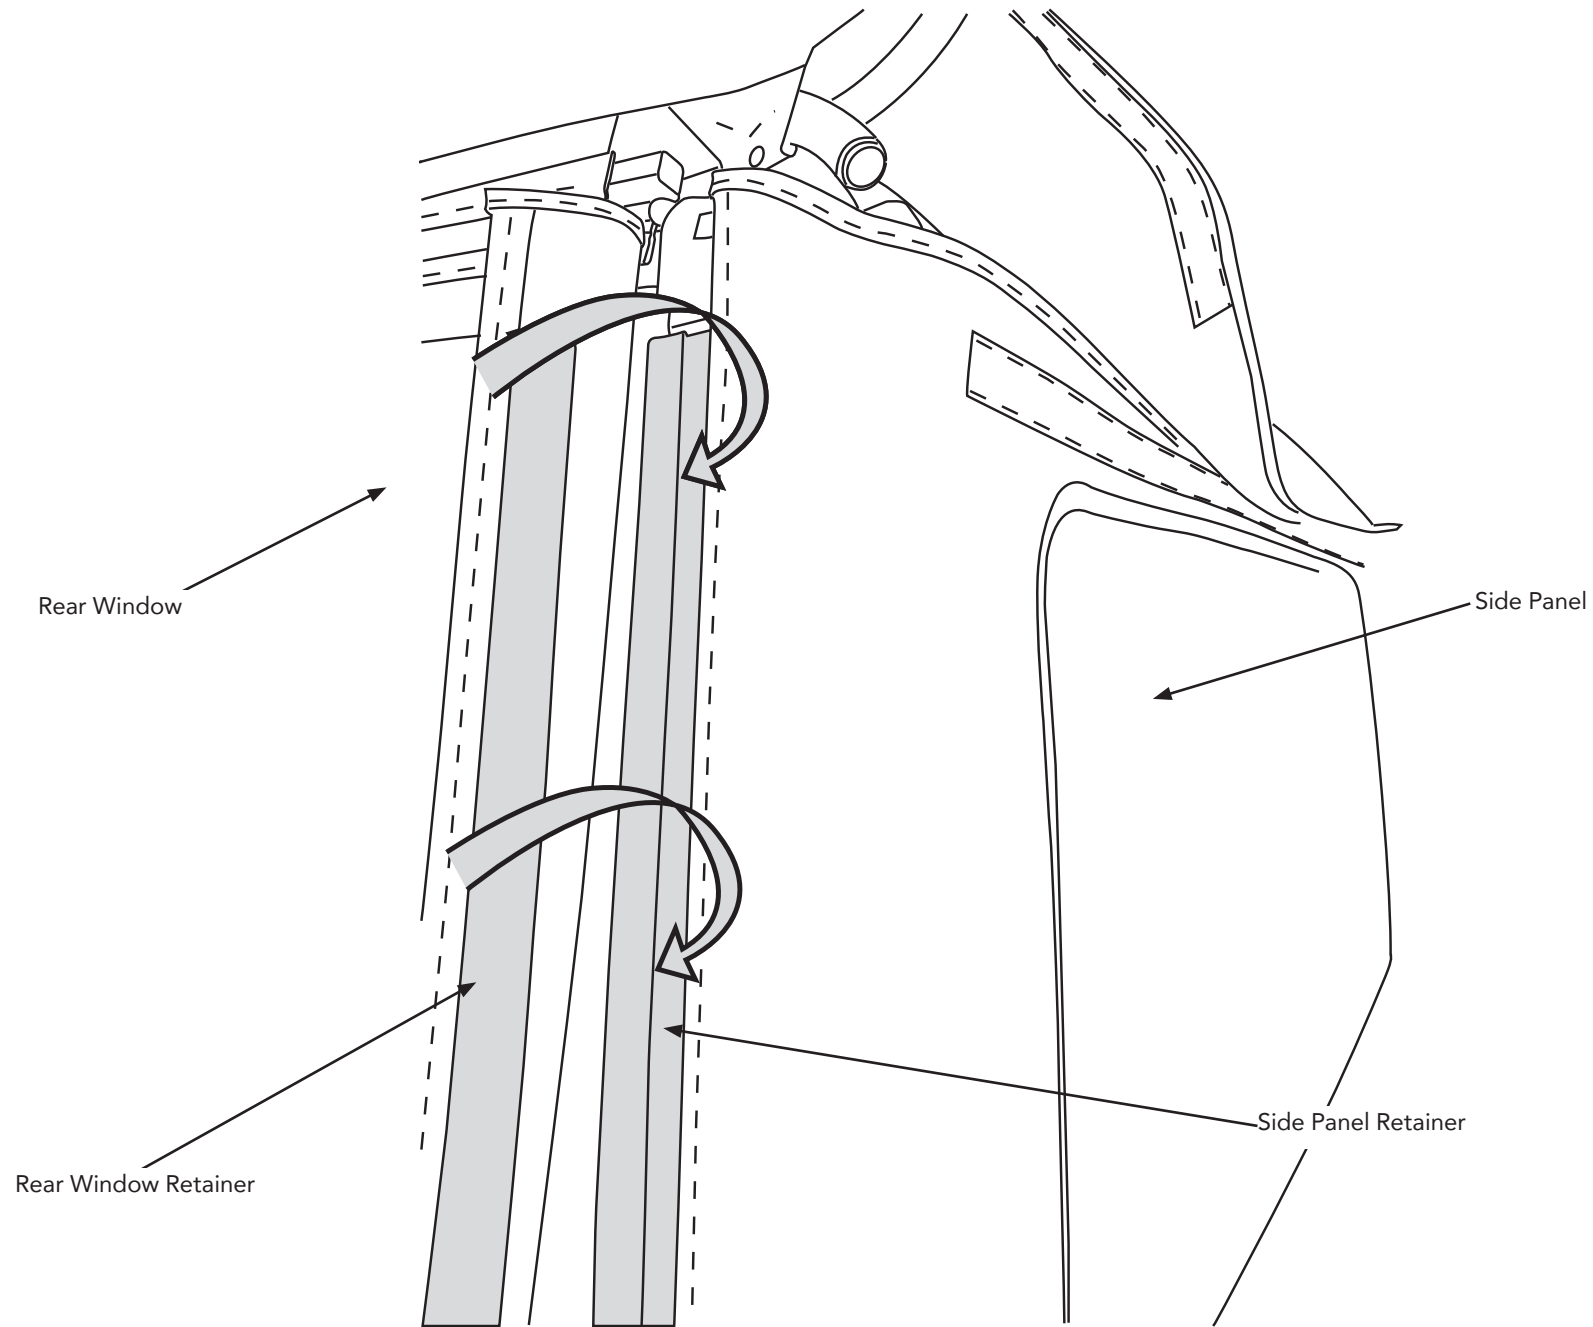

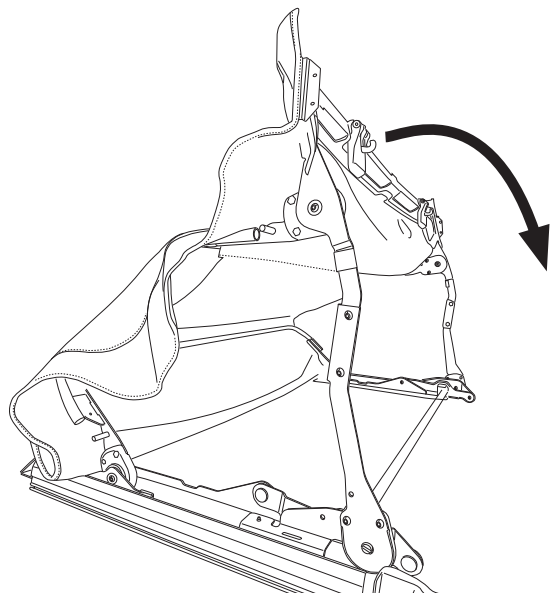


Fold The top Assembly forward

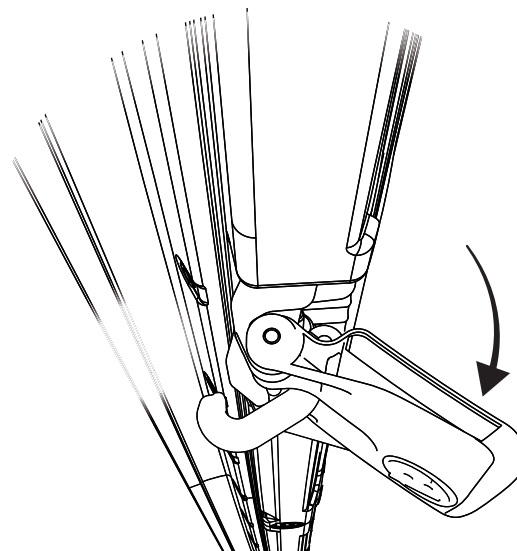


Fold the Sunrider closed and secure both latches to the vehicle's windshield header.


Pivot the latch handle down.

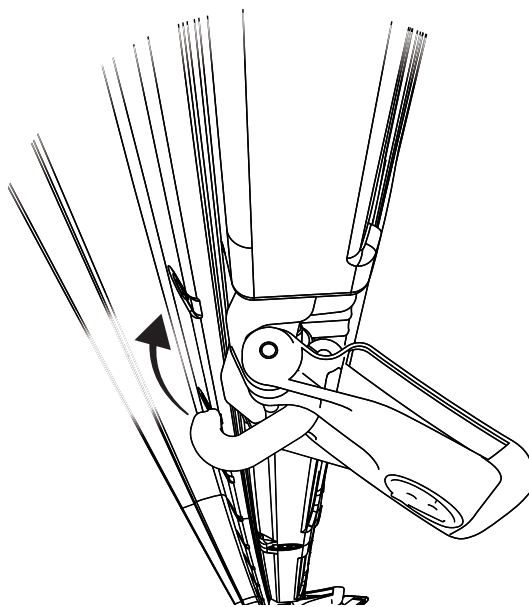


Engage the hook.

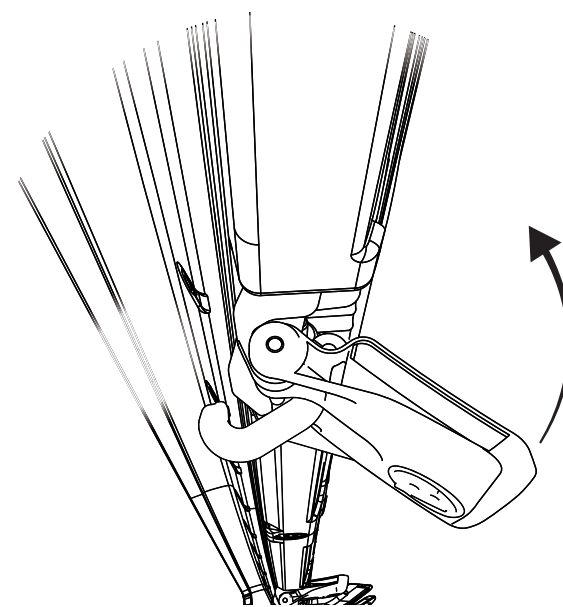

Pivot the latch handle back up.

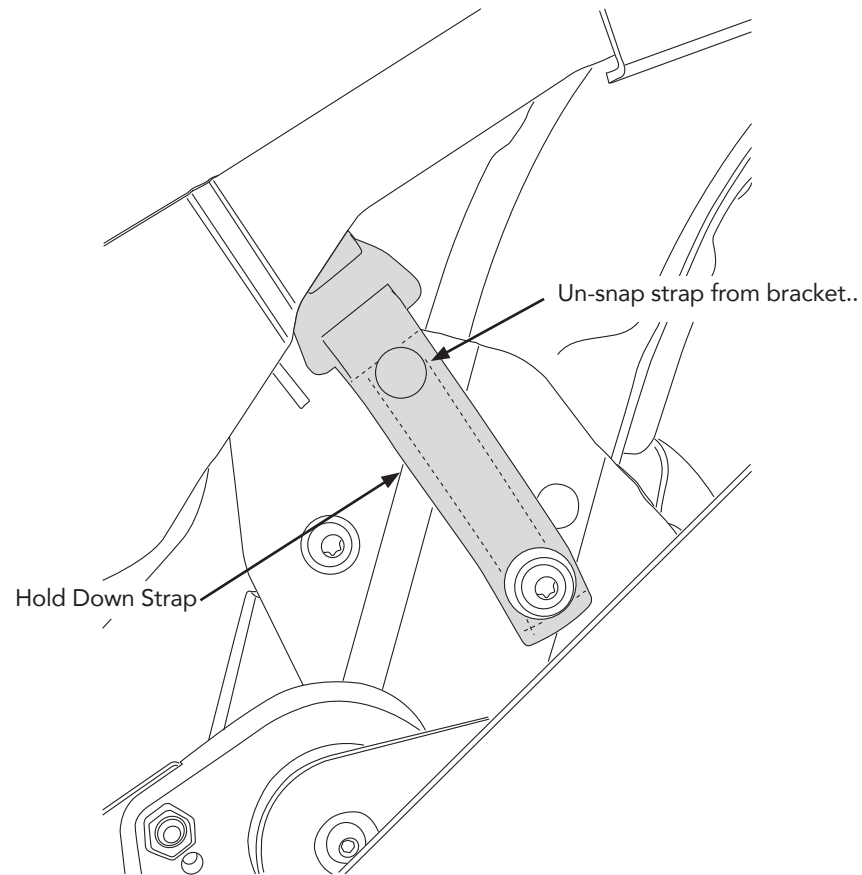

Pull down on frame assembly then pull hook from Hold Down Strap and attach it to the side arm assembly .

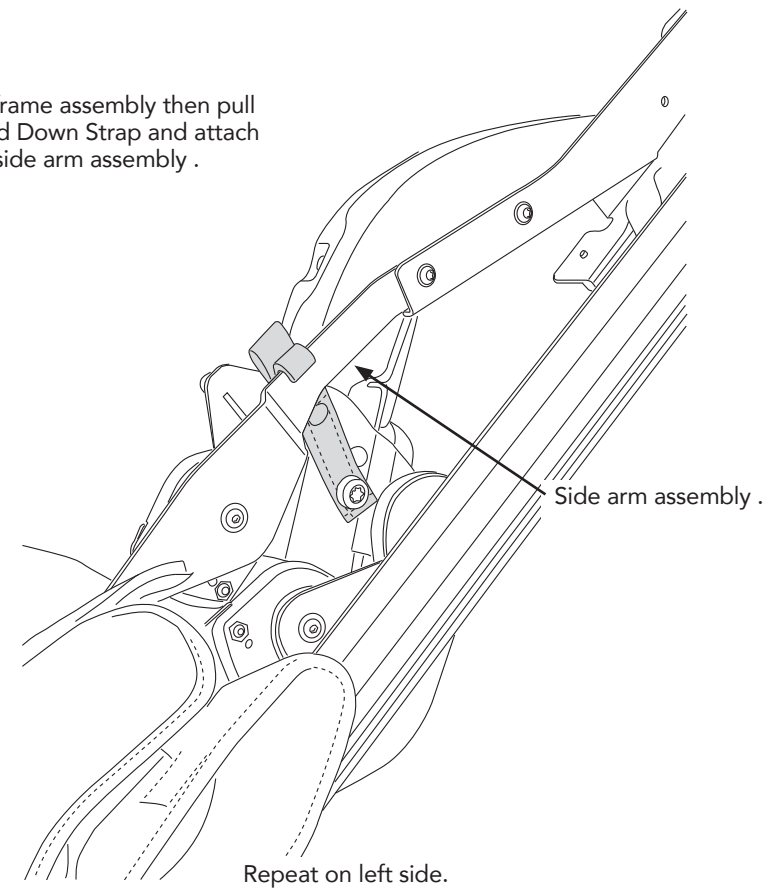

Congratulations, You have completed the installation of your new Supertop Glide. We hope you enjoy many years of service with your new top.

Care and Maintenance of your Bestop Product

Your Bestop product is made of the finest materials available. To keep it looking new and for the maximum possible wear, it will need periodic cleaning and maintenance.


Fabric: The fabric should be washed often using soap, warm water and a soft bristle brush. Rinse with clear water to remove all traces of soap. Bestop recommends using Bestop Cleaner (part no. 11201-00) and Bestop Protectant (part no. 11202-00) for Vinyl fabric and Bestop Twill Protectant (part no. 11207-00) for Twill fabric. Bestop Cleaner and Bestop protectant are specially formulated to provide a total cleaning and protection system. Bestop Cleaner safely removes the toughest stains, will not harm vehicle finishes, is biodegradable and environmentally friendly. Bestop Protectant protects against UV-fading, cracking and hardening, and repels dust, grease, dirt and mildew.

Windows: Keep windows clean to avoid scratching. DO NOT use a brush on the windows! Wash with a water-soaked cloth or sponge and a mild dishwashing detergent. Bestop recommends Bestop Vinyl Window Cleaner (part no. 11203-00), which safely cleans and protects vinyl windows and helps prevent UV damage. NEVER WIPE THE WINDOWS WHEN THEY ARE DRY. Be careful when cleaning snow or frost from the vinyl windows since they are easily scratched and may crack at low temperatures. DO NOT roll the sides or rear window in cold weather. The windows become stiff and will crack. Cracks caused by misuse in cold temperatures are not covered under warranty.

Water: Seeping through at the seams may be stopped by applying 3-M Scotchgard® on the inside of the seams.

Snap: Keep snaps cleaned and lubricated with silicone to help prevent snaps from sticking to the studs. If a snap does become stuck to a stud, use a screwdriver and GENTLY pry apart to prevent permanent damage to the snap or the top fabric.

Zippers: Keeping zippers cleaned and lubricated with Bestop's Zipper Cleaner (part no. 11206-00) will help prevent damage and keep the zippers in smooth working condition. If a zipper opens behind the slider, the slider may have been spread apart. This problem can usually be repaired by using an ordinary pair of pliers to bring the sides back into parallel. Return slider to the end of the zipper in the normal Open position. Squeeze lightly at first and test the zipper. If the zipper continues to remain open squeeze more firmly with the pliers and try the zipper again. Repeat this procedure until the zipper operates correctly.

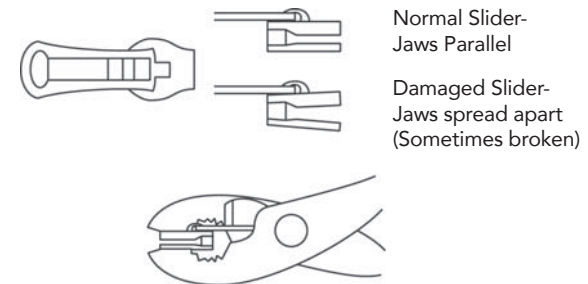

For Bestop Warranty Information, Please go to;
<https://www.bestop.com/help/warranty-information/>

