

Components and Hardware:

1.



2.




3.



4.



5.

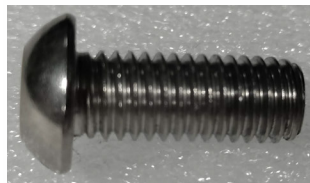

6.




Components and Hardware:

1. California Brief Top	(1)
2. Cross Bow	(1)
3. Turn Knob	(2)
4. Metal Plate, Bent w/ Slot	(4)
5. M8 Bolt	(4)
6. M8 Washer	(4)

California Brief Top

Lay California Brief Top(#1) on top of the vehicle. Ensure metal hooks are towards the front and are facing downward.

1. Align eyelet holes on California Brief Top(#1) over torx head bolts in front corner. Remove inboard factory bolt, pass bolt through eyelet and hand tighten. Repeat on outboard torx bolt.

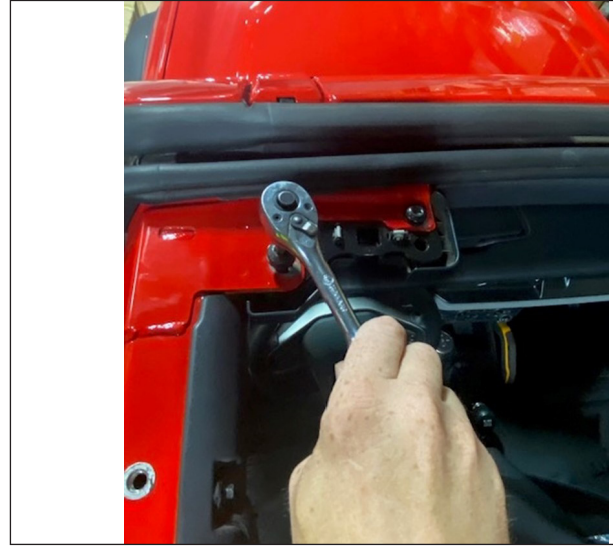

2. Insert metal hooks into the 2 factory metal tabs.



3. Repeat Step 1 on the Passenger Side. **TIGHTEN ALL HARDWARE AT THIS TIME.**




California Brief Top

4. Insert front corner strap into the round hole on the side of the roll-bar and tighten strap. Repeat on Passenger Side.



5. Attach rear corner straps around roll-bar and hook to the underside of the body tub as shown. Tighten straps.

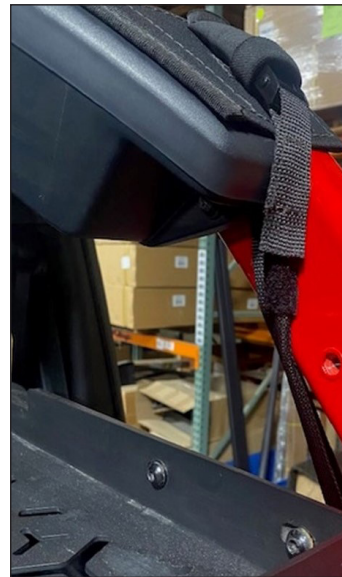

6. Connect Cross Bow(#2) pieces as shown in the top image.



Install the middle Support Bow:

4-door, install cross bow using forward most hook and loop sleeve.

2-door, install cross bow using rear most hook and loop sleeve.

Secure the Support Bow to the roll-bar with either factory torx head bolt OR supplied Turn Knob(#3).




California Brief Top

7. Align strap on California Brief Top with corresponding holes on top of roll-cage. Install supplied Metal Plates(#4) as shown with supplied M8 Bolts and Washers(#5 & 6).



8. Tighten strap into Metal Plates(#4) as shown.

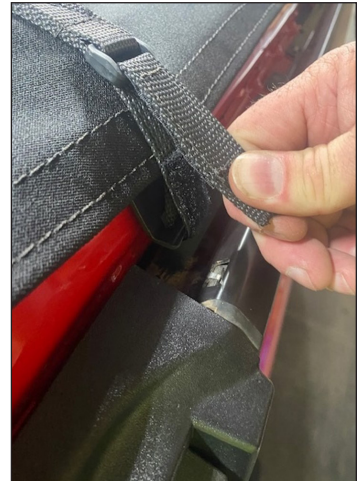

9. Clean area on soundbar with alcohol to securely attach the sewn in hook and loop strips at rear of California Brief Top. As shown, is the sewn in hook and loop strips at the rear underside of California Brief Top.



California Brief Top

10. Completed installation

