




CB Antenna Mount Ford Bronco


HFB-05-018 Rev. 0. 01/23

Components and Hardware:

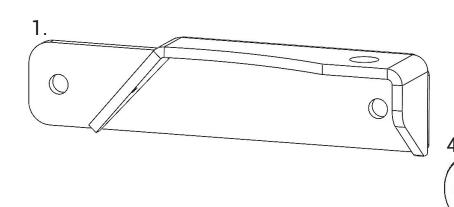

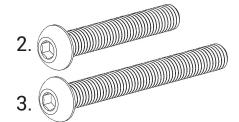





Components and Hardware:

1.	CB Antenna Mount((1)
2.	M8 x 1.25mm, 50mm long, Button Head Bolt((2)
3.	M8 x 1.25mm, 70mm long, Button Head Bolt((2)
4.	M8 x 24mm Large Spacer((2)
5.	M8 x 12mm Small Conical Spacer	(2)
6.	M8 Flat Washer((2)
7.	M8 Locking Washer((2)

Tools for Installation:


- 5mm Allen Wrench
- T47 Torx Socket or Bit (provided in tool kit from Ford)

NOTE:

Close tailgate. Having the tailgate closed during installation will assure the tailgate will keep its alignment.

The antenna mount is intended to mount to the upper tailgate hinge. Use the provided small conical spacers and 50mm bolts if mounting to OE hinge. Use provided large spacers and 70mm bolts if installing to Havoc HD Cast Hinge or other aftermarket hinges.

The following steps show mounting to OE hinge. Mounting to the HD or an aftermarket hinge mounts in similar fashion.

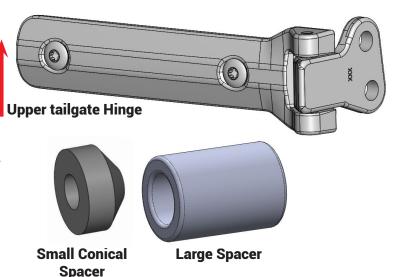




CB Antenna Mount, Bronco


Step 1:

Remove only one of the OE T47 Torx head bolts from the upper hinge.

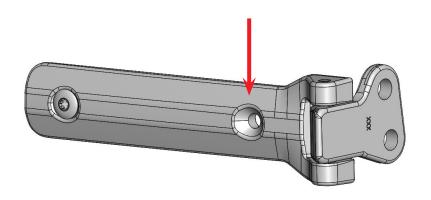


Step 2:

Use M8 button head bolt (2) with locking washer (7), flat washer (6) through antenna mount (1), small conical spacer (5) and thread through the hinge into the tailgate. **Do Not fully tighten at this time.**

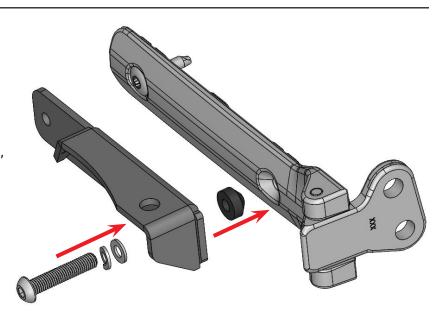

Step 3:

Allow the antenna mount to hang out of the way of the other OE fastener of the hinge. Remove the other OE T47 Torx head bolt from the upper hinge.

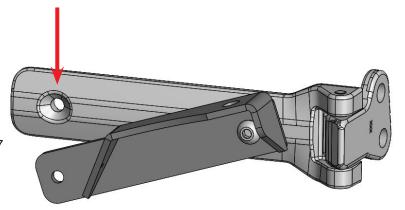




CB Antenna Mount, Bronco

Step 4:

Place small conical spacer (5) in hinge and rotate the antenna mount (1) into position. Use M8 button head bolt (2) with locking washer (7), flat washer (6) to attach the antenna mount to tailgate hinge.

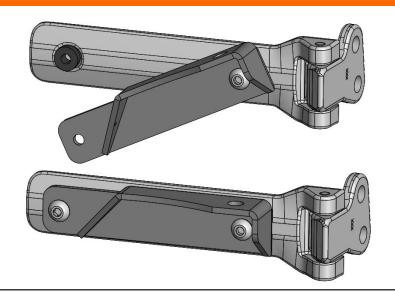

Step 5:

Assure mount is level and fully tighten.

Install your selected antenna to the mount and route cable. The antenna mount has a small hole to zip tie the cable to assure it is secure.

