

REAR WINDOW MOLLE PANELS

2018+ JEEP WRANGLER JL

MPJL-01



TOOLS REQUIRED

- Ratchet
- 3mm, 4mm Allen Bit
- 10mm Wrench
- T50 Torx Bit

SKILL LEVEL

- Novice/Intermediate
 - 1 (you) to 2 persons
- Little skill level required, you can easily install it by yourself however, additional help will be useful

TIME REQUIRED

- 1.5 Hour
- Time to install this should only take about an hour and a half.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from.

HARDWARE INCLUDED

- (10) M6x16 Allen Head
- (20) M6 Flat Washers
- (4) M6 Nylon Lock Nuts
- (2) M4x16 Philips Head
- (2) M4 Flat Washers
- (2) M4 Split Washers
- (2) M4 Nuts

STEP 1 | Install the smaller bracket using the provided M6 hardware. All M6 hardware will be finger tight until the end of install.

Pictured is assembly and installation of the passenger side panel.


There are a few ways to identify passenger/driver side panels.

Lay out both panels so that the large side is on your left, and the smaller side is on the right. The panel with the logo that reads left to right correctly is the passenger side panel.

Place them up to your vehicle to visually reference the logo and seatbelt mounting bracket. Note how the bracket that mounts on the tub is angled so the molle panel is parallel with the roll bar.

DRIVER

PASSENGER

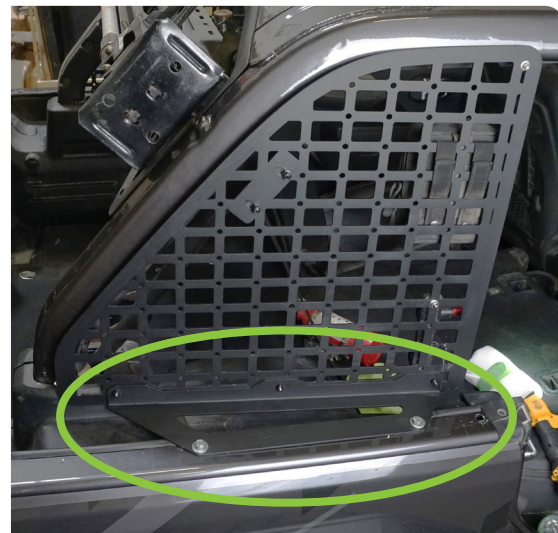

INSTALLATION MANUAL

STEP 2 | Install and secure the bumpstop using the provided M4 hardware and a 3mm allen bit. The bump stop should be installed on the same side as the smaller seatbelt mounting bracket.



STEP 3 | Install the larger bracket on the side opposite the bumpstop/seatbelt mounting bracket using provided M6 hardware.

Identify the correct bracket by lining up the smaller/shorter corner with the logo. The logo will be covered by this bracket and should read backwards.

Finger-tight only.



STEP 4 | Moving to the interior of the vehicle, remove the plastic trim on the seat belt pulley.

Use a T50 to remove the bolt securing the seatbelt.



INSTALLATION MANUAL

STEP 5 | Use a T50 to remove the two bolts securing the hardtop, located closest to the front of the vehicle.



STEP 6 | Maneuver the panel into the approximate location of install and very loosely secure it with the factory hardtop bolts by hand.



STEP 7 | Move the seatbelt bracket into place, and then install the seatbelt over it.

It may be necessary to apply some force to get the bracket into position.

Secure the bracket with the seat belt using a T50 and the factory bolt. Torque to 24 ft-lbs with a dab of blue loctite.



INSTALLATION MANUAL

STEP 8 | Finish securing the factory hardtop bolts with a T50.



Secure all M6 hardware with 4mm allen bit and 10mm wrench.

Replace plastic trim on the seat belt.



STEP 9 | You are now finished installing your new 2018+ JL Jeep Wrangler Rear Window Interior Molle Panel.

