

INSTALLATION INSTRUCTIONS

PART No. FB22341, FB22342, FB22343, FB22344
2007-Current JK/JL Wrangler & JT Gladiator Barracuda Front Bumper & Accessories



FB22341



FB22342



FB22343



FB22344

M10



M12



REQUIRED TOOLS

- 19mm Socket
- 17mm Wrench
- 17mm Socket

Help of a Friend

FB22341 CONTAINS

	QTY
M12 Hex Bolt	6
M10 Hex Bolt	8
M12 Flat Washer	12
M10 Flat Washer	16
M12 Hex Nut	6
M12 Lock Washer	8
M10 Lock Washer	8
M10 Hex Nut	

FB22342 & FB22343 CONTAINS

	QTY
M12 Hex Bolt	4
M10 Hex Bolt	8
M12 Flat Washer	8
M10 Flat Washer	16
M12 Lock Washer	4
M10 Lock Washer	8
M12 Hex Nut	4
M10 Hex Nut	8
D-Rings	2
Foam	

FB22344 CONTAINS

	QTY
M10 Hex Bolt	8
M10 Flat Washer	8
M10 Lock Washer	8
M10 Hex Nut	8
D-Rings	2


INSTALLATION INSTRUCTIONS

PART No. FB22341, FB22342,
FB22343, FB22344

**2007-Current JK/JL Wrangler & JT Gladiator
Barracuda Front Bumper & Accessories**

1) REMOVE EXISTING BUMPER

Begin removing your existing bumper and any accessory that may get in the way. We show how to uninstall your JK/JL/JT factory bumper over on our YouTube channel: www.FishboneOffroad.TV

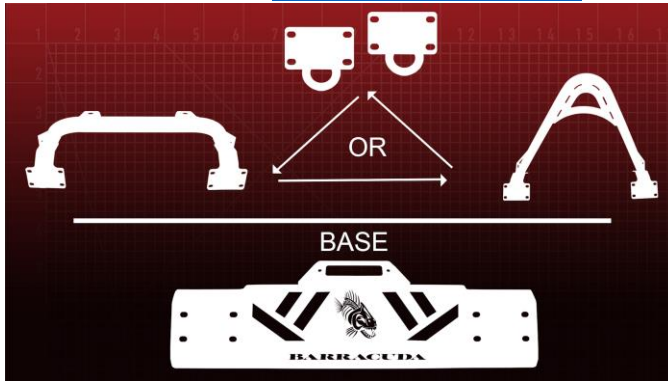

2) ASSEMBLE THE BUMPER

With a 19mm socket, install the fairlead onto the top of the bumper with 2 of the included M12 bolts, washers, and nuts.



If you purchased the Bull Bar or Stinger, apply the foam padding to the inside of the mounting brackets.



Place the bar up to the bumper and secure only the top plate with 4 M12 bolts, 8 washers, and nuts with a 19mm socket.





INSTALLATION INSTRUCTIONS

PART No. FB22341, FB22342,
FB22343, FB22344

**2007-Current JK/JL Wrangler & JT Gladiator
Barracuda Front Bumper & Accessories**

3) **INSTALL BUMPER**

With the help of a friend, hold the bumper up to the frame and center it on the bolt holes. If you own the base model or any bar, secure it to the frame with 8 M10 bolts, 16 washers, and nuts with a 17mm socket and wrench. Followed by installing your D-Rings.



If you purchased the D-Ring set, with the help of a friend, hold the bumper into place while you align the D-Ring caps with the bolt and frame holes. With 8 M10 bolts, 16 washers, and nuts and a 17mm socket and wrench, secure the bumper to the frame. Followed by installing your D-Rings.

