



INSTALLATION INSTRUCTIONS

PART No.

FB23176

**Jeep® JL Wrangler and JT Gladiator
Mako Front Bumper Skid Plate**



VIDEO AVAILABLE



REQUIRED TOOLS

16mm Socket
Ratchet
13mm Wrench
5mm Allen Key

KIT CONTAINS

Mako Front Bumper Skid Plate
M8 SS Washer
M8-1.25 SS Nyloc Nut
M8-1.25-25mm SS Button Head Bolt

QTY

1
12
6
6

2317600

INSTALLATION INSTRUCTIONS

PART No.

FB23176

Jeep® JL Wrangler and JT Gladiator Mako Front Bumper Skid Plate

1) REMOVE OEM BUMPER AND SKID PLATE

Links for removal of the OEM bumper and skid plate are listed below.

JT Front Factory Bumper Removal:

<https://www.youtube.com/watch?v=K8OmAcET3vc>

JL Front Factory Bumper Removal:

<https://www.youtube.com/watch?v=wKXW1D71C0U>

JT Mako Front Bumper Installation:


https://www.youtube.com/watch?v=rxlSaXbzD_w

JL Mako Front Bumper Installation:

<https://www.youtube.com/watch?v=lluhJIEE28M>

2) INSTALL

Slide one of the included bolts with a washer into one of the top 6 skid plate holes. Secure the plate into the equivalent Mako bumper hole with a second washer and nut, to hold it in place while you work.

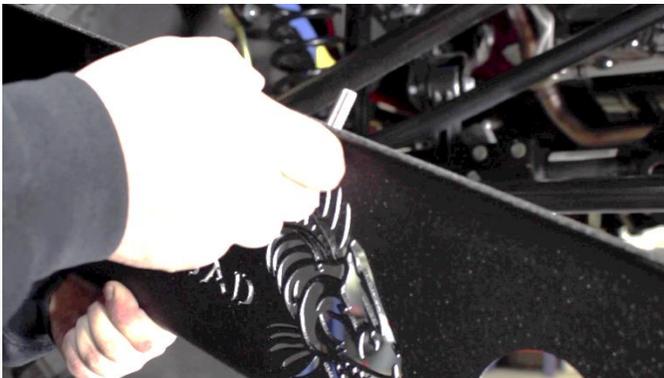

With your factory skid plate mounting bolts, secure the two plate brackets to the frame with a 16mm

socket.



Install the included hardware into the remaining 5 skid plate and Mako bumper holes. With a 5mm allen key and a 13mm wrench, secure the skid plate to the bumper.



ENJOY YOUR NEW FISHBONE OFFROAD MAKO BUMPER SKID PLATE!!!

