



-NOTICE-

IF YOUR JT GLADIATOR IS EQUIPPED WITH:

**BACKUP
SENSORS AND/OR LED LIGHT
PACKAGE**

YOU WILL NEED TO GATHER THE FOLLOWING MOPAR PARTS:

For LED License Plate Lights – You will need the following:

- (QTY 1) 6KM23RXFAA - License Plate Lamp Bezel, Left
- (QTY 1) 6KM22RXFAA - License Plate Lamp Bezel, Right
- (QTY 1) 6TB07RXFAA - License Lamp Bracket, Left
- (QTY 1) 6TB06RXFAA - License Lamp Bracket, Right

For Backup Sensors – You will need the following:

- (QTY 1) 6MH85RXFAC - Parking Distance Bezel
- (QTY 1) 6MH83RXFAB - Parking Distance Bezel
- (QTY 1) 6MH82RXFAB - Parking Distance Bezel
- (QTY 1) 6MH84RXFAB - Parking Distance Bezel
- (QTY 1) 68295603AC - Sensor Mounting Bracket
- (QTY 1) 68295601AC - Sensor Mounting Bracket
- (QTY 1) 68295600AC - Sensor Mounting Bracket
- (QTY 1) 68295602AC - Sensor Mounting Bracket

INSTALLATION INSTRUCTIONS

PART No.

FB22149

**Jeep® JT Gladiator
Mako Rear Bumper**



REQUIRED TOOLS

18mm Socket
8mm Allen
4mm Allen

KIT CONTAINS

JT Gladiator Mako Rear Bumper
D-Rings
M12 Hex Nut
M12 Washer
M12 Lock Washer
M12 Counter Sunk Bolt
M6 Button Head Bolts
M6 Washers
M6 Lock Washers

QTY

1
2
6
6
6
2
4
4
4

1) REMOVE EXISTING BUMPER

Remove your existing rear bumper according to the manufacturer's instructions. We show how to remove your factory bumper in another video at www.FishboneOffroad.TV.



If your model has sensors, remove them in order, left to right, one through four.



2) PREPARE YOUR MAKO BUMPER FOR INSTALLATION

With the Mako aside, re-install your trailer wiring plug and license plate lights into it.




If your model has sensors, pop out our included sensor plugs from the bumper, and re-install your sensors in order, and as they were oriented in the factory bumper.



Jeep® JT Gladiator Mako Rear Bumper

Remove the factory clip nuts from the JT's frame.

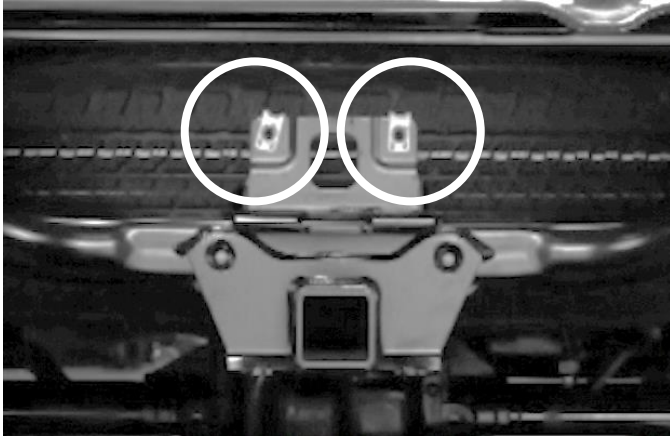

Secure the center of the bumper to the frame with the remaining (2) counter sunk bolts with an 8mm Allen key.

4) RECONNECT WIRES

With your bumper in place, reconnect your trailer wiring, license plate lights wiring, and the sensor plugs harness.



3) INSTALL YOUR MAKO BUMPER

Slide the Mako into the frame mounting holes.



With the included flat washers, lock washers and hex nuts, secure the bumper to the left and right frame mounts with an 18mm Socket.



5) REINSTALL YOUR LICENSE PLATE

With the included bolts, washers, and a 4mm Allen, secure your license plate to the center of the bumper.



6) INSTALL D-RINGS



**ENJOY YOUR NEW FISHBONE OFFROAD JT MAKO
REAR BUMPER!**

