



INSTALLATION INSTRUCTIONS

Rock Armor Front Fenders

97-06 Jeep Wrangler TJ

Part Number: 1 FEA FEA FEA G

INCLUDED COMPONENTS:

1. Passenger side Corner Guard
1. Driver Side Corner Guard
1. Passenger Side Rear Fender
1. Driver Side Rear Fender
10. 5mm x 15mm Allen Head Bolts
20. 5mm Flat Washers
10. 5mm Nylock Nuts

TOOLS REQUIRED:

- 13mm Socket Wrench & Ratchet
- Cutting Wheel
- Sanding Wheel
- 4mm Allen Wrench




Please read and understand all instructions before starting the installation. The manufacturer is in no way responsible for any personal injury or vehicle damage that may occur during the installation. Paramount Automotive recommends professional installation.


1. Remove plastic flare and disconnect turn signal from fender.
2. Mark the cutting area as shown in Fig 1a.
3. Use a cutting wheel to cut the marked area on the fender. **IMPORTANT!** Always wear eye protection when using a power tool.
4. Once you have cut the fender, remove the (3) bolts holding it to the radiator support.




5. Remove (4) bolts holding the fender to the body. **NOTE:** On some models you might need to remove the battery on the passenger in order to reach these mounting bolts.

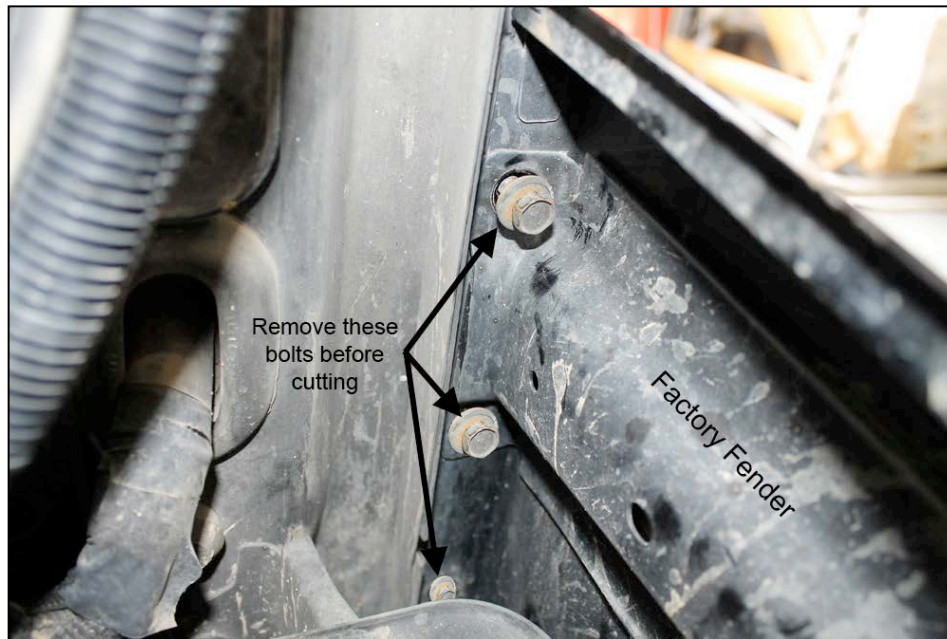

6. Mark the cutting area by measuring 1" from the body. This is to ensure that the fender have enough space to mount. **Fig 3 & Fig 4**
7. Use a cutting wheel to cut the marked area on the fender. **IMPORTANT!** Always wear eye protection when using a power tool.

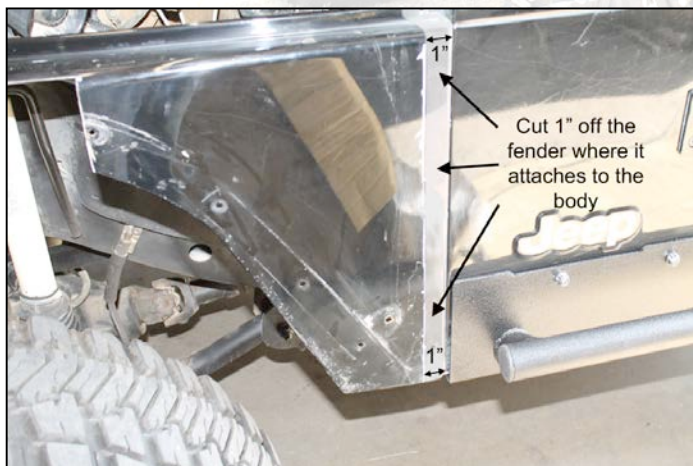


Before Cutting

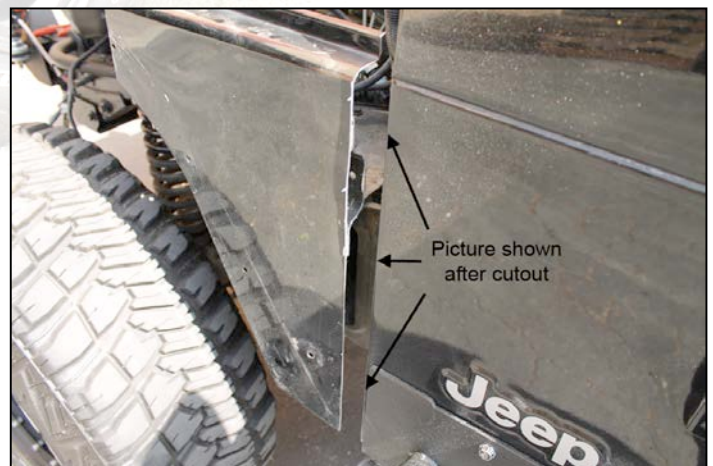

After Cutting


8. Your new fender should be ready to install. Place your new fender over the OE fender and align the mounting locations. **NOTE:** Your new fender mounts on the same OE fender mounting locations.
9. Attach the (4) bolts that secure the fender to the body. **NOTE:** Do not tighten at this time.

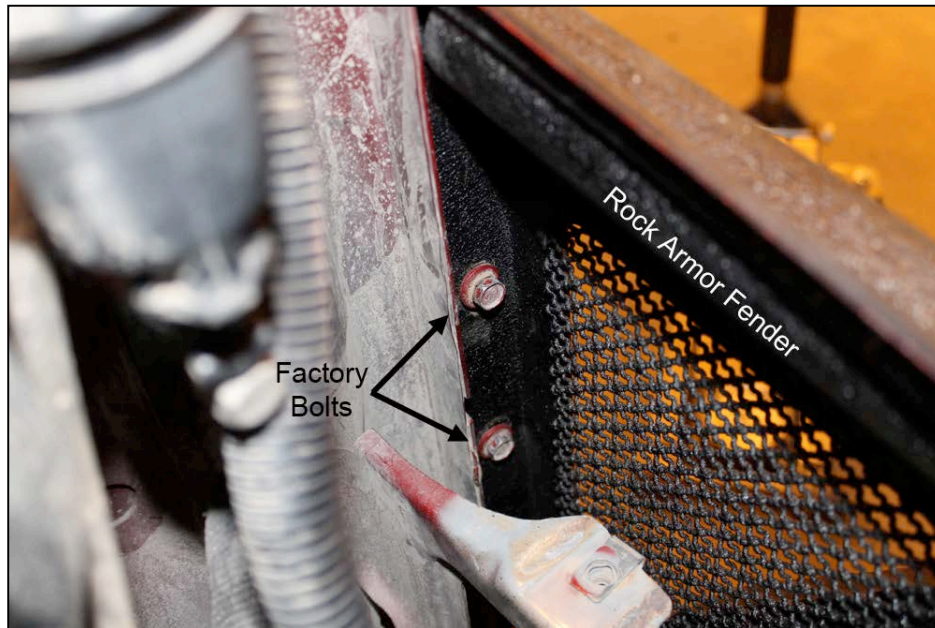

10. Proceed to secure the front of the fender to the radiator support by using the (3) factory bolts removed in step four.
11. Tighten all bolts at this time.



12. Once your fender is fully attached, use the holes on the top part on the fender as templates to drill out new holes on the OE fender.
13. Once you have drilled out the holes on the OE fender, use (5) 5mm x 25mm Allen Head Bolts, (5) 5mm Nylock Nuts and (10) 5mm Flat Washers to attach to new fender to the OE fender. Fully tighten all bolts at this time.

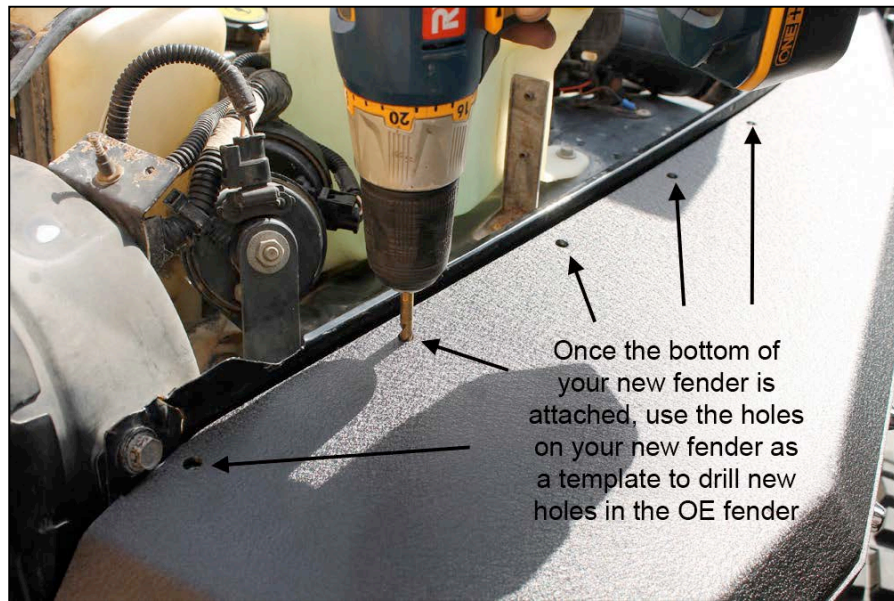

1. Drill out the new mounting locations on the new bumper. **IMPORTANT!** Always wear eye protection when using a power tool.

