

2021 + Ford  
Bronco



I-VFT-01

Part # HFB-09-102 - 2 Door  
HFB-09-101 - 4 Door  
HFB-19-102 - 2 Door  
HFB-19-101 - 4 Door

## Voyager Fastback Top

For proper installation and best possible fit, please read all instructions **BEFORE** you begin.  
For technical assistance or to obtain missing parts, please call Customer Relations at 1-800-328-2409.

### Important Safety Information



- Periodically check all components for tightness.
- Be sure to wear safety goggles while installing.
- When using power tools, read and understand all operating instructions.

### Contents **NOTE:** Actual product may vary from illustration.



Main Skin x1



Trailview Frame x1



Driver-side Side Window x1



Passenger-side Side Window x1



Rear Window x1



Driver-side Tub Rail x1



Passenger-side Tub Rail x1



Driver-side Door Upright Panel x1



Passenger-side Door Upright Panel x1



Driver-side Corner Pieces x1



Passenger-side Corner Pieces x1



Cross Bows x3



Driver-side Trailview Baseplate x1



Passenger-side Trailview Baseplate x1



Tailgate Bar x1

## Contents cont.

NOTE: Actual product may vary from illustration.



Driver-side Roll Bar Extrusion x1



Passenger-side Roll Bar Extrusion x1



M8 Long Bolts x12



M8 Short Bolts x2



M8 Flat Washers x12



M8 Lock Washers x12



Rubber Riv-Nut x4



Top Retention Strap x1

## Tools Required



T30 Torx Bit



HW6 Allen Wrench



5/16 Allen Wrench

## Pre-Installation Requirements



- Remove existing hard or soft top. For OEM (original/factory) soft tops, also remove:
  - Door Upright Panels

## Installation Steps **NOTE: Actual product may vary from illustration.**


Important: For a smooth fit and ease of installation, this top should be installed at temperatures above 72 degrees. Below this temperature, the fabric may contract an inch or more making it difficult to install. We highly recommend taking your new Top out of the package and letting it sit inside a warm place or in direct sun light for 1-2 hours before you install the top. When warm, this top will install quickly. Confirm all components are included.

Install the provided Door Upright Panel using factory hardware. **DO NOT OVER TIGHTEN BOLTS.**




1

Insert the Riv-Nuts in the first and third holes from the windshield.

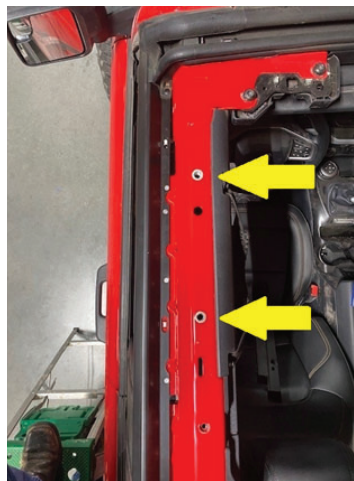

2


Place driver-side Roll Bar Extrusion on roll bar, aligning with corresponding roll bar holes. To help hold in place, loosely secure with provided M8 bolt with lock washer and flat washer in rear most hole of the Extrusion.

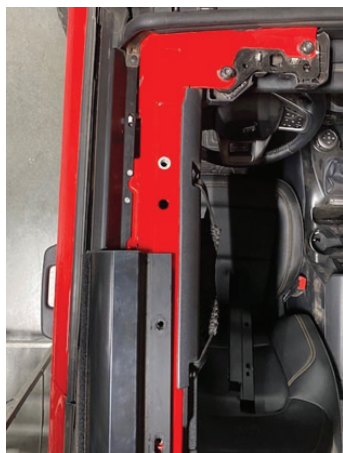

3

Next, install the driver-side Trailview Baseplate aligning with the first hole. Loosely secure with factory M8 Torx Head bolt that was removed from the roll bar, provided lock washer and flat washer in first 2 holes (yellow arrows). Then use provided M8 bolt with lock washer and flat washer in rear hole (blue arrow).

**Driver-side ONLY** - Install provided Top Retention Strap to **Blue** arrowed hole. Install through last eyelet.

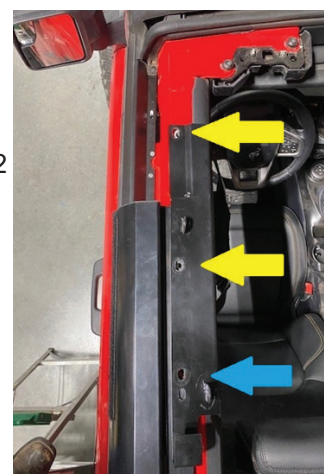


4



## Installation Steps **NOTE: Actual product may vary from illustration.**

Install rear Corner Piece using provided M8 hardware.

5

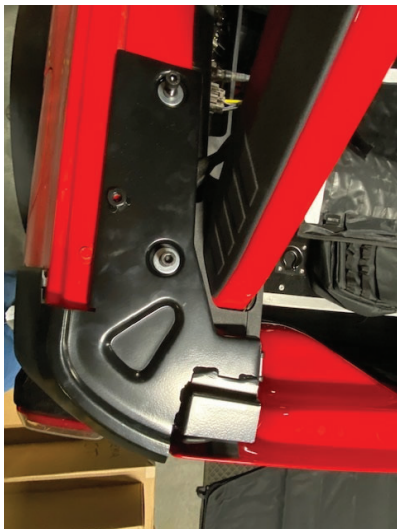

Install driver-side Tub Rail to body with provided M8 hardware.

**Note:** Tub Rail should be pulled outward before tightening in later step.

6



Secure Tub Rail to rear Corner Piece with short M8 hardware. Tighten all hardware. Repeat steps 1-7 on passenger side.

7



8

Lay Main Skin out on a flat surface. Install Trailview Frame into Main Skin by sliding header channel into front pockets. Secure all snaps. **Note:** Material may be tight, **DO NOT** use tools to fasten snaps.



Insert sewn in plastic strip into rails on each side of the Trailview Frame (easier if hook and loop is separated).



9



Secure hook and loop strips to Trailview Frame cross bar on both sides.



10



## Installation Steps **NOTE: Actual product may vary from illustration.**

Locate and install Cross Bows. Front Cross Bow is short and has foam ends. Middle Bow is the longest (2-door may have foam ends). Secure with hook and loop.



11

Insert rear Bow (shortest of the cross bows) into rear bow pocket the close flap.



12

With assistance, place Main Skin assembly on top of vehicle.



13

Align straight arms to rear most tabs on Trailview Baseplate. Secure with provided hardware.



14

Align curved arms to forward most tab on baseplate and secure with provided hardware. Repeat steps 14-16 on passenger side.



15

On both sides, insert front bow into tabs on rear of baseplate. Once in place, rotate until fully seated and flat. **Note:** Make sure bow is curved upward.



16



## Installation Steps **NOTE: Actual product may vary from illustration.**

Next, extend rear straps to rear Corner Pieces. Loosen buckles and hook straps to rear corners.



17

Once secured, tighten strap by pulling downward. Repeat on the other side.



18

Locate Driver Side Window Panel and loosely insert strap into buckle at upper corner. Start zipper and FULLY zip. **Note: Do Not** insert into Door Upright Panel at this time. Repeat steps 17-19 on passenger side.



19

Locate rear window. Loosely insert top three straps into buckles. Zip rear window FULLY onto both rear corner panels.



20

Insert plastic tab on corner panel into door upright. Start at top and insert to the base of the door upright.



21

Then start the plastic tab on the base of the side panel into tub rail track. Start at the door and insert towards the rear. **Do Not** insert plastic tab around rear corners at this time. Repeat steps 21-22 on the passenger side.



22



## Installation Steps **NOTE: Actual product may vary from illustration.**

Unzip both sides of rear window approximately half way up. Install tailgate bar on bottom of the rear window onto the sewn in piping.



23

Align the tailgate bar corner assembly with tailgate bar clamps on rear corner pieces. Once aligned, rotate entire tailgate bar in downward motion to seat assembly into clamps.



24

Once the tailgate bar is installed and locked into place, insert plastic tab on corner panels into rear corner tub rails on both sides. Zip rear window closed. Tighten all straps that were left loose in above steps. **Do Not** over tighten straps to avoid breaking buckles and distorting material.



25

Insert the plastic tabs on the Main Skin into the tracks on the Roll Bar Extrusion across top of doors. Repeat on the other side.



26

Ensure clamp alignment with factory bracket on windshield. Apply a little downward pressure on the Trailview Frame to fully engage clamps.



27

If clamps are difficult to secure, some adjustments can be made on the factory bracket. Loosen the 2 Torx head bolts and adjust as needed.



28



## Installation Steps **NOTE: Actual product may vary from illustration.**

The included Window Storage Bag can be stored in the rear of the top. Undo the hook and loop around the rear of top and fold forward. Using pull tabs, remove plastic tabs from the Roll Bar Extrusion and fold over exterior Main Skin. Attach the 3 hook and loop patches to secure the Window Storage Bag. Close exterior Main Skin, insert plastic tabs and re-secure hook and loop around top.



29