

## SHERPA SADDLE BAG JL


USE OF THE DEAD SPACE OVER THE FENDERS

## INSTALLATION INSTRUCTIONS



Attach the included zipper strip to the hardtop bolt holes on the top edge of the tub. If the Jeep does not have a hardtop but does have the factory captive nuts for the hardtop under the tub rail, use 8mm x 1.25 x 20mm long screws (not supplied) to attach the zipper strips. If the Jeep does not have the factory captive nuts, 3/4"-long 5/16 screws and nuts or 20mm-long 8mm screws and nuts (not supplied) can be used to attach the zipper strips.

If the Jeep is equipped with a soft top: Refer to the owner's manual section on Door Frame Removal. Remove the frames, lay the zipper strip on the top of the body and replace the door frame, inserting the door frame pin through the second hole in the front of the zipper strip. Once the door frame is replaced, the rear hole in the zipper strip is secured in the hole which is used to secure the hardtop.

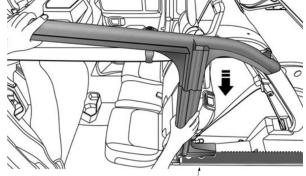

The door frame pin goes through the second hole in the front of the zipper strip.



Like your favorite pair of jeans, perfectly fitted fabric products may be a bit tight when they're new and like your jeans after a little use they'll stretch to that perfectly comfy fit you love so much. The initial fit of Saddlebag zipper strip is designed to be very tight for the same reason. When installing the strip to the Jeep tub, pull it tight to stretch it so the grommets line up with the holes in the tub/hardtop. This is normal and will ensure a good fit over time.



## SHERPA SADDLE BAG JL

USE OF THE DEAD SPACE OVER THE FENDERS



## CARE INSTRUCTIONS

The SHERPA Saddle Bag is made from heavy cotton duck canvas fabric and leather and is designed to give years of service on the road and trail. Canvas is very easy to clean and handle - a soft and dry bristled brush can be used to remove any loose dust or dirt.

If the canvas needs further cleaning, mix clean water and a small amount of mild detergent and use a damp towel or bristled brush dipped in the solution and scrub or rub the dirty areas gently. Lightly spray the canvas area with water to remove the soap residue and dry with a towel.

To keep the SHERPA Saddle Bag looking new longer, we recommend treating the fabric with Scotchgard Auto Fabric & Carpet Protector. Scotchgard provides excellent resistance to water, oil and stains and it doesn't change the look and feel of the fabric, so the fabric stays soft and colors stay true. Scotchgard comes in an easy-to-use spray bottle.

Note: Do not Dry-Clean, bleach or put in the dryer as these may potentially discolor the canvas or leather.