



INSTALLATION INSTRUCTIONS

PART No.

50721

**Jeep® JK Wrangler
CB Radio Mount**



REQUIRED TOOLS

Philips Screwdriver
T25 Torx Bit

KIT CONTAINS

CB Radio Mount
M5 Nutsert
M5 x 0.8 x 12mm SS Button Head Bolt
M5 x 0.8 x 20mm SS Button Head Bolt
M5 x 0.8 SS Nyloc Nut

QTY

1
2
2
2
2

5072100



INSTALLATION INSTRUCTIONS

PART No.

50721

**Jeep® JK Wrangler
CB Radio Mount**

1) PREPARE

Remove or pull back your vehicle's freedom top panels or soft top to grant you access to the windshield frame cover panel.



Gently and evenly pull down on the cover to release the body clips, revealing the footman loop.



With a T25 Torx bit, unscrew and remove the footman loop, save factory bolts for future use if needed.




2) INSTALL

If you own an 07-10 JK, you will need to drill the holes out to install the included nutserts.

With the mount in hand with the loop facing up, place the footman loop onto the angled plate.



Insert the included bolts through the front and begin securing the mount and footman loop back into the windshield frame, using a Philips screwdriver.

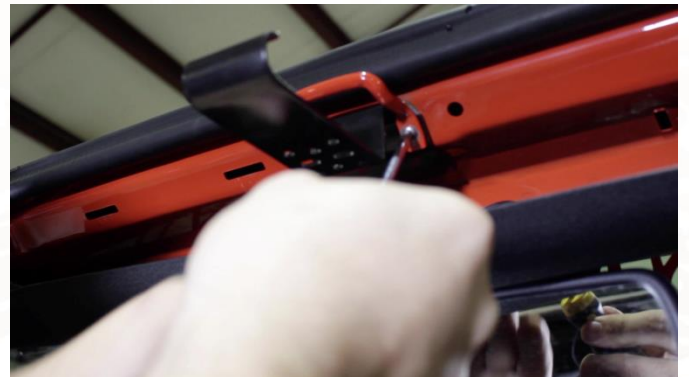

3) REASSEMBLE

Push your windshield frame cover panel back into place and resecure your freedom panels or soft top.

Install your CB radio of choice according to the manufacturer's instructions.

ENJOY YOUR NEW KENTROL JK CB RADIO MOUNT!!!