




INSTALL SHEET

JL4TD18-TUBE DOORS

2018 JEEP WRANGLER JL

VIDEO GUIDES:
WWW.MCAFTERMARKET.COM/INSTALL

PACKAGE CONTAINS

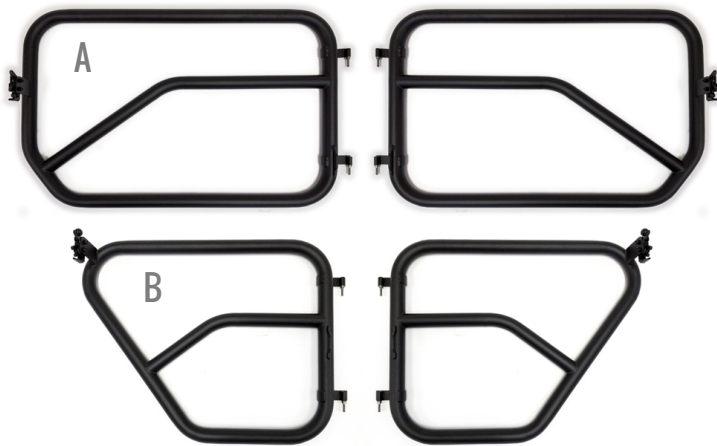

Components:
A - Front Doors
B - Rear Doors (if applicable)

Tools Needed:
T40 Torque Bit
T50 Torque Bit

SERVICE AND SUPPORT **CONTACT**

Motor City Aftermarket

734-525-9030

sales@mcaftermarket.com

www.mcaftermarket.com



Fold the side mirror (Front Door Only) so that it is closer to the window.

Roll windows down.

Remove bolts from door hinge using T50 torque bit and tool.

Retain bolts for later step.



Open door and remove plastic panel at footwell.

Unplug connector and disconnect strap from hook.

Using T40 torque bit remove factory door tensioner, place hardware in trunk storage panel.

Holding the door so it does not swing forward, step around to the front of the door and remove door from vehicle hinge.

Place doors in a safe storage location.



Take the Motor City Aftermarket Tube Doors out of the packaging, make sure the door latch is in the open position, align tube door hinge bolts into factory hinge and close door.

Reach in through the door opening and attach the strap to the factory hook in the kick panel. The factory plastic panel can be installed at this time.

Using the door bolts from the earlier step, reinstall into factory hinge using the T50 bit.



Continue with the steps at other door locations to finish installation of your Motor City Aftermarket Tube Doors.

Check out www.mcaftermarket.com to see our Trail Mirrors for the Wrangler JL.