


PACK AGE CONTAINS

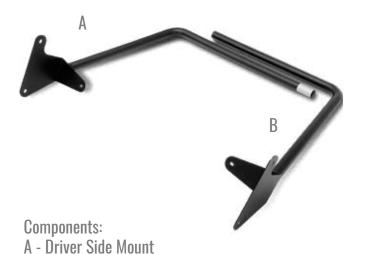

SERVICE AND SUPPORT CONTACT

Motor City Aftermarket
734-525-9030
sales@mcaftermarket.com
www.mcaftermarket.com

B - Passenger Side Mount

C - Hardware Packet (not shown)



Remove bolts (1,2,3) from the lower A-pillars.



Bolt the driver side portion of the mount to the lower A-pillar holes (3) and tighten.



Walk around to the passenger side of the vehicle, fasten the mount using the 3 bolts to the A-pillar holes (before inserting into the other end of the mount).



Lightly lubricate the inside of the mount tube with WD-40 or dishsoap. Carefully join the male end of the light bar mount with the female end. Install your chosen lighting and run wiring per the manufacturer's recommendation.

