

908-Quick N Easy Rack

Hardware list:

908-12X and 908-13X

- (2) 8mm x 3 1/4" hex head bolt
- (2) 5/16" lock washer
- (4) 5/16" x 1 1/2" hex head bolt
- (10) 5/16" flat washer
- (4) 5/16" NyLok nut
- (4) 1/2" spacer tube

908-11X & 908-10X

- (8) 5/16" X 1 1/2" hex bolts
- (16) flat washers
- (8) NyLock nuts
- (8) 1/2" spacer tubes

Parts list:

908-12X and 908-13X

- Front crossbar
- Rear crossbar (48")
- special clamps(2)
- plastic caps (4)

(908-11X)

- Front crossbar 49.5"
- Rear crossbar 44.5"
- Special clamps (4)
- Plastic caps (4)

(908-10X)


- Front crossbar 49.5"
- Rear crossbar 48"
- Special clamps (4)
- Plastic caps (4)



Weight capacity: 500lbs

Tools Needed: 3/8" drive ratchet wrench; Socket sizes: 1/2", 9/16"; Combination wrench sizes: 1/2", 9/16"

Front mounting on TJ & LJ

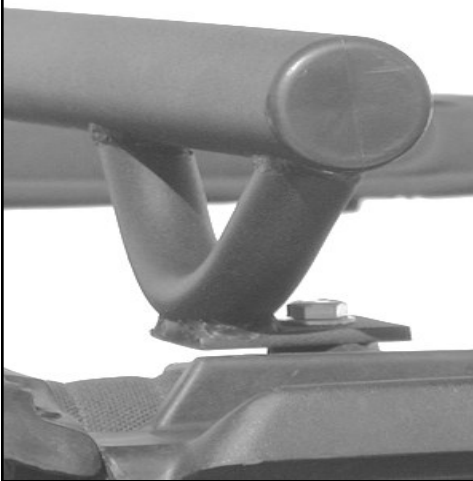

If installing on a 1987-1995 Wrangler skip to step 4.

For 1997-present wranglers, start on step 1.

Step 1. Locate holes in the roll bar above the driver and passenger side front seats. these holes may have a bolt in them, they are the bolts that secure the plastic side piece to the roll bar.

Step 2. Remove the bolts that are closest to the windshield. Then place front crossbar on top of the roll bar. (you may place the crossbar directly on top of the plastic piece that attaches to the roll bar.

Step 3. Secure crossbar to the roll bar using 8mm x 3 1/4" hex head bolts, 5/16" lock washer and 5/16" flat washer. Do this by placing the flat

washer on the bolt then insert bolt through mounting bracket on crossbar, through plastic side piece, through roll bar and then the bolt will thread into the plastic side piece.

Step 4. Install the rear cross bar using the special clamps, 5/16" x 1 1/2" hex head bolts, flat washers, spacer tubes, and NyLok nuts. The rear cross bar will mount around the roll bar (it can also be mounted around the roll bar with the roll bar padding in place). On 2003 and newer wranglers and unlimiteds you will have to trim the roll bar padding that is under the roll bar cover. Simply unzip the cover and trim padding with a sharp razor. You do not need to trim the roll bar cover. If installing on a 1987-1995 Wrangler the front crossbar will mount the same way the rear crossbar did. On 1992-1995 wranglers the 49.5" spaced mounts will mount to the front and the 44.5" spaced mounts will be in the rear. On 1987-1991 wranglers the 49.5" spaced mounts will mount on the front and the 48" spaced mounts will mount in the rear.

Step 5. Install plastic end caps into the ends of each of the crossbars. you may want to use a silicon sealer onthe end-caps before installing them.

Rear cross bar installed

