

HFB-08-003

# **Interior Storage Rack Ford Bronco**

HFB-08-003 Rev. 0. 08/22

## **Components and Hardware:**



## **Components and Hardware:**

1.	Storage Rack	(1)
2.	Rack Mount (Driver & Passenger Side)	(2)
3.	M8 x 1.25mm Hand Knob	(2)
4.	M8 Large Flat Washer	(2)
5.	M8 x 1.25mm Hex Nut	(2)
6.	M8 x 1.25mm, 50mm Serrated Flange Bolt	(4)
7.	M8 Large Flat Washer	(4)
8.	22mm Spacer	(4)
9.	M8 x 1.25mm, 20mm Button Head Bolt	(6)
10	. M8 Small Flat Washer	(6)
11	. M8 x 1.25mm Serrated Flange Nut	(6)

## **Tools for Installation:**


- 5mm Allen Wrench
- 13mm Wrench
- 13mm Socket Wrench

#### NOTE:

This rack allows you the option to securely mount a Farm Jack in the interior of your Bronco. Notice the Mount and basket has a cutout to accommodate the Farm Jack. This cutout must be towards the back of

rack mount is drivers or passenger side.

Use Hand Knob (3), Washer (4), and Nut (5) to secure the Farm Jack to the basket.

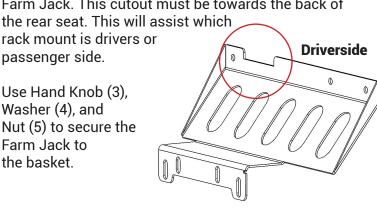





# Interior Storage Rack, Bronco

#### Step 1:

Remove the plastic cover in the trunk area that covers the soft-top hinge mechanism. These covers are attached with clips. Simply pull on the cover to release the clips.



## Step 2: Soft-Top ONLY:

Remove the top two bolts holding the soft-top hinge mechanism. DO NOT remove the lower third bolt, this will hold the mechanism in place while mounting the rack mount. Keep these bolts to be reused.



#### Step 3:


**Soft-Top ONLY:** Place Rack Mount (2) into place. Reuse the OE bolts to loosely install this mount. Use the outer slots to mount for soft-top.

**Hard-Top ONLY:** Use bolt (6), to washer (7), to rack mount (2), into spacer (8). Thread bolt into the threaded

Hard-Top

inserts of the vehicle. Use the inner slots to mount for hard-top.

**Note:** Keep the cutout near the back of the rear seat. See note on page 1.

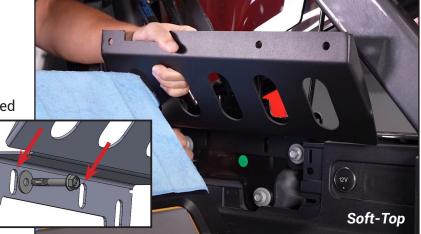



# Interior Storage Rack, Bronco

## Step 4:

With both driver and passenger rack mounts loosely installed, Place rack (1) into position. This would be best accomplish with as assistant to help hold in position while installing hardware.

Note: Jack cutout must be towards the back of the rear seat.



### Step 5:

Use Button Head Bolt (9) with washer (10) through the rack and mount. Secure with Flange Nut (11). Requires three on each side. Adjust basket and mounts to align and level then fully tighten all hardware.



#### Step 6:

Replace the plastic covers removed from step 1. Press firmly to assure all the clips engage.

