



18+ JEEP WRANGLER JLU

ROLL BAR MOLLE PANEL INSTALLATION INSTRUCTIONS


JMP01

Thanks for purchasing a Reaper Off-Road molle panel for your 18+ Jeep Wrangler. Our team has worked to ensure that this product is the premium in performance, quality, and fitment. We are proud to say that this product will enhance the look and off-road performance of your vehicle. We encourage you to read through the following steps, and check the included Bill of Materials before beginning. Please follow these steps to ensure that your installation goes as planned.

Our products are specifically designed with ease of installation in mind. However, if you are uncomfortable with the following instructions please seek professional assistance. Reaper Off-Road will not be held liable for harm or injury to yourself or your vehicle during installation or use of this product.

Recommended Tool List

- Metric socket set
- Inch socket set
- Ratchet
- Plastic trim removal tool
- Hex key set
- T25 Torx screwdriver/bit

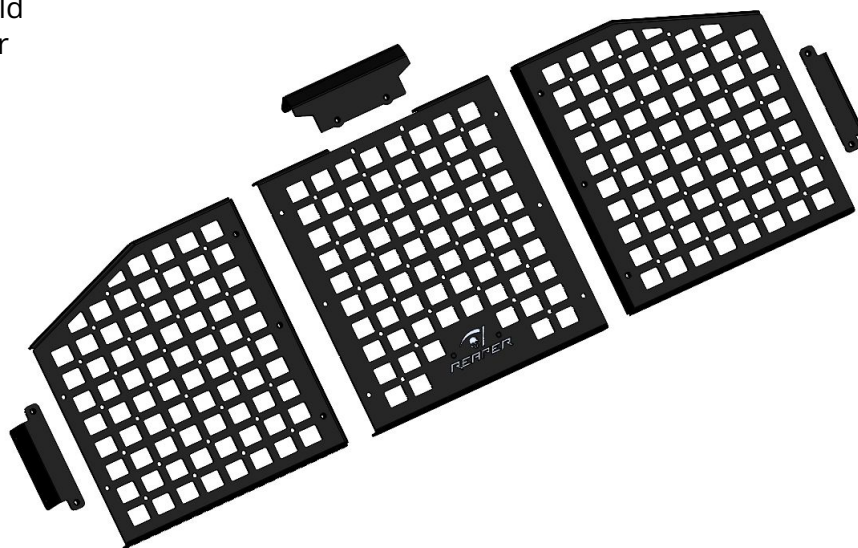



R1031
V01 - 11.22.22



Visit us online:
ReaperOffRoad.com

Call Us Toll-Free:
844-868-3022

 [reaper.off.road](https://www.instagram.com/reaper.off.road)
 [Reaper-Off-Road](https://www.facebook.com/Reaper-Off-Road)

ASSEMBLY

Steps may vary depending on trim level and optional equipment.

This product includes accent plates that can be customized to the color of your choice or left as is.

The plate is accessible after installation, so you can choose to coat it ahead of time, or later.

- A1.** Locate the removable section of the plastic trim on each side of the roll bar. Use a trim tool, or pull by hand to remove the panels and expose the mounting points.
- A2.** Install a side mounting bracket (JMP01-1) at each side. Use (2) M8 bolts(B) and (2) M8 washers(E) at each side and tighten with a 13mm socket.
- A3.** Remove the center (2) screws along the top of the roll bar using a T25 Torx screwdriver. Keep the screws for re-install.
- A4.** Install the top mounting bracket (JMP01-2) at the center of the roll bar, reusing the (2) T25 screws.
- A5.** Begin assembling the panels outside of the vehicle, beginning with the logo backing plate. Install onto the studs at the back of the center panel and secure with (2) 1/4" nuts(C) and (2) 1/4" washers(D). Use a 7/16" socket to tighten.
- A6.** Lay out the left, middle, and right panels as shown on the bill of materials. The middle panel will install over / around the side panels. Align the holes to the pre-installed nuts and install (10) 1/4" screws (A) and (10) 1/4" washers(D). Install the screws loosely until all connections are made, then tighten with a 5/32" hex key.
- A7.** Install the panel assembly into the vehicle by aligning it to the mounting brackets. Secure the panel in place using (6) 1/4" screws(A) and (6) 1/4" washers(D). Tighten all hardware using a 5/32" hex key.



Detail A2: Install side mount brackets



Detail A4: Install top mount bracket



Detail A6: Assemble panels



Detail A7: Install complete

R1031
V01 - 11.22.22