

# ROAD ARMOR

RULE THE ROAD



## INSTALL INSTRUCTIONS

### Jeep JL Front Skid Plate

**Products:** 5182SPB(Mid-Width), 5183SPB(Full-Width),

**Application :** 2018+ Jeep Wrangler JL

2020+ Jeep Gladiator JT

## I WARNING

Read the instructions completely before beginning installation. Before tightening bolts, drilling or cutting where required, check to make sure there are no obstructions such as brake, fuel or electrical lines which may be damaged. Also keep in mind this is an after-market product and MAY require minor shimming and/or trimming, reaming, etc. for proper fit. Road Armor is not responsible for any damages to vehicle.

## ⓘ IMPORTANT NOTICE

- Be sure to inspect and test fit your product to ensure proper fitment before having it coated, painted, bed lined, etc.
- Road Armor will not be responsible for the cost of coating your unit if any problems with fit or finish are not noted and addressed beforehand.

## SAFETY FIRST!

- FOLLOW ALL INSTRUCTIONS, YOUR SAFETY AND THE SAFETY OF OTHERS IS MOST IMPORTANT.
- WEAR APPROPRIATE EYE PROTECTION AND EXERCISE CAUTION

## REQUIRED TOOLS


Metric and SAE Socket Sets and Wrenches

## INCLUDED HARDWARE

- (9) 3/8-in x 1-in Hex Head Bolt Tabs
- (9) 3/8-in Lock Nuts
- (18) 3/8-in Small Washers



- 1 Install Road Armor Accessory Mid-Width (PN#5182SPB)
- 2 Install kit skid plate to lower section of bumper with kit 3/8" bolts (9), washers (18) and lock nuts (9) loosely; once aligned tighten all hardware. **FINISHED!**

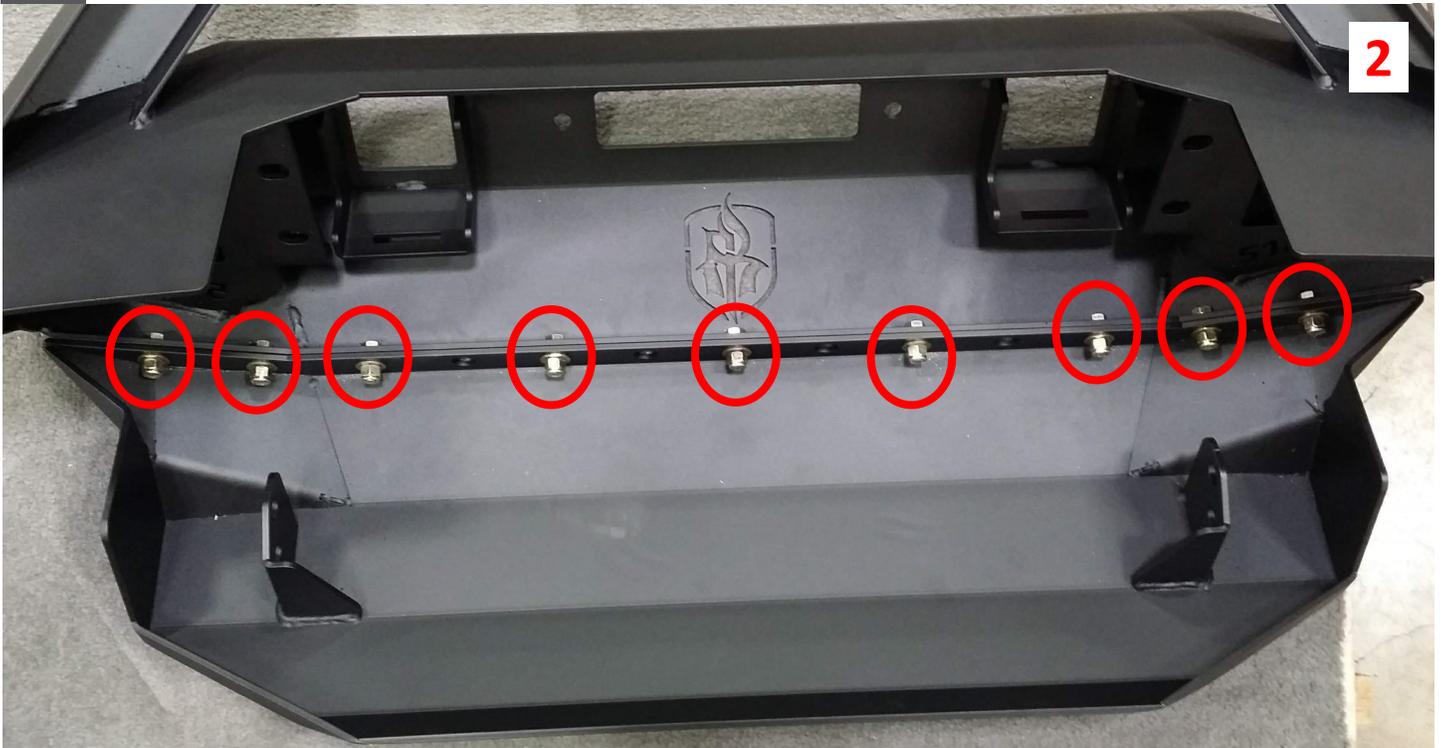

- 1 Install Road Armor Accessory Full-Width (PN#5183SPB)
- 2 Install kit skid plate to lower section of bumper with kit 3/8" bolts (5), washers (10) and lock nuts (5) loosely; once aligned tighten all hardware. **FINISHED!**

