

INSTALL INSTRUCTIONS

Application : 2018+ Jeep Wrangler JL

JL Rear INNER FENDER LINERS: 518LFR0Z

I WARNING

Read the instructions completely before beginning installation. Before tightening bolts, drilling or cutting where required, check to make sure there are no obstructions such as brake, fuel or electrical lines which may be damaged. Also keep in mind this is an after-market product and MAY require minor shimming and/or trimming, reaming, etc. for proper fit. Road Armor is not responsible for any damages to vehicle.

ⓘ IMPORTANT NOTICE

- Be sure to inspect and test fit your product to ensure proper fitment before having it coated, painted, bed lined, etc.
- Road Armor will not be responsible for the cost of coating your unit if any problems with fit or finish are not noted and addressed beforehand.

SAFETY FIRST!

- FOLLOW ALL INSTRUCTIONS, YOUR SAFETY AND THE SAFETY OF OTHERS IS MOST IMPORTANT.
- WEAR APPROPRIATE EYE PROTECTION AND EXERCISE CAUTION WHEN DRILLING / CUTTING

REQUIRED TOOLS

Metric and SAE Socket Sets and Wrenches Drill & Unibit

INCLUDED HARDWARE

- (8) 10-24 x 1/2 Bolts
- (8) 10-24 Nuts
- (40) 5/16"x3/4" Bolts
- (32) 5/16" Flange Nuts
- (8) 5/16" U-Nuts
- (2) Logo Plates
- (4) Nut Cover Plates
- (1) PSG Bottom FENDER LINER
- (1) PSG Top FENDER LINER
- (1) DVR Bottom FENDER LINER
- (1) DVR Top FENDER LINER





1 Remove 8 plastic clips from each inner wheel well.


NOTE **If you are installing Road Armor Fender Flares skip STEP 2**

2 MARK, CUT and REMOVE plastic OEM LINER as shown below. (KEEPING STOCK FENDERS)



3 Remove rear fender assembly by firmly pulling on one end of fender until all 12 clips “pop off”.

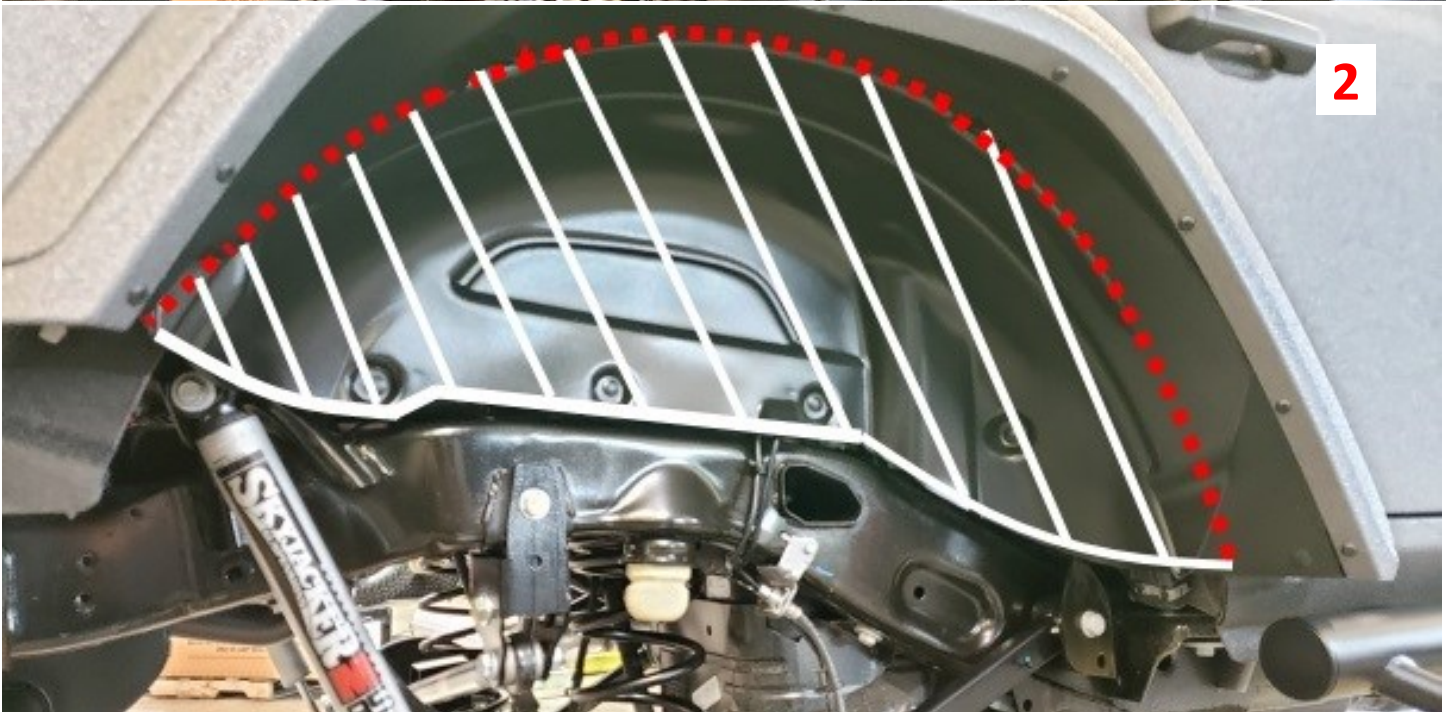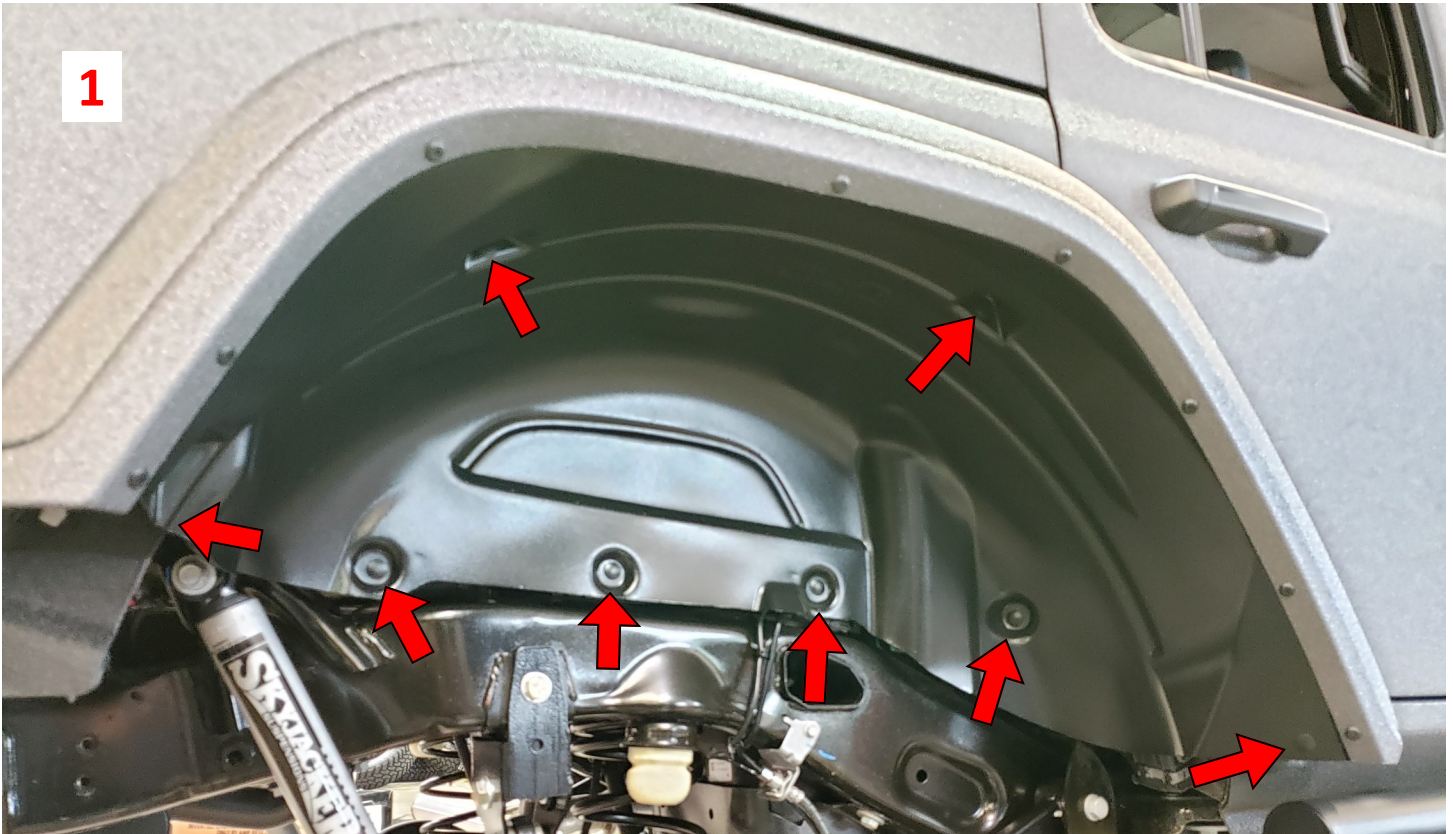

- 1 Cut out each kit DRIVER AND PSG SIDE TEMPLATES (4 pcs) found at the end of instructions. Cut out hole without "crosshairs". Align TEMPLATES with existing fender holes and fender well edge.
- 2 After TEMPLATES are secured with tape, center punch and drill 3 holes to 3/8" (RED ARROWS)
- 3 Drill 5 existing holes to 3/8" as shown with BLUE ARROWS.

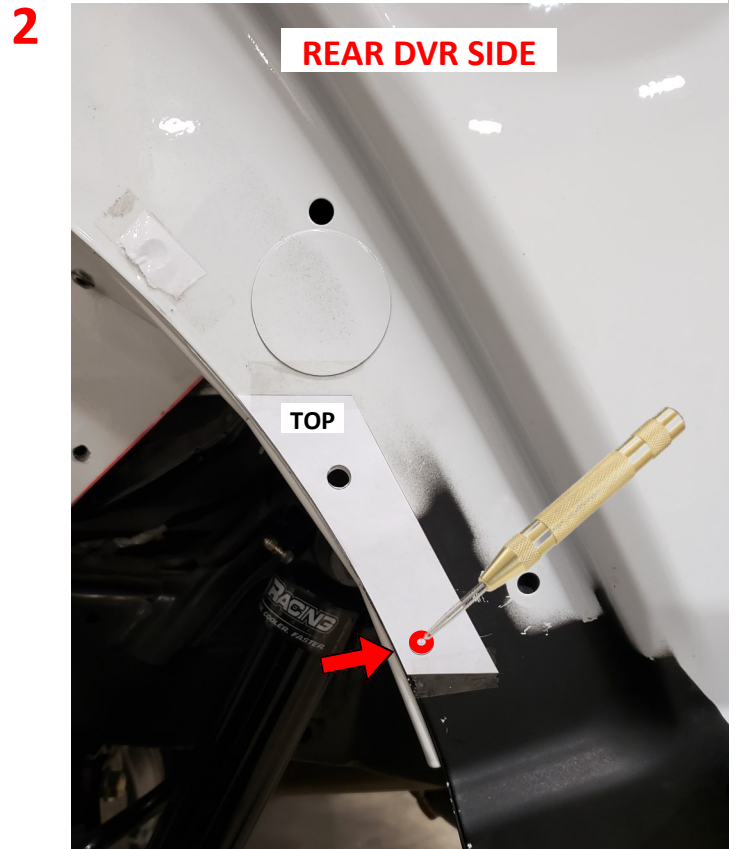

- 1 REMOVE PROTECTIVE FILM.**
- 2 Assemble REAR FENDER LINER using 9 - 5/16" BOLTS & FLANGE NUTS as shown below.**
- 3 Assemble LOGO PLATE using 4 - #10-24 BOLTS & FLANGE NUTS as shown below.**
- 4 Assemble REAR FENDER LINER using 4 - 5/16" U-NUTS as shown**
- 5 Placement of both FLANGE NUT COVERS shown with BLUE indicators.**

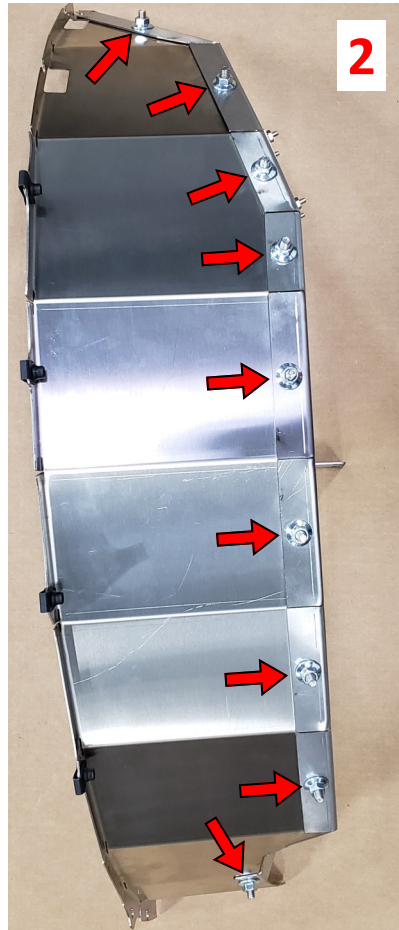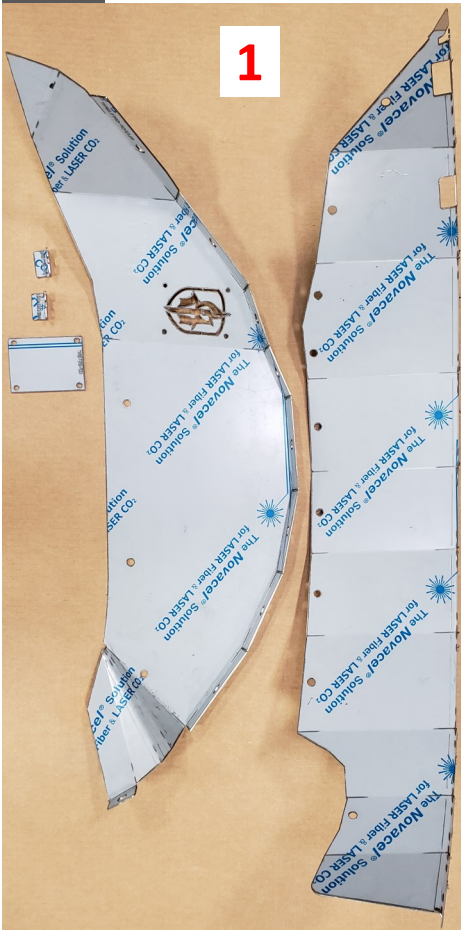

1 Install JL FENDER LINER behind Jeep fender well and secure using 11 - 5/16" HARDWARE.



2 Install two NUT COVER PLATES shown in location above. (Between inner seam and 5/16" nuts.)

3 Install ROAD ARMOR FENDER FLARE at this time or OEM rear fender flare.



