

STEERSMARTS™

2007-2018+ (JK/JL/JT) Jeep Wrangler Sway Bar End Links for 2.5 – 3.5” Lift Installation Instructions

Stabilizer Relocation Bracket Number: 74009001



Tool List:


1. 18mm Wrench
2. 18mm socket and ratchet
3. Torque Wrench

Contents:

1. 2x End Links
 2. 2x M12 Fasteners
 3. 2x M12 Nuts
 4. 2x Spacers
 5. 4x Bushing Sleeves
-

Installation Steps:

1. Remove sway bar end links that are currently on your JK / JL.

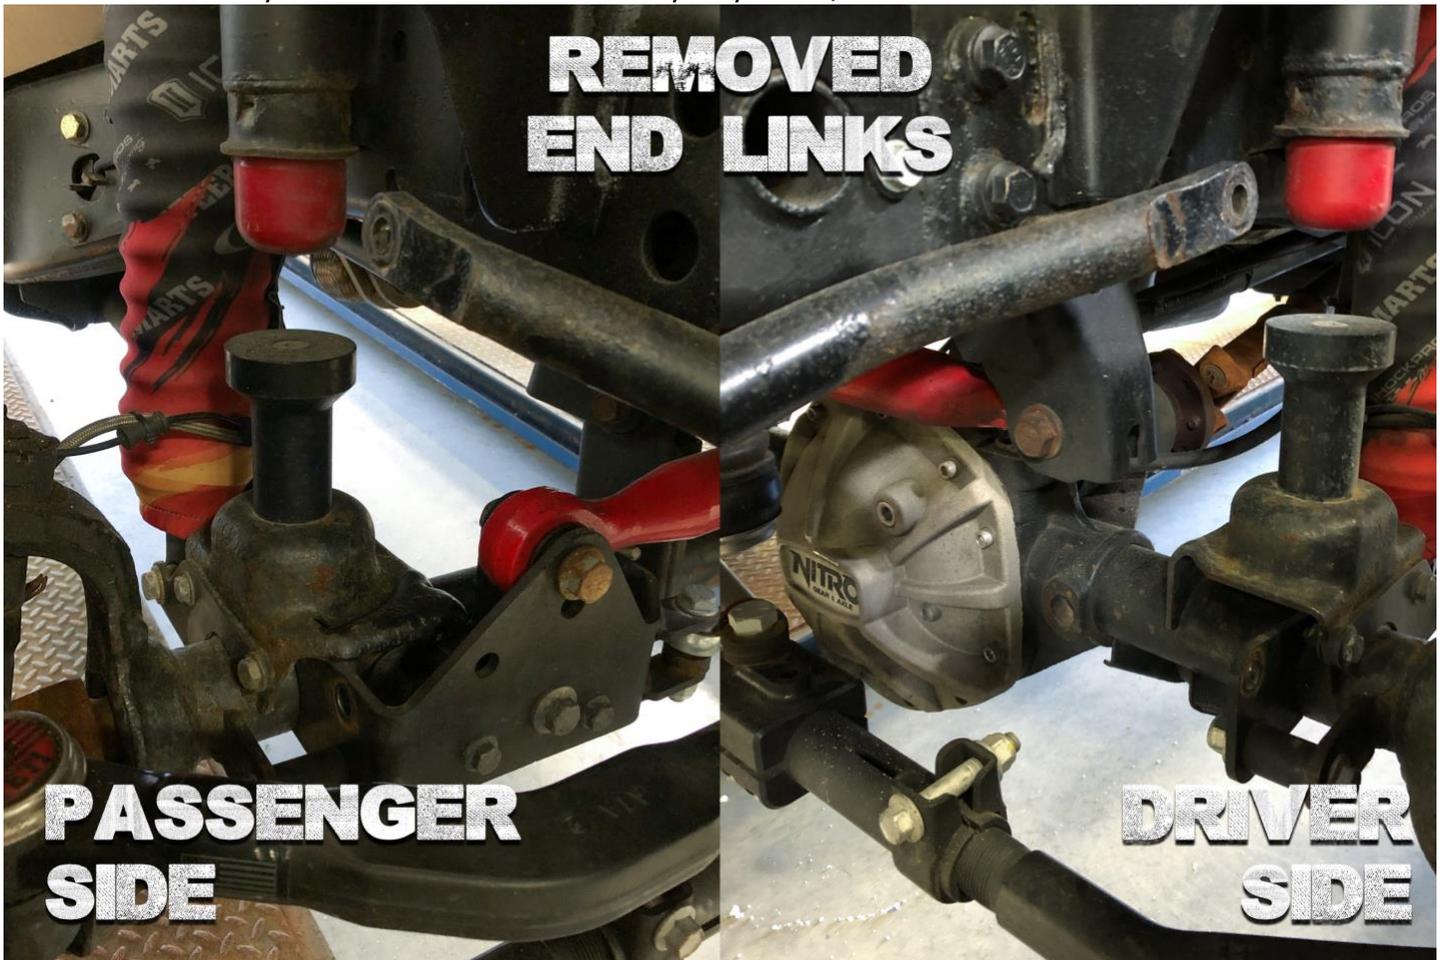

(Note - you will re-use the two lower bolts from your stock sway bars or the sway bars that you're using.)

2. Open End Link Box and find the correct link for each side.




- a. Note that the flush side of the end link bushing will face inwards towards the sway bar – see *photo below*



3. Insert sleeves into bushings




- Slide fastener through top hole, place spacer between end link bushing and sway bar

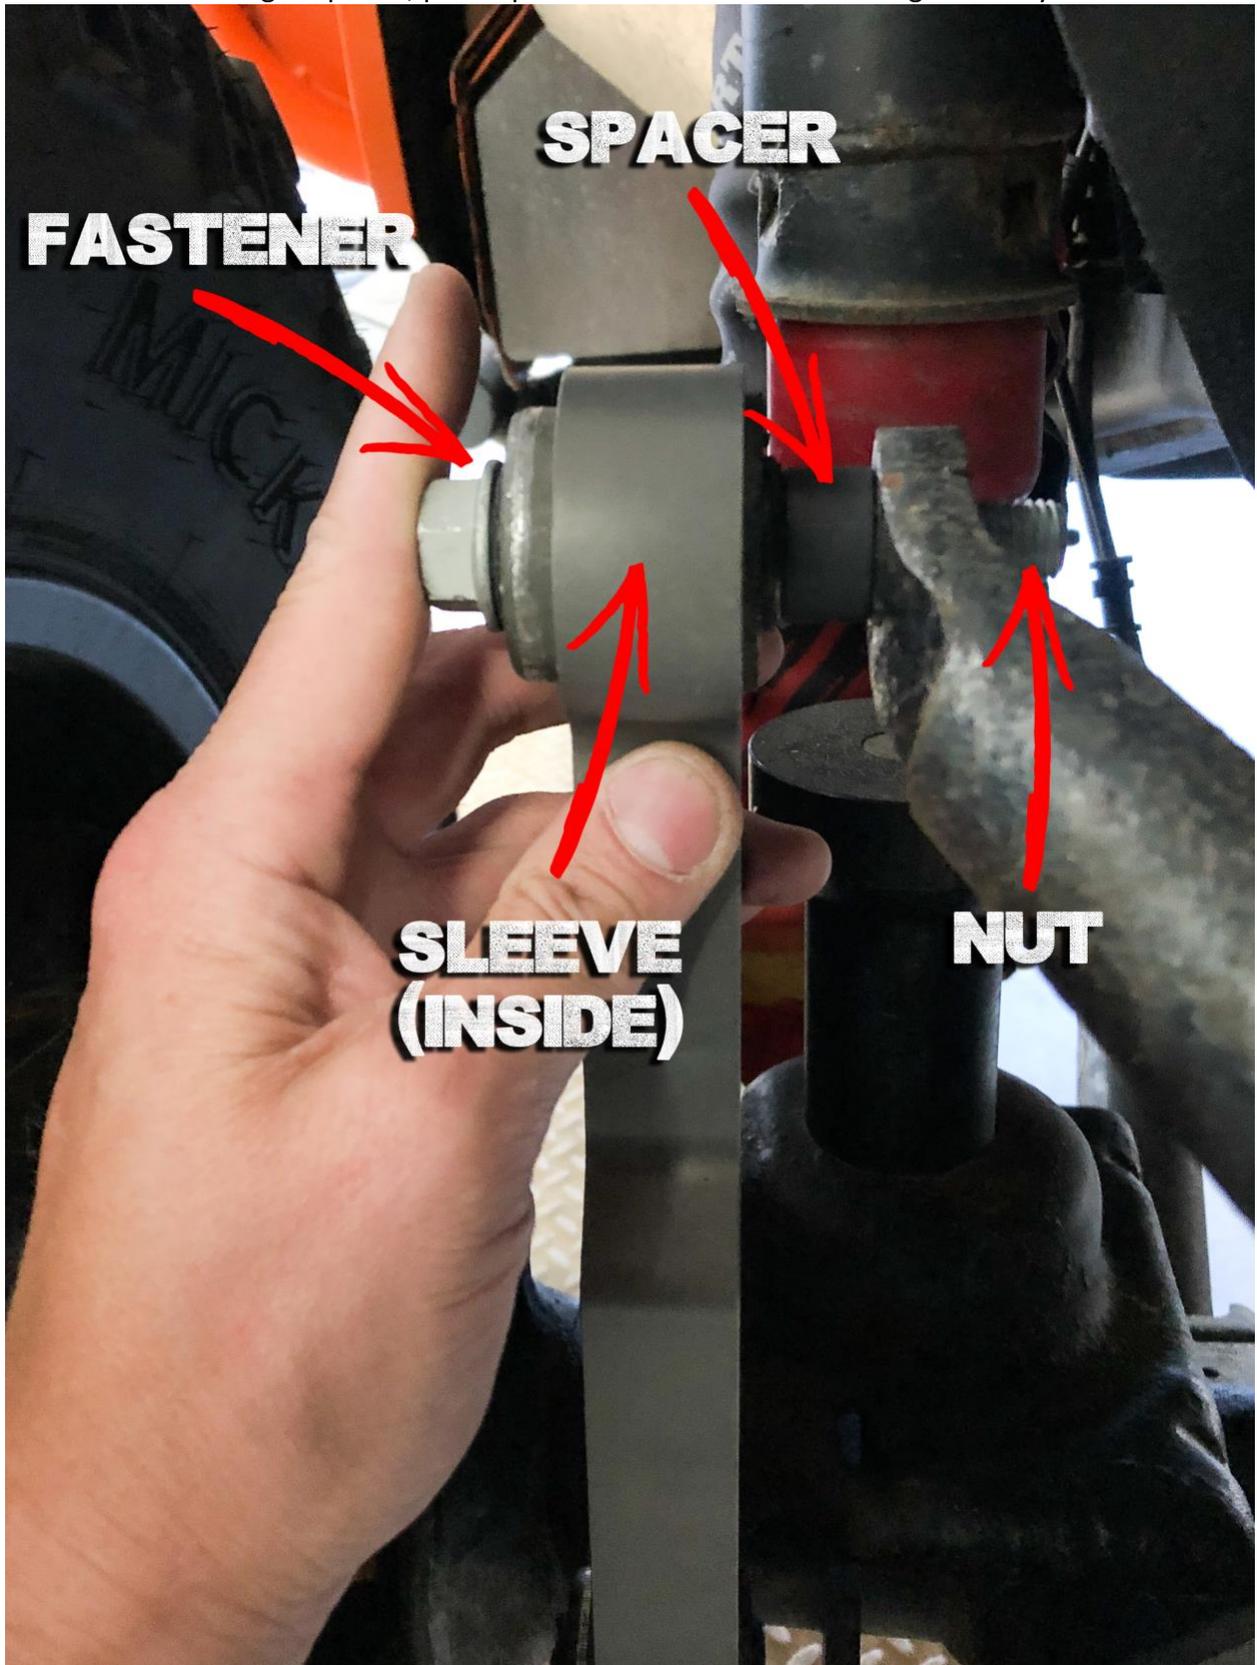

5. Affix M12 nut on the end of M12 fastener and torque to spec.
 - a. **Torque: 75 ft. lbs.**
6. Insert stock bolt into the lower end link hole; affix nut and torque to spec
 - a. **Torque: 75 ft. lbs.**
7. Once torqued in place, it should look like this:



8. Repeat steps 3 through 7 on the other side to complete the Yeti XD Sway Bar End Link installation

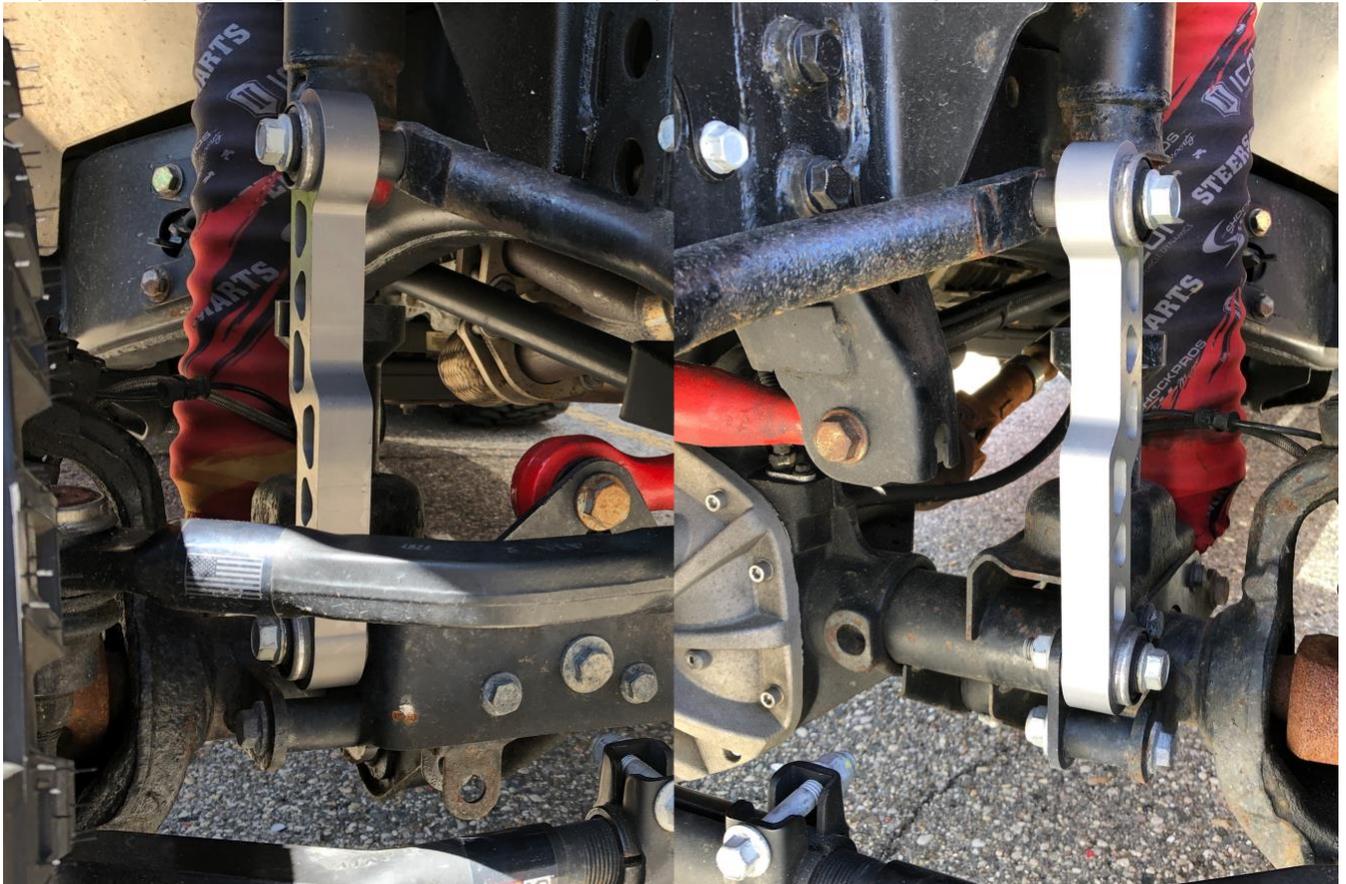

- a. Note that this Jeep is equipped with a Top Mount draglink and our trackbar relocation bracket. If you are running a JK/JL w/o a trackbar relocation bracket, mounting location is shown below:

