




Tailgate Molle Panel


Part # HFB-08-010

Components and Hardware:

1.

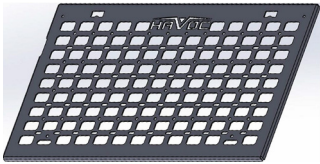


2.




3.



4.

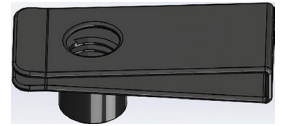

5.

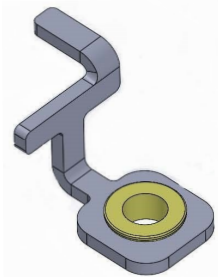

6.



7.



8.



Components and Hardware:

1. Tailgate Molle Panel	(1)
2. Upper Mounting Bracket.....	(1)
3. Lower Mounting Bracket	(1)
4. U Spring Nut	(6)
5. Tab Nut	(2)
6. M6-1.0 x 20mm Button Head Bolt	(7)
7. M6-1.0 x 10mm Button Head Bolt	(1)
8. M6 Flat Washer	(8)

Tools for Installation:

- Allen Wrench
- Trim Removal Tool

Tailgate Molle Panel

1. Open the tailgate and locate the top plastic cover on the tailgate.



2. Remove the plastic cover using the appropriate Trim Removal Tool.



3. Install the upper U Spring Nuts(#4) through the round hole in the upper corners of the tailgate, so that the threaded hole is over the slot above the round hole.



Tailgate Molle Panel

4. Install the Upper Mounting Bracket(#2) to the tailgate by loosely securing it with the supplied M6x20mm Button Head Bolts(#6) and M6 Flat Washers(#8). Do not fully tighten at this time.



5. **CAUTION: Be careful not to drop Tab Nut(#2) into the slot.**

Starting at the lower right slot, orient Tab Nut(#2) as shown, insert into the slot, and rotate 90 degrees clockwise so that the threads are in line with the slot. While still holding Tab Nut(#2), orient the Lower Mounting Bracket(#3) as shown and align the hole in the bracket with the threads of the Tab Nut(#2). Loosely secure with M6X20mm Button Head Bolt (#6). Repeat this process on the left side, except rotate Tab Nut(#2) counter-clockwise and loosely secure with M6X10mm Button Head Bolt (#7).



Tailgate Molle Panel

6. Place a supplied U Spring Nut(#4) over each hole located on the mounting brackets.



UPPER MOUNTING BRACKET



LOWER MOUNTING BRACKET



7. Test fit the Molle Panel(#1) on the mounting brackets making sure all the holes line up. Adjust the mounting brackets as needed. Once they are in the correct position, remove the Molle Panel(#1) then tighten the previous 4 Button Head Bolts(#6 and #7).

Install the Molle Panel(#1) and secure to the mounting brackets using the supplied Button Head Bolts(#6) and M6 Flat Washers(#8); fully tighten.

