


# TOM WOODS CUSTOM REAR 1350 DRIVE SHAFT

FOR JEEP WRANGLER JL WITH DANA 44 REAR AXLE

A MEASUREMENT IS REQUIRED IN ORDER TO BUILD THE DRIVE SHAFT. PLEASE MAKE SURE THE LENGTH IS TAKEN FROM THE VEHICLE WITH ALL THE WEIGHT DOWN ON THE WHEELS. DO NOT TAKE MEASUREMENT WITH VEHICLE ON A LIFT.

## Measure Length

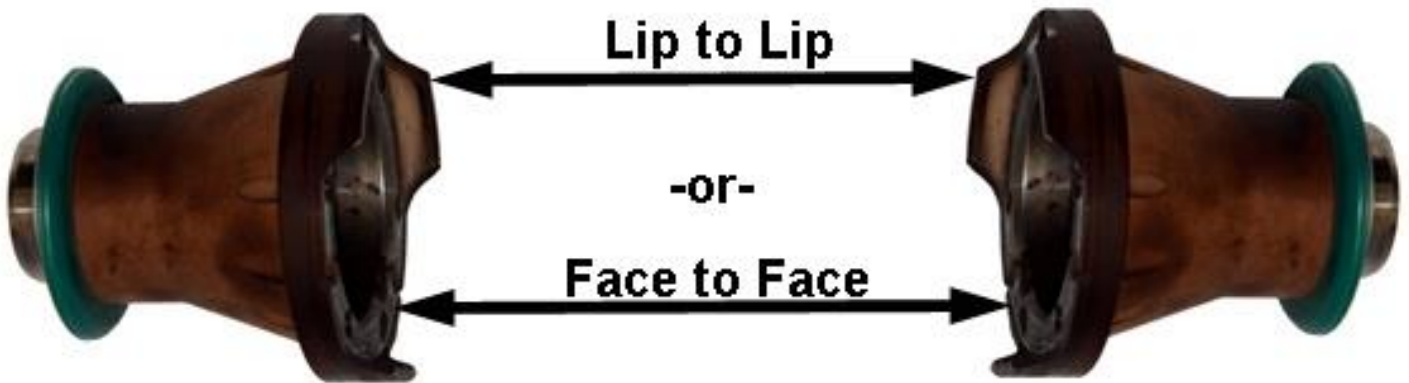

**PLEASE NOTE: DRIVE SHAFTS SHIPS PAINTED BLACK – NOT POLISHED AS SHOWN BELOW.**

