



**Jeep Wrangler Premium Replacement Soft Top with Tinted Windows
Installation Instructions**

**For: Jeep Wrangler JK Unlimited 4 Door
and Jeep Wrangler JK 2 Door
2010-2018**

Part Number: 14010535 (2 door)

Part Number 14010635 (4 door)

With factory original equipment hardware



Installation Tips

Before you begin installing this kit, read all the enclosed instructions

For a smooth fit:

For an easy installation, product should be left out in the sun or where the temperature is above 72 degrees for about 1-2 hours. This will make the material pliable and easier to install.

WEAR SEAT BELTS AT ALL TIME

Table of Contents

Installation Tips.....	Page 1
Tools Needed.....	Page 1
Part Included.....	Page 1
Removal of Top.....	Pages 2-4
Installation of Top.....	Page 4-10
Care and Maintenance.....	Page 10
Warranty.....	Page 10

Requires the following OE Hardware

- Bow Assembly Kit
- Replacement Hardware
- Door Surrounds
- Tailgate Bar
- Clips

Safety glasses should always be worn while installing this product.

Tools Needed

- Safety Glasses
- Phillips Screwdriver
- Masking tape
- Pliers
- T-15 Torx wrench

Parts Included

- Fabric Top: 1 ea.
- Right Quarter Window: 1 ea.
- Left Quarter Window: 1 ea.
- Rear Window: 1 ea.
- Elastic Garter: 2 ea.
- Header Foam, Drivers side: 2 ea.
- Header Foam, Pass. Side: 2 ea.



Removal of existing Soft Top



Step 1

Removal of rear quarter windows and rear windows

Remove the both quarter windows and the rear Window. Remove the metal Tailgate Bar from the bottom of the Rear Window and set it aside.



Step 2


Release windshield latches

Release the latch that secures the header to the windshield. Pull up on the lever and then down and out to release the hook from the slot in the windshield frame.

Step 3

Release rear corners

Release the rear corners. Pull downward gently and then out to release the plastic strip from the retainer on the vehicle.

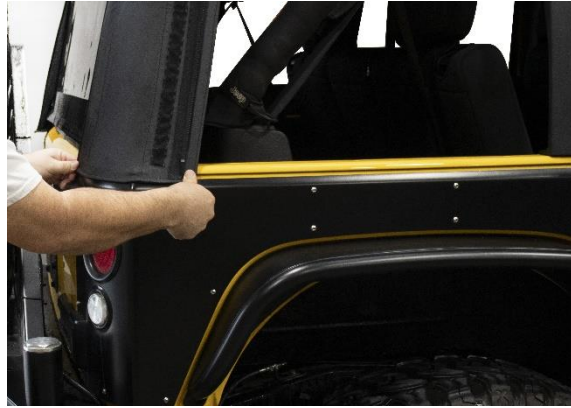

Step 4

Releasing all bows

Release rear bow

Use a phillips or cordless drill and remove the four (4) screws that the flap in the top rear bow.

Release #3 bow

Use a phillips or cordless drill and remove the four (4) screws that attach the flap in the top to the #3 bow

Release center bow

Use a phillips or cordless drill to remove the five (5) screws that attached the flap in the top center bow.



Step 5

Removal of header screws

Collapse the bow assembly towards the tailgate. With the bow assembly laying on the tailgate, remove the foam covering the screws. Use a T-15 Torx to remove the 2 screws that secure the fabric to the header. Repeat on both sides.



Step 6

Removal of top fabric

Raise the bow assembly and lock the header to the windshield. Drape the soft top fabric with backside facing up. Over the hood and windshield. Proceed to remove the twenty-seven (27) screws that hold the fabric to the upper and lower header. Set the screws aside as you will need them for the installation process. Slide the extrusion along the front edge and remove it from the lower channel.



Installation of your Premium KING4WD Soft Top

Step 1

Installation of new soft top to header

Raise the bow assembly and lock the header to the windshield. Drape the soft top fabric with backside facing up. Install the extrusion along the front edge of the top channel in the lower section of the header (having a second person would be very helpful here). Optional: Use masking tape to hold the extrusion if you do not have a helping hand.



Step 2

Installing top fabric

Close the upper header over the fabric and sandwich the fabric. Reinstall the four (4) corner screws. Proceed to install the remaining twenty-three (23) screws across the header.

Lower the bow assembly to the rear of the vehicle.



Step 3

Install corner screws

Slip the fabric pocket sewn into the top between the headers and position the cable anchor. Install the two (2) screws through the fabric and metal tab into the lower header on each side.

Step 4

Install fabric foam

Install the two (2) fabric foam provided pieces, one goes over the screwed in tab and the other goes on the leading edge of the front header. Do this on driver and passenger sides.



Step 5

Secure bow assembly

Drape the fabric over the cab. Slide the pivot assembly on the top along the track above the door until it latches into place



Step 6

Pull fabric over bows

Pull the fabric over the bow assembly.

Step 7

Secure cable spring

Lift the header to reduce side cable tension. Hook the cable spring to the bracket on the bow and use pliers to crimp the spring



Step 8

Secure header to windshield

Close the header latches to secure the front of the top to the windshield. Catch the hook in the slot in the windshield frame and then close the lever over it so that it lays flat against the windshield frame.



Step 9

Securing all bows

Secure #3 bow – Reinstall the four (4) screws that attach the flap in the top of the center bow

Attach top rear bow – Locate the flaps inside the top of the rear window opening. Use the four (4) screws that were removed in step 4 during the removal process.


Secure center bow – Reinstall the screws removed in step 5 during the removal process to secure the fabric to the center bow.



Step 10

Secure rear corners


Pull down the rear bow and work the plastic retainer channel to the rear corners of the vehicle metal channel.

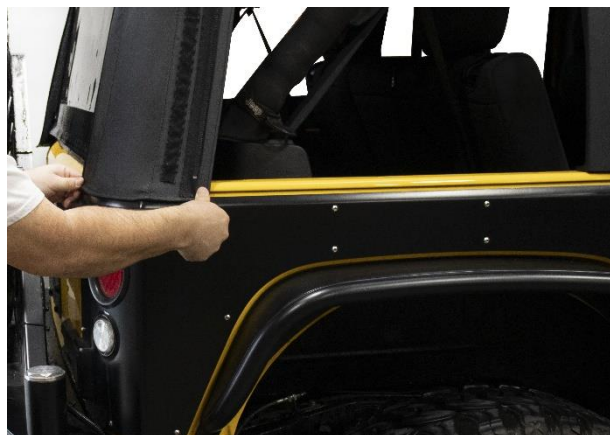

Step 11

Attach quarter window zippers

Start the zipper on the quarter window do not completely close it.

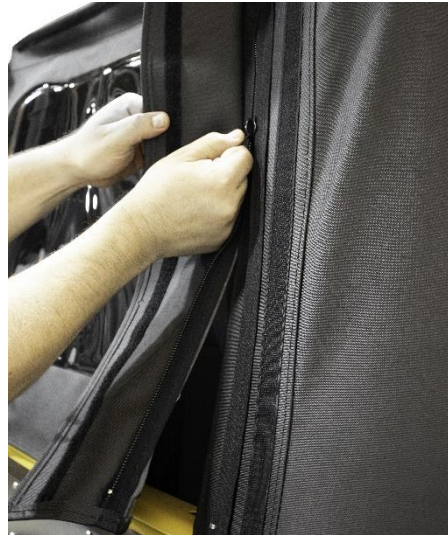

Step 12

Secure front quarter window section

Roll the plastic strip along the front of the quarter window into the channel in the door surround.

Step 13

Secure quarter window

Close the zipper and slip the plastic along the bottom of the side window into the channel on the vehicle. Tuck the side window into the top fabric.





Step 14

Install elastic garters

Snap the elastic garters to the snaps on the rear of the bow above the rear window.

Step 15

Install tailgate bar on rear window

Locate rear window. This can be done by either laying the rear window flat on a table or by holding the rear window and sliding the tailgate bar onto the rear window. The rear bar has a "C" channel shape, insert the bar into the tubed strip that is sewn the backside of the rear window. Be careful not to push too hard when sliding the rear bar into the tubed strip, you can cause damage rendering the rear window useless.



Step 16

Install tailgate bar on vehicle

Insert the Tailgate Bar into the mounts on each side of the tailgate opening with the weather stripping towards the outside of the vehicle



Step 17

Secure rear window zippers

To start the zipper, pull the zippers as far down the window to the catch the slider pin. Once zipper is caught guide the zipper slowly using one hand to hold the window and the other to guide the zipper along the rest of the window. Close the zipper completely and make sure the tailgate bar is centered and securely mounted.



WARNING

When operating the vehicle without the quarter windows, the rear window should be rolled up and secured with the elastic garters for proper ventilation

Care and Maintenance of your New Top

Your top is made of the best materials. To keep it looking new and for the maximum possible wear, it will need. Periodic cleaning and Maintenance

Washing your Soft Top: The fabric should be washed often. Using mild soap, warm water and a soft bristle brush. Rinse with clean water to remove all traces of soap.

Zippers: Keeping the zipper cleaned and lubricated with a silicone lubricant will help prevent damage and keep the zippers in smooth working condition. If zipper opens behind the slider, the slider may have been spread apart. The problem can usually be repaired by using an ordinary pair of pliers to bring the sides back into parallel. Return the slider to the end of the zipper in the normal open position. Squeeze lightly at first and test the zipper. If the zipper continues to remain open squeeze more firmly with the pliers and try the zipper again. Repeat this procedure until the zipper operates correctly.

Water: In the event of leaking through the seams, 3M Scotchgard® may be applied on the inside of the seams to stop the leaking. Rips in the fabric may be repaired with iron on repair patches. Iron the patches to the inside of the top, carefully following the Bondex instructions.

Snaps: Keep snaps cleaned and lubricated with silicone to help prevent snaps from sticking to the studs. If a snap does become stuck to stud, use a screwdriver and gently pry apart to prevent the permanent damage to the snap or the top fabric, follow with a light coat silicone.

LIMITED WARRANTY

We warrant our product to be free from defects in material and workmanship, for terms specified below, provided there has been normal use and proper maintenance. This warranty applies to the original purchaser only. All remedies under this warranty are limited to the repair or replacement of any item or items found by the factory to be defective within the time period specified.

If you have a warranty claim, first you must call our customer service department at the number listed below. You must retain proof of purchase and submit a copy with any items returned for warranty work. Upon completion of warranty work, if any, we will return the repaired or replaced item or items to you freight prepaid. Damage to our products caused by accidents, fire, vandalism, negligence, mis-installation, misuse, Acts of God, or by defective parts not manufactured by us, is not covered under this warranty.

THE WARRANTY TIME PERIOD IS AS FOLLOWS: ALL "GOODS" MANUFACTURED BY OUR COMPANY: FOUR YEARS FROM DATE OF PURCHASE. ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE CREATED HEREBY ARE LIMITED IN DURATION TO THE SAME DURATION AND SCOPE AS THE EXPRESS WRITTEN WARRANTY. OUR COMPANY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For further information, please contact: KING4WD for Customer Service 833.226.4863