



INSTALLATION INSTRUCTIONS

PART No.

FB25463


**2019+ Jeep® JT Gladiator
Rear Under-Seat Compressor Mount**



ARB (Pg. 1-3)



VIAIR (Pg. 4-6)

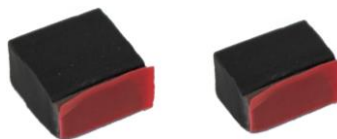

VIAIR (Pg. 4-6)



REQUIRED TOOLS (ARB)

Ratchet
T40 Torx Bit
10mm Socket
or Wrench

REQUIRED TOOLS (VIAIR)

Ratchet
T40 Torx Bit
10mm Socket
or Wrench
Two 8mm or
5/16\"/>

KIT CONTAINS

ARB & VIAIR Compressor Bracket
ARB Compressor Bracket
ARB Switch Mount
M6 12mm Washer
M6 11.8mm Split Lock Washer
M6 20mm Hex Head Screw
M6 40mm Hex Head Screw
M5 10mm Washer
M5 Nylock Locknut
M5 30mm Hex Head Screw
Adhesive-Backed 3/8\"/>

QTY

1
1
1
14
14
12
2
8
4
4
1
1



INSTALLATION INSTRUCTIONS

PART No.

FB25463


2019+ Jeep® JT Gladiator Rear Under-Seat Compressor Mount

ARB COMPRESSOR INSTALLATION:

1) PREPARING FOR YOUR INSTALL

Lift up your driver's side back seat. Remove any items you may have lying in the work area.

With a T40 torx bit and a ratchet, remove the two bolts located under your seat.

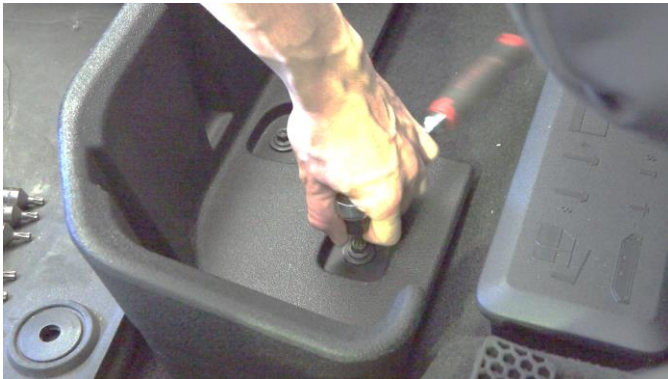


NOTE: You can put the two factory bolts in the bolt compartment located under your seat to store as we will not be reusing them.




2) INSTALL YOUR COMPRESSOR'S BRACKETS

Flip your air compressor onto its front face. Take your ARB Compressor Bracket with the ridges faced upward and line it up with the holes on the back of your air compressor.

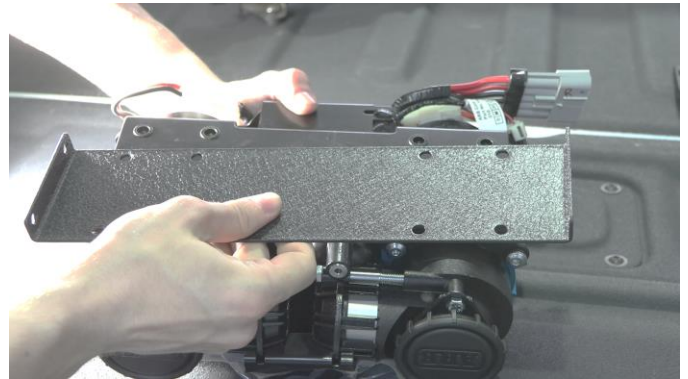

Using a 10mm socket or a wrench, screw in eight of the short M6 screws, lock washers, and washers.

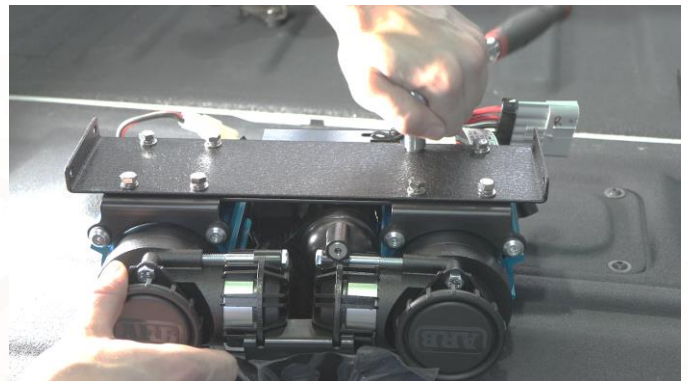

2019+ Jeep® JT Gladiator Rear Under-Seat Compressor Mount

Take your bracket and line it up with the two factory holes located under your seat.



With a T40 torx bit, install the two included long M6 screws.



NOTE: Make sure not to tighten the screws too much as it may damage your plastic panel.

3) **INSTALL THE AIR COMPRESSOR**

Slide your ARB air compressor onto the bracket located under your seat with the air filters facing the JT's tailgate. The bracket's ridges on your air compressor should be on the outside of the bracket.



Once you have the bracket holes aligned, screw in two of the included short M6 screws, lock washers, and washers with a 10mm socket or wrench on the side furthest away from you.

Once in place, take your ARB Switch Mount and hold it up to the bracket's side closest to you.



2019+ Jeep® JT Gladiator Rear Under-Seat Compressor Mount

With the bracket holes aligned, use the remaining short M6 screws, lock washers, and washers and screw them into place using a 10mm socket or wrench, ensuring a tight fit.

NOTE: Depending on the length of your ratchet and socket, these screws may require the use of a wrench



5) ENJOY YOUR NEW ARB AIR COMPRESSOR MOUNT!



4) INSTALL THE AIR COMPRESSOR'S SWITCH

Once you have everything secure and in place, run your wiring up through the hole on your ARB Switch Mount and connect it to the switch. If your compressor mount didn't include one, disregard this step.

The wiring can be run towards the rear seat and under the carpet to various locations.



2019+ Jeep® JT Gladiator Rear Under-Seat Compressor Mount

VIAIR COMPRESSOR INSTALLATION:

1) PREPARING FOR YOUR INSTALL

Lift up your driver's side back seat. Remove any items you may have lying in the work area.

With a T40 torx bit and a ratchet, remove the two bolts located under your seat.



NOTE: You can put the two factory bolts in the bolt compartment located under your seat to store as we will not be reusing them.




2) INSTALL YOUR COMPRESSORS BRACKET

Hold your compressor sideways against the back side of your mount. Our mount is designed to where your compressor can either face the left or the right depending on your preference.




We included two adhesive blocks to fit between your compressor and the mount. This is to help reduce any vibrations or noise that could be made while on the road.

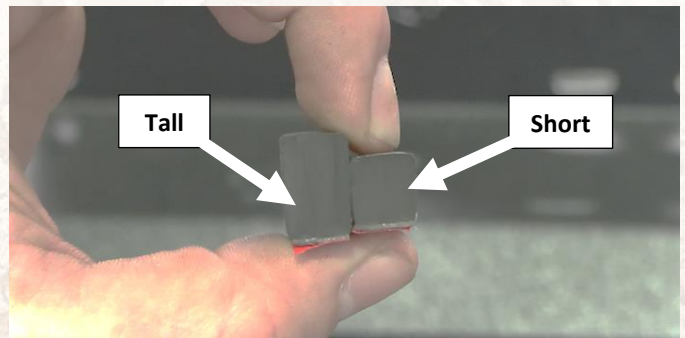

2019+ Jeep® JT Gladiator Rear Under-Seat Compressor Mount

The shorter rubber support will sit under the ridge located next to the compressor's piston assembly and the taller rubber support will sit on the opposite end.

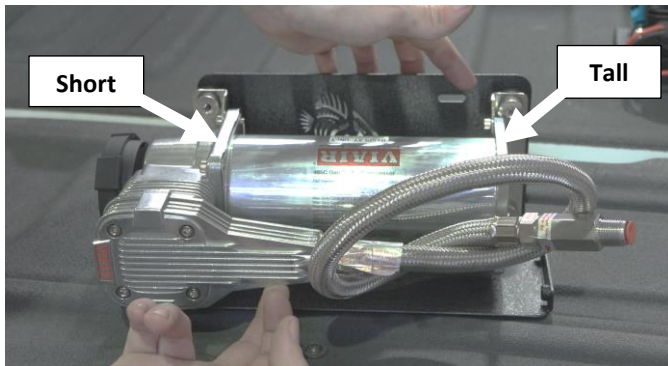


Line up your compressor mount with the compressor mounts holes.

With a piece of chalk, mark the location where the ridges sit on your bracket.



With your marks drawn, peel off the backing of your rubber support. Line up the outer end of your short rubber support with the marks you made, making sure to center it between the back and front of your bracket. Repeat on the opposite side with the taller rubber support, but place it an inch away from the front of your bracket.

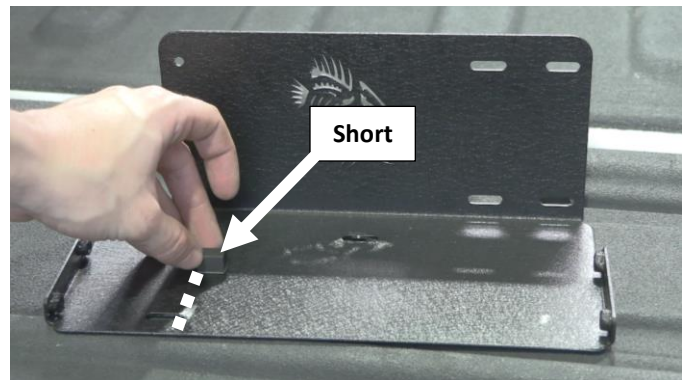

2019+ Jeep® JT Gladiator Rear Under-Seat Compressor Mount

3) INSTALL THE AIR COMPRESSOR

Insert the included four M5 screws into the back on the bracket facing inwards.



Take your bracket and line it up with the two factory holes located under your seat.



With a T40 torx bit, install the two included long M6 screws.



NOTE: Make sure not to tighten the screws too much as it may damage your plastic panel.

Slide your VIAIR air compressor over the screws on the side of your bracket.



Once you have your VIAIR compressor mounted into place, use an 8mm or 5/16" wrench to install the included M5 washers and nuts retaining your compressor mount. You will need two wrenches for this step.



With your air compressor secured to your mount, double check your rubber supports to make sure they stayed in place.

Run the wiring and air hose towards the back of the seat and under the carpet. You can run these to various locations from here

4) ENJOY YOUR NEW VIAIR AIR COMPRESSOR MOUNT