Installation Instructions

Tail Lamp 87-06 Jeep®Wrangler

Part No. 5308

Parts List: 2- Pre Wired Tail lamps 6- Butt connectors

Installation:

1) Remove Factory Lamps by unscrewing the (4) Philips screws on the lens. Inside the housing there are (3) 10mm bolts. Loosen and remove the housing from the vehicle, please the bolts aside for reuse later. Pull the housing away from the vehicle to expose the pigtail connection on the wire loom and disconnect the taillight.
2) Match the factory housing with the new lamp assembly. The drivers side housing has the clear license lamp on the bottom and the side reflector is on the left. Passenger only has the side reflector on the right.
3) Remove the (4) Allen Bolts holding the lens on the new tail lamp assembly and set the bolts and lenses aside.
4) Cut the harness on the factory lamp midway between the pigtail and the housing and crimp on the butt connectors supplied.

5) Use the wiring diagram below to match up the wires on the new lamp assembly and connect each wire as shown to the open end of the butt connector on the pigtail.
6) Plug the pigtail back into the factory harness and try the running lights, turn signals, stop lamp and backup light. Correct any wiring problems at this point.
7) Attach the housing to the vehicle using the (3) 10mm bolts previously removed. Attach each lens with the 4 Allen bolts previously removed.

1987-1990 Wiring chart 1991-2002

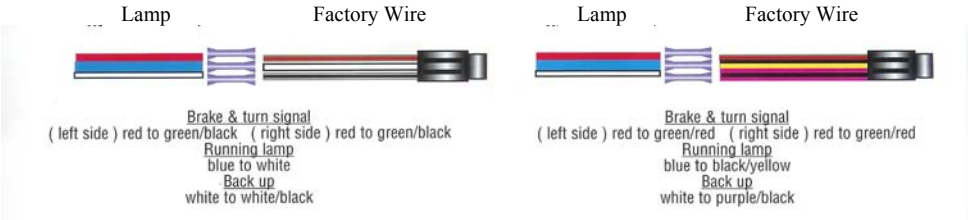

Rampage Products 9225 Stellar Ct Unit C, Corona, CA 92883
Phone: (951) 277-4949 Fax: (951) 277-2295
Web: www.Rampageproducts.net

Made in China