MOPAR PARTS

GENUINE ACCESSORIES

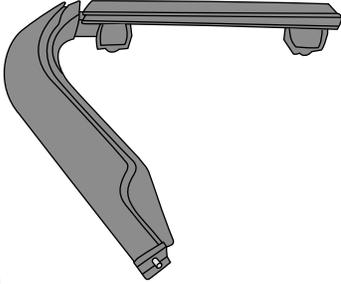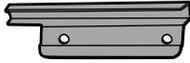| **GB**	*INSTALLATION INSTRUCTION* **Hardware Kit** Parts must not be fitted until registration of the vehicle has been obtained.
E	*INSTRUCCIONES DE MONTAJE* No se permite montar las piezas antes de registrar el vehiculo.
F	*NOTICE DE MONTAGE* Ne pas monter les pièces avant l'enregistrement du véhicule.
JP	

Subject to alteration without notice
Reservadas modificaciones lecnicas
Sous réserve de modifications techniques

xx-xxx   **82208115**   **51237**

© DAIMLERCHRYSLER

MOPAR
PARTS

Genuine Accessories

Door Surround - Driver's

A

Door Surround - Passenger's

B

Knob   **X4**

C

Tailgate Bar

D

Tailgate Mount - Driver's

E

Tailgate Mount - Passenger's

F

Screws   **X4**

G

1

2   1/8"

Silicone Sealant

SILICONE SEALANT

3

GENUINE ACCESSORIES

X2 A
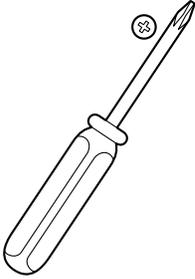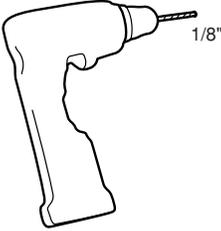
INSERT PIN INTO
HOLE IN BELT RAIL
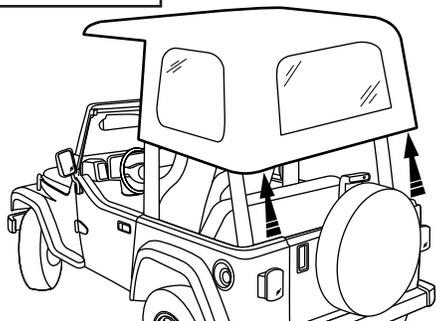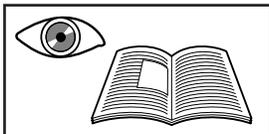
DRIVER'S SIDE

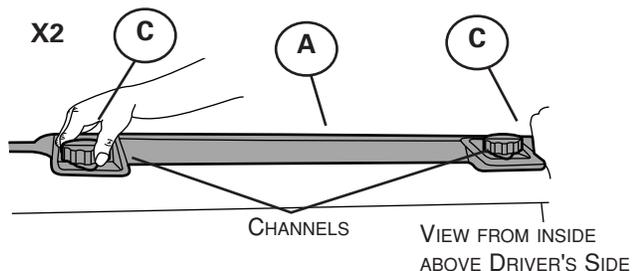**1** Remove the hard top. Refer to owner's manual for instructions.
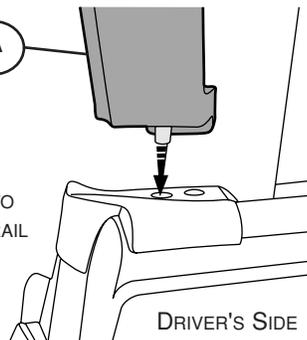
2 Locate the left and right Door Surrounds. Insert the pin in the bottom of the Door Surround into the hole in the belt rail behind the door.
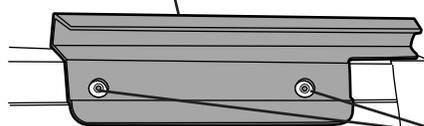
X2 C A C

CHANNELS

VIEW FROM INSIDE ABOVE DRIVER'S SIDE

3 Press the channels along the top of the Door Surround around the horizontal sport bar, above the door opening. Insert two knobs into the Door Surround and tighten them down.

X2 E

DRIVER'S SIDE
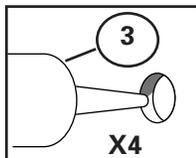
PLACE HOLES IN TAILGATE MOUNT OVER DIMPLES IN BODY

4 Locate the left and right Tailgate Retainer Mounts. Place the holes in the mounts over the dimples in the vehicle body.

E

X4
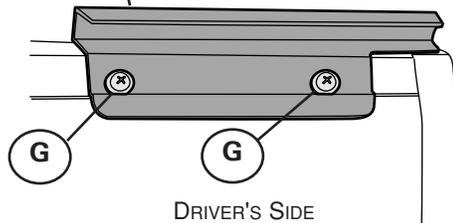
DRIVER'S SIDE

3

X4

SILICONE SEALANT

3

1/8"

2

5 Drill a 1/8" hole at the marked locations. Deburr the holes and seal the edges of the holes with Silicone Sealant.

X2 E

G G

DRIVER'S SIDE

6 Install the Tailgate Retainer Mounts with two #8 x 1/2" Pan Head Washer Screws for each mount.

1