



Rugged Ridge wheel spacer kits

**P/N: 15201.02 Wheel Spacer 87-06 Wrangler  
15201.03 Wheel Spacer 45-86 CJ  
15201.04 Wheel Adapter Kit 4.5" To  
5.5" Bolt Pattern**

### Kit Information

Wheel spacer kits add 1.25" of track width to either the front or rear axle assemblies. Each kit comes with (2) aluminum spacers, (5) grade 8 wheel studs pre-pressed in each spacer, and (10) lug nuts. This kit bolts on in the same manner as installing a road wheel.

Kit # 15201.02 is designed for 1987-2006 Jeep® vehicles with 5 x 4.5 bolt pattern.

Kit # 15201.03 is designed for 1945-1986 Jeep® CJ models with 5 x 5.5 bolt pattern

Kit # 15201.04 is designed to adapt 5 x 4.5 bolt patterns to 5 x 5.5 bolt patterns. It also spaces the wheels out 1.25" and is used for 1987-2006 Jeep® vehicles

### Installation Instructions

- (1) Remove tire using the proper procedures spelled out in the Jeep® service manual.
- (2) Remove drum and or rotor retainer clips if equipped.

**IT IS VERY IMPORTANT THAT THERE ARE NO CLIPS ATTACHED TO THE DRUM OR ROTOR BEFORE INSTALLING SPACERS.**

- (3) Using quality thread lock apply to OEM wheel stud and assemble spacer to drum/rotor.

**USE SUPPLIED LUG NUTS TO AXLE ASSEMBLY**


**MAKE SURE THAT OEM STUDS CLEAR SPACER AND THAT THE WHEEL SPACER FITS FLUSH AGAINST DRUM OR ROTOR.**

- (4) **Install supplied lug nuts to axle studs only.** Make sure that the tapered surface of the supplied lug nuts are oriented with the tapered surface of the wheel spacer. Tighten lug nuts in a criss-cross pattern. Set torque to 85-100 ft-lbs It will help to have another person holding the brakes when tightening.

- (5) Re-assemble tire to spacer using factory lug nuts and torque to factory specification.

**CHECK TORQUE ON SPACER AND WHEEL AFTER 45 MILES.**

**ALSO RE-TORQUE AFTER EVERY 2,000 MILES.**

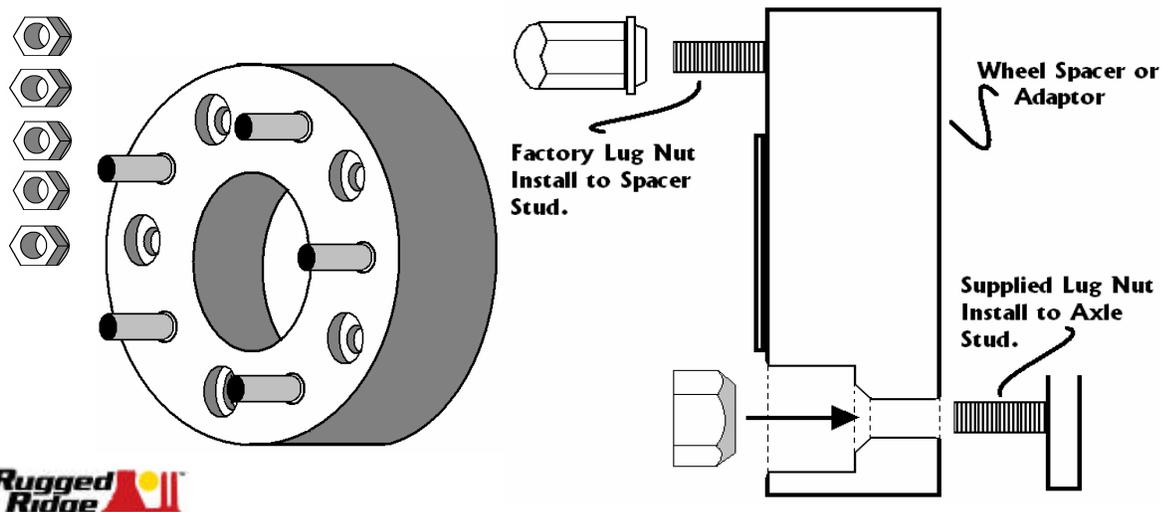



### **LIMITED 90 DAY WARRANTY**

Applies to Rugged Ridge by Omix-ada Inc. Products

Rugged Ridge Off Road (the Company) warrants to the original purchaser of this product that should the product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 90 DAYS from the date of original purchase, such defect(s) will be repaired or replaced or credited at the Company's sole option.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. Dated bill of sale), specification of defect(s) to the place of purchase or, with prior approval from the Company (Return Authorization Number is required), freight pre-paid to the Company address listed below.

This warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident or by acts of nature. THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN THE PERIOD OF 90 DAYS FROM DATE OF ORIGINAL PURCHASE.

IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some States do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Omix-ada Inc.  
460 Horizon Dr. Suite 400  
Suwanee, Georgia 30024

