Fat Boy 1000 in the OUT position.

Nerf bars for JK Wranglers

Part numbers that begin with 270,271,560,561

Protect the rockers on your 2007 Jeep Wrangler with these super-strong guards than mount directly to the frame. Installation is easy since no drilling is required and they install using existing holes.
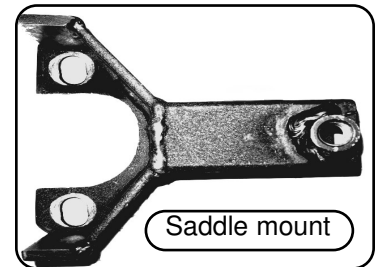

Extreme double tube nerf bar

For assistance please call 800-777-0878

Hardware list:		Parts list:
4	1/2" x 1/2" set screw	Nerf bar (L&R)
2	1/2" x 1 1/2" hex head bolt	Saddle mount
4	1/2" lock washer	(2 short , 2 long)
2	1/2" X 4" hex head bolt	Flat mount (2)
2	1/2" nut strap x 3" long	Reinforcement plate (4)
2	1/2" Nylock nut	
4	5/16" x 2" hex head bolt	
8	5/16" flat washer	
4	5/16" nylock nut	

Saddle mount

Note: Do not tighten hardware until instructed to do so.


photo 1

Step 1. Remove the small OEM body mounting bolts that are next to the two rear body mounts, use these to loosely attach the saddle brackets. Short saddle bracket goes in the middle, long saddle mount goes to the rear.
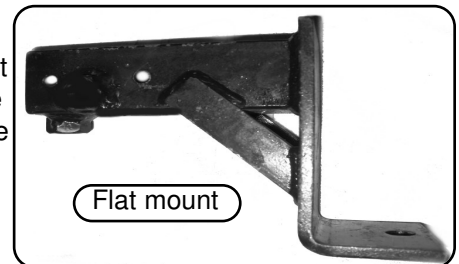
Flat mount

Step 2. Loosely attach the flat mounting bracket near the front of the frame. The bottom mounting hole will be secured by placing a nut strap into the frame and securing with 1/2" x 1 1/2" bolt, and lock washer . **The nutstrip and bottom mounting hardware must be installed before the hardware on the side of the frame.** There is an existing hole on the side of the frame. You will use the 1/2" x 4" hex head bolt, flat washer, reinforcement plate and a nylock nut. Two reinforcement plates go on the inside of the frame on each side.

photo 2

photo 3
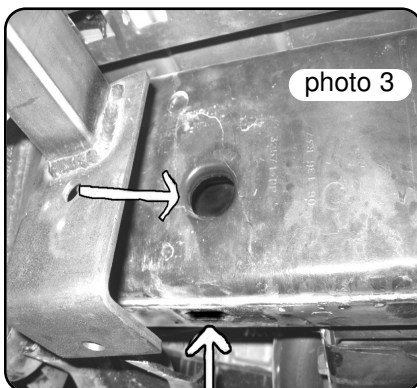
Step 3. Slide nerf bar into mounting brackets and secure with 5/16" bolt, flat washer and nylock nut. Then install set screws into nuts on the mounting bracket.

Step 4. **Once everything is in place, tighten all mounting hardware.**

Step 5. After 300 miles or first offroad trip , re-tighten all mounting hardware and from then on periodically re-tighten hardware.

The single tube nerf bar is not intended to be a telescoping nerf bar. It is intended to be tucked closely to the body panel.

Due to periodic manufacturing changes , your parts may look a little different the the photos but that will NOT effect the way they install.